

Piston Repair Kits

3A3697B Endura-Flo[™] 3D150, 3D350, 4D150, and 4D350 Diaphragm Pumps

ΕN



Important Safety Instructions Read all warnings and instructions in the Endura-Flo[™]Diaphragm Pump Instructions/Parts manual. Save all instructions.

Kit 17W760 for 2D150 Dumps

Kit 17W769, for 3D150 Pumps Kit 17W770, for 3D350 Pumps Kit 17H308, for 4D150 Pumps Kit 17H310, for 4D350 Pumps	 Ref. Description 20 PISTON ASSEMBLY 23 BEARING, shaft 26 U-CUP, shaft seal, 3D pumps U-CUP, shaft seal, 4D pumps 28 O-RING, piston 29 O-RING, air cover 52 L-CUP shaft seal, 3D pumps TOOL, bearing install, not shown 	Qty. 1 4 2 4 1 2 2 1
A	Apply lubrica Apply lubrica L-cup and u- seal lips mus of center of h Torque to 100 (11-14 N•m). A Torque in criss to: 28-33 ft-lb (38 See torque in manual. 26 or 52 A A A A A A A A A A A A A A A	cup shaft t face out ousings.)-120 in-lb scross pattern 3-45 N•m).

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA Copyright 2016, Graco Inc. All Graco manufacturing locations are registered to ISO 9001. 3A3697, Revision B, March 2018

 $\triangle 28$

3