

CSP EZ Greaser

**THREE AXLE WITH INNER AND OUTER S-CAMS
12 - 18 POINT #25T390**

3A8037B

EN

For use as a centralized lubrication system on heavy trucks. For professional use only.



Important Safety Instructions


Read all warnings and instructions in this manual and in the pump manual before using the equipment. Save all instructions.

WARNING



PERSONAL PROTECTIVE EQUIPMENT

Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns.

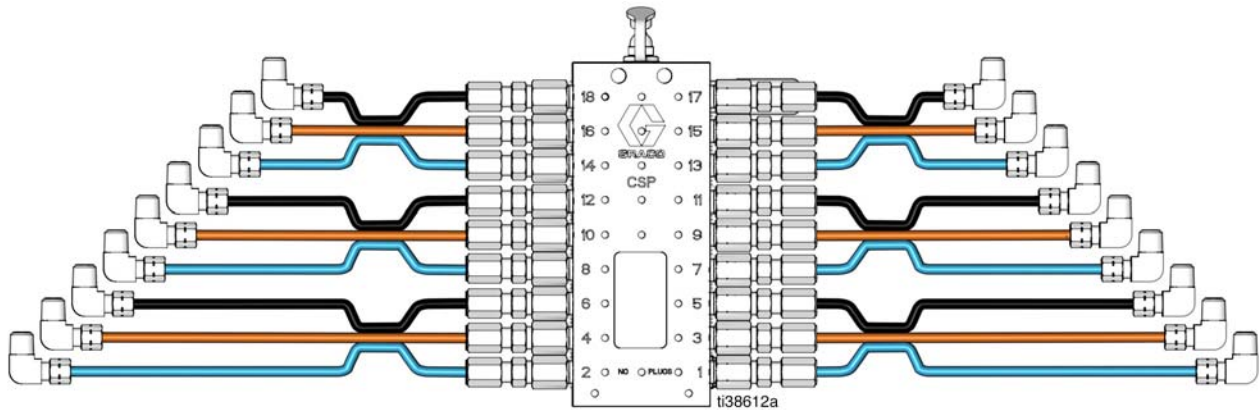

Typical Layout

Outlet No.	Description	Tube Color	Bundle & Marking	Endpoint Fitting
1	S-Cam	Blue	3-Tube Bundle (P/N 563783)	Elbow (P/N 556638)
3	Slack Adjuster	Orange		Elbow (P/N 556638)
5	S-Cam	Black		Elbow (P/N 556638)
7	S-Cam	Blue	3-Tube Bundle (P/N 563783)	Elbow (P/N 556638)
9	Slack Adjuster	Orange		Elbow (P/N 556638)
11	S-Cam	Black		Elbow (P/N 556638)
13	S-Cam	Blue	3-Tube Bundle (P/N 563783)	Elbow (P/N 556638)
15	Slack Adjuster	Orange		Elbow (P/N 556638)
17	S-Cam	Black		Elbow (P/N 556638)

Outlet No.	Description	Tube Color	Bundle & Marking	Endpoint Fitting
2	S-Cam	Blue	3-Tube Bundle (P/N 563783)	Elbow (P/N 556638)
4	Slack Adjuster	Orange		Elbow (P/N 556638)
6	S-Cam	Black		Elbow (P/N 556638)
8	S-Cam	Blue	3-Tube Bundle (P/N 563783)	Elbow (P/N 556638)
10	Slack Adjuster	Orange		Elbow (P/N 556638)
12	S-Cam	Black		Elbow (P/N 556638)
14	S-Cam	Blue	3-Tube Bundle (P/N 563783)	Elbow (P/N 556638)
16	Slack Adjuster	Orange		Elbow (P/N 556638)
18	S-Cam	Black		Elbow (P/N 556638)

For drum brakes with enclosed S-cams, the tubes and fittings attached to outlets 5, 6, 11, 12, 17, and 18 may be removed and replaced with doubling plugs. This causes the grease from those outlets to combine with the outlets below them and feed into the slack adjusters instead.

Outlet Fitting Removal

Use a 7/16 in. wrench (or an adjustable wrench) to remove the tubing nut from where the tube is attached to the fitting(s) and detach the tube. Use a 1/2 in. (13 mm) wrench to remove the outlet fitting from the CSP valve, making sure that the clamping ring (cone-shaped metal gasket) is removed with the fitting.

Doubling Plug Installation

NOTICE

Never install a doubling plug into outlet 1 or outlet 2. Plugging one or both of these outlets will cause the valve to stall, and it will not function again until the plugs are removed from these outlets.

Use a 3/16 in (5 mm) hex key or Allen wrench to install the doubling plug by tightening the plug until snug, then torque the plug to 10- 12 ft-lb (14 - 16 N•m).

California Proposition 65

CALIFORNIA RESIDENTS

 **WARNING:** Cancer and reproductive harm – www.P65warnings.ca.gov.

Graco Information

For the latest information about Graco products, visit www.graco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.

Phone: 612-623-6928 or **Toll Free:** 1-800-533-9655, **Fax:** 612-378-3590

All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 3A8037

Graco Headquarters: Minneapolis

International Offices: Belgium, China, Japan, Korea

GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA
Copyright 2020, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.

www.graco.com
Revision B, November 2020