Circulating Fluid Temperature Controller Water-cooled Thermo-chiller

HRW Series



SEMI Standard S2-0703, S8-1103, F47-0200

Refrigerant-free and energy saving type using no compressor. Ideal for ordinary temperature and high temperature processes.

- OType of circulating fluid: Fluorinated fluids/Ethylene glycol aqueous solution/Tap water, Deionized water
- Temperature range setting: 20 to 90°c
- ©Cooling capacity: $\frac{2 \text{ kW}}{8 \text{ kW}} = \frac{15 \text{ kW}}{30 \text{ kW}}$

More effective energy-saving through use of an Inverter pump



Inverter type Power consumption **0.5** kWh/h **Facility water 1.2** L/min

SMC

HRS090 HRS100/150

HRSH090

HRSH

HRZ

HRZD

HECR

HEC

HEB

 
Energy Saving and Refrigerant-free

Energy saving and refrigerant-free (Ordinary temperature up to 90°C)

The water-cooled thermo-chiller which does not use a compressor (refrigerant-free) is suitable for processes operating from ordinary temperature to 90°C. The energy-savings shown below can be achieved in comparison with existing models (depending on the conditions).

Power consumption: Max. 59% reduction
 (SMC comparison)


The power consumption can be reduced by direct heat exchange between the circulating fluid and facility water with no refrigerating circuit.



- Reduced running cost
- Contribution to the environmental preservation

• Circulating fluid: Max. 13% reduction (SMC comparison)

 Enhanced temperature control technology and the unique pump/tank construction achieved the reduced circulating fluid required for operation.




- Reduced initial cost
- Contribution to the environmental preservation

Pump Inverter Type

More effective energy-saving is achieved through use of an inverter pump.

 
Power consumption: Max. 89% reduction (SMC comparison)



Facility water circuit Refrigeration circuit Circulating fluid circuit Heat exchanger Compressor Facility water circuit Circulating fluid circuit Heat exchanger

• Facility water: Max. 89% reduction (SMC comparison)

 The HRW series can achieve reduction in power consumption as it does not have a compressor, and reduction in the amount of facility water used because heat is exchanged directly with the circulating fluid.



- Reduced facilities investment
- Space saved facility water equipment
- Reduced running cost

• Facility water: Max. 89% reduction

(SMC comparison)

Existing model

HRW008-HS

1.2 L/min

Operating conditions: 60°C, 0 kW with 50% load, 8 kW with 50% load, 9 kW with 50% load, 9

Space Saving

Installation area: Max. 45% reduction

(SMC comparison)

(Forced exhaust from rear side)


By emitting the heat from the back, ventilation slits on the side are unnecessary offering reduced installation space.

Thermo-chiller with exhaust from the side:

Body space: W400 mm x D845 mm Ventilation space: 100 mm


HRW008-H: Body space: W380 mm x D665 mm

Ventilation space: 0

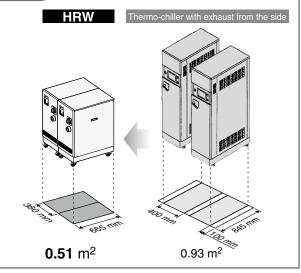


lacktriangle Temperature stability: $\pm 0.3^{\circ}$ C

Enhanced temperature control technology achieved ±0.3°C temperature stabilities when a load is stable.

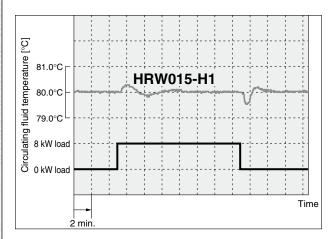


Cooling capacity: Max. 30 kW

Up to 30 kW cooling capacity achieved.

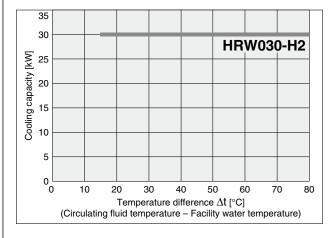

Easy maintenance

 ■ Checking the electrical component parts accessible from the front side only



- Possible to replace the maintenance parts (such as a pump) without removing the pipings and discharging the circulating fluid.
- Various alarm displays (Refer to page 276.)







Easy Maintenance


Circulating fluid automatic recovery function (Refer to "Options" on page 278.)

Circulating fluid inside a thermo-chiller tank can be recovered automatically. (Recovery volume: 12 L)


- Reduced maintenance time
- Faster operation
- Reduced circulating liquid loss by evaporation or spill

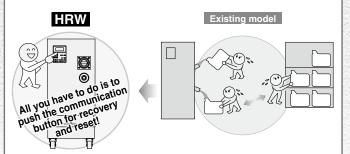

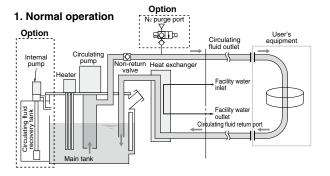

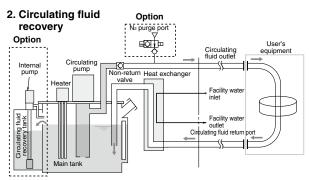

3. Fluid returns to the main tank from the circulating fluid recovery tank.

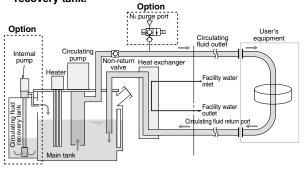

Circulating fluid electric resistivity control function

(Refer to "Options" on page 277.) (DI control kit)

HRS090

HRS100/150 HRSH090

HRSH

HECR

HEC


HEB

Electric Resistivity Control

DI control kit

(Refer to "Options" on page 277.)

Electric resistivity of circulating fluid (ethylene glycol aqueous solution and deionized water) can be controlled.

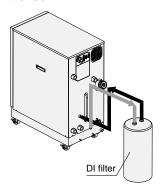

Communications

- Contact input/output signal
- Serial RS-485 communication
- Analog communication (Refer to "Options" on page 277.)
- DeviceNet communication (Refer to "Options" on page 277.)

Device Net*

■ Trademark

DeviceNet™ is a trademark of ODVA.


Fluid contact parts adopt the materials compatible for various circulating fluids.

(Stainless steel, EPDM, etc.)

- Fluorinated fluids: Flourinert[™] FC-40 GALDEN[®] HT200
- 60% ethylene glycol aqueous solution
- Deionized water/Tap water

Regarding the fluid other than the above, please contact SMC. Flourinert $^{\text{TM}}$ is a trademark of 3M. GALDEN $^{\text{®}}$ is a registered trademark of Solvay Solexis, Inc.

Construction and Principles

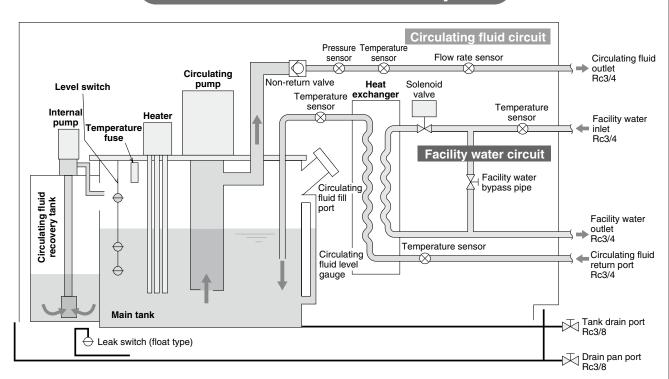

Circulating fluid circuit

With the **circulating pump**, circulating fluid will be discharged to the user's equipment side. After the circulating fluid will heat or cool the user's equipment side, it will be returned to the **main tank** via the **heat exchanger**.

 
When the automatic circulating fluid recovery function, which recovers the circulating fluid from the user's equipment, is selected (refer to page 258), a **sub-tank** for recovery is installed. The **internal pump** is used to transfer a circulating fluid from the **sub-tank** to the **main tank**.

Facility water circuit

When the circulating fluid temperature rises higher than the set temperature, open the **solenoid valve** to introduce facility water to the **heat exchanger**.

When the circulating fluid temperature falls back below the set temperature, close the **solenoid valve** to shut off facility water to the **heat exchanger**.






- Etching equipment
- Coating equipment
- Spatter equipment
- Dicing equipment
- Cleaning equipment Tester, etc.


Food



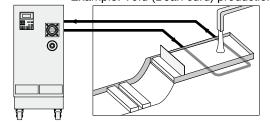

- Bottle-cleaning
- machine
- Water temperature control for forming tofu by mixing the boiled soybean milk and bittern
- Tofu (Bean curd) production equipment
- Noodle-making machine, etc.


Machine tool

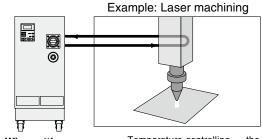

- Wire cutting
- Grinder

- laser generating tube enables the laser wave length to be Spot welding optimised, improving the accu-Plasma welding racy of the machined cross sec-Laser machining, etc. tional area.


Molding

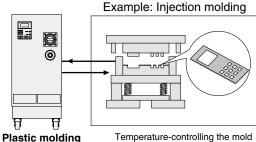

results in improved product quality.


- Plastic molding
- Rubber molding
- Wire cable coating machine
- Injection molding, etc.

Medical

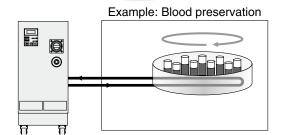

- X-ray instrument
- MRI
- Blood preservation equipment

Analysis

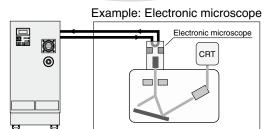


- Electron microscope
- X-ray analytical instrument
- Gas chromatography
- Sugar level analytical instrument, etc.

Prevents the distortion caused by the heat generated by the electronic gun in an electronic microscope.

Printing

Example: Printing temperature control

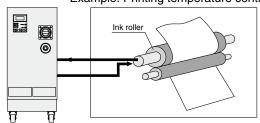

- Offset printing machine
- **Automatic developing** machine
- UV equipment, etc.

Temperature-controlling the ink roller enables to control the evaporation amount and viscosity of an ink and optimise the tint of colors.

CONTENTS

HRW Series



Water-cooled Thermo-chiller HRW Series

Mod	el	Sel	ec	tio	n
Guide	e to	Мо	del	Sel	e

Guide to Model Selection	Page 263	5
Required Cooling Capacity Calculation	Page 264	ļ
Precautions on Model Selection ······	Page 265	5
Circulating Fluid Typical Physical Property Values ···	Page 266	ò

Fluorinated Fluid Type

How to Order/Specifications	Page 267
Cooling Capacity/Heating Capacity/Pump Capacity ···	Page 268

Ethylene Glycol Type

How to Order/Specifications	Page	269
Cooling Capacity/Heating Capacity/Pump Capacity ···	Page	270

Tap/Deionized Water Type

How to Order/Specifications ······	Page	271
Cooling Capacity/Heating Capacity/Pump Capacity ···	Page	272

Common Specifications

Dimensions	Page 273
Communication Functions ······	Page 274
· Contact Input/Output·····	Page 274
· Serial RS-485 ·····	Page 275
· Connector Location·····	Page 275
Operation Display Panel	Page 276
Alarm ·····	Page 276

Options

Analog Communication	Page 27
DeviceNet Communication ······	Page 277
NPT Fitting·····	Page 277
DI Control Kit ·····	Page 277
Circulating Fluid Automatic Recovery	Page 278

Optional Accessories

U Bypass Piping Set	Page 27	٤
② Anti-quake Bracket ······	Page 27	ć
③ 4-Port Manifold ······	Page 28	C
4) DI Filter ·····	Page 28	C
⑤ Insulating Material for DI Filter	Page 28	C
6 Contaminant Filter ·····	Page 28	1
$ \begin{tabular}{ll} \hline \end{tabular} \begin{tabular}{ll} \hline $	Page 28	1
8 Concentration Meter	Page 28	1

Specific Product Precautions Page 282

HRW Series Model Selection

Guide to Model Selection

1. How much is the temperature in degrees centigrade for the circulating fluid?

 
Temperature range which can be set with the thermo-chiller

H: 20°C to 90°C

Example) User requirement: 50°C

2. What kind of the circulating fluids will be used?

Relationship between circulating fluid (which can be used with the thermo-chiller) and temperature



Example) User requirement: Tap water

3. How much is the temperature in degrees centigrade for the facility water?

Temperature range which can be set with the thermo-chiller

10°C to 35°C

Example) Facility water temperature of user's equipment: 15°C


Temperature difference between the circulating fluid and facility water is: 50 - 15 = 35°C.

4. What is the kW for the required cooling capacity?

Example) User requirement: 20 kW

Plot the point where the temperature difference between the circulating fluid and facility water (35°C) intersects the cooling capacity (20 kW) in the cooling capacity graph.

[Cooling Capacity Graph] Circulating Fluid: Tap Water/Deionized Water

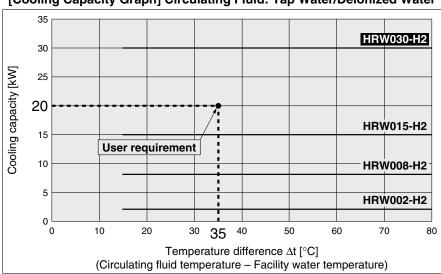

The point plotted in the graph is the requirement from the user. Select the thermo-chiller models exceeding this point. In this case, select the **HRW030-H2**.

GALDEN® is a registered trademark, belonging to the Solvay Group or its corresponding owner. Fluorinert™ is a trademark of 3M.



Required Cooling Capacity Calculation

Example 1: When the heat generation amount in the user's equipment is known.

Heat generation amount Q: 3.5 kW

Cooling capacity = Considering a safety factor of 20%, 3.5 x 1.2 = 4.2 kW

Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount Q : Unknown

Circulating fluid temperature difference ΔT (= T2 - T1): 6.0°C (6.0 K) Circulating fluid outlet temperature T1 : 20°C (293.15 K) Circulating fluid return temperature T2 : 26°C (299.15 K) Circulating fluid flow rate L : 20 L/min

Circulating fluid : Fluorinated fluid

Density γ : 1.80 x 10³ kg/m³

Specific heat **C**: 0.96 x 10³ J/(kg·K)


(at 20°C)

* Refer to page 266 for the typical physical property values by circulating fluid.

$$Q = \frac{\Delta T \times L \times \gamma \times C}{60 \times 1000}$$
$$= \frac{6.0 \times 20 \times 1.80 \times 10^{3} \times 0.96 \times 10^{3}}{60 \times 1000}$$

Cooling capacity = Considering a safety factor of 20%, 3.5 x 1.2 = 4.2 kW

Thermo-chiller

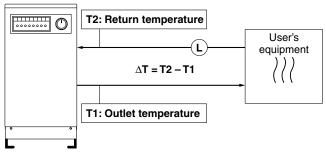

Example of conventional units (Reference)

Unknown 6.0°C 20°C

26°C

1.2 m³/h Fluorinated fluid

Density γ : 1.80 x 10³ kg/m³ Specific heat **C**: 0.23 kcal/kg·°C

(at 20°C)

 Refer to page 266 for the typical physical property values by circulating fluid.

$$Q = \frac{\Delta T \times L \times \gamma \times C}{860}$$

$$=\frac{6.0 \times 1.2 \times 1.80 \times 10^3 \times 0.23}{860}$$

= 3.5 kW

Cooling capacity = Considering a safety factor of 20%,

3.5 x 1.2 = 4.2 kW

Required Cooling Capacity Calculation

Example 3. When there is no heat generation, and when cooling the object below a certain temperature and period of time.

Cooled substance total volume V: 60 L
Cooling time h: 15 min

Cooling temperature difference $\Delta T\colon 20^{\circ}C$ (20 K) (70°C $-50^{\circ}C\to 20^{\circ}C)$

Facility water temperature : 20°C (293.15 K)
Circulating fluid : Fluorinated fluid

Density γ : 1.74 x 10³ kg/m³ Specific heat **C**: 1.05 x 10³ J/(kg·K)

(at 50°C)

 Refer to page 266 for the typical physical property values by circulating fluid.


$$Q = \frac{\Delta T \times V \times \gamma \times C}{h \times 60 \times 1000}$$

$$\frac{20 \times 60 \times 1.74 \times 10^{3} \times 1.05 \times 10^{3}}{15 \times 60 \times 1000} = 2436 \text{ W} = 2.4 \text{ kW}$$

Cooling capacity = Considering a safety factor of 20%,

(In this case, selected thermo-chiller model will be the HRW008-H.)

Thermo-chiller

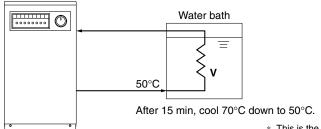

Example of conventional units (Reference)

0.06 m³ 0.25 h 20°C 20°C

Fluorinated fluid

Density γ: 1.74 x 10³ kg/m³ Specific heat **C**: 0.25 kcal/kg·°C (at 50°C)

 Refer to page 266 for the typical physical property values by circulating fluid.

$$Q = \frac{\Delta T \times V \times Y \times C}{h \times 860}$$

$$= \frac{20 \times 0.06 \times 1.74 \times 10^{3} \times 0.25}{0.25 \times 860}$$

$$= 2.4 \text{ kW}$$

Cooling capacity = Considering a safety factor of 20%,

2.4 x 1.2 = 2.9 kW (When the circulating fluid temperature is 50°C.)

(In this case, selected thermo-chiller model will be the HRW008-H.)

* This is the calculated value by changing the fluid temperature only. Thus, it varies substantially depending on the water bath or piping material or shape.

Precautions on Model Selection

1. Temperature difference between the circulating fluid and facility water

The HRW series exchanges heat between the circulating fluid and facility water directly, so it may not be possible to lower the circulating fluid temperature to the set temperature if the facility water temperature is too high. Check that the facility water temperature can be maintained for the circulating fluid temperature referring to the cooling capacity graph of each model before using.

2. Heating capacity

When setting the circulating fluid temperature at a higher temperature than the room temperature, the circulating fluid temperature will be heated with the thermo-chiller. Heating capacity varies depending on the circulating fluid temperature. Also, the heating capacity varies depending on the circulating fluid temperature. Consider the heat radiation amount or thermal capacity of the user's equipment. Check beforehand if the required heating capacity is provided, based on the heating capacity graph for the respective model.

3. Pump capacity

<Circulating fluid flow rate>

Pump capacity varies depending on the model selected from the HRW series. Also, circulating fluid flow varies depending on the circulating fluid discharge pressure. Consider the installation height difference between our thermo-chiller and a user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow rate is achieved, using the pump capacity curves for each respective model.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves for the respective model. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

Circulating Fluid Typical Physical Property Values

* Shown below are reference values. Please contact circulating fluid supplier for details.

Fluorinated Fluids

Physical property	Density γ	Specific heat C		
Temperature value	[kg/m³] [g/L]	[J/(kg·K)]	([kcal/kg⋅°C])	
−10°C	1.87 x 10 ³	0.87 x 10 ³	0.21	
20°C	1.80 x 10 ³	0.96 x 10 ³	0.23	
50°C	1.74 x 10 ³	1.05 x 10 ³	0.25	
80°C	1.67 x 10 ³	1.14 x 10 ³	0.27	

60% Ethylene Glycol Aqueous Solution

Physical property			c heat C
Temperature value	[kg/m³] [g/L]	[J/(kg·K)]	([kcal/kg⋅°C])
−10°C	1.10 x 10 ³	3.02 x 10 ³	0.72
20°C	1.08 x 10 ³	3.15 x 10 ³	0.75
50°C	1.06 x 10 ³	3.27 x 10 ³	0.78
80°C	1.04 x 10 ³	3.40 x 10 ³	0.81

Water

Density γ : 1 x 10³ [kg/m³] [g/L] Specific heat C: 4.2 x 10³ [J/(kg·K)] (1.0 [kcal/kg·°C])


HECR



Thermo-chiller Fluorinated Fluid Type **HRW** Series



How to Order

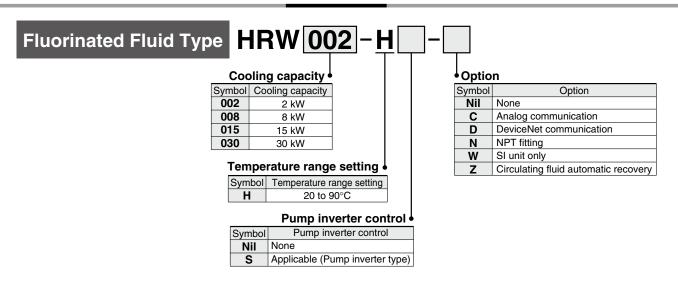

Specifications (For details, please refer to our "Product Specifications" information.)

		Model	HRW002-H HRW002-HS	HRW008-H HRW008-HS	HRW015-H HRW015-HS	HRW030-H HRW030-HS	
Cool	ing me	ethod		Water-	cooled		
Amb	ient te	mperature/humidity*1			, Humidity: 30 to 70%RH		
	Circu	lating fluid*2		Fluorinert [™] FC-40.	/GALDEN® HT200		
	Temp	perature range setting*1 °C		20 t	o 90		
_	Coolin	g capacity (50/60 Hz common) kW	2	8	15	29	
system	Su	Circulating fluid temperature °C		Facility water to	emperature +15		
) ys	ditions	Facility water temperature °C		10 t	o 35		
b	ह	Circulating fluid rated flow L/min	4	30	40	40	
Ē	ರ	Facility water required flow rate L/min	10	20	25	40	
Circulating fluid		erature stability*3 °C		±0			
atiı	Pump capacity (50/60 Hz)*4 MPa		0.40/0.60 (at 4 L/min)	0.45/0.65 (at 30 L/min)	0.40/0.60 (at 40 L/min)	0.40/0.60 (at 40 L/min)	
l i	Circulating fluid flow range*5 L/min		3 to 16		9 to 50		
ij	Tank capacity*6 L		Approx. 13 Approx. 14			ox. 14	
•	Circulating fluid recovery tank volume*7 L		12				
	Port size		Rc3/4				
		contact material	Copper brazing (Heat exchanger), Stainless steel, EPDM, Silicone, PPS, Fluororesin				
ter		erature range °C			o 35		
Facility water system		ired flow rate*8 L/min	10	20	25	40	
ity /ste		pressure range MPa	0.3 to 0.7				
acil sy	Port	·· ····		***	3/4		
ш		contact material	Copper brazing	(Heat exchanger), Stainless		nze, Brass, NBR	
اع تو		er supply			to 208 VAC ±10%		
lectrica system		operating current A			6		
Electrical system		cer capacity A			0		
		munications	Serial	RS-485 (D-sub 9 pin) and C		25 pin)	
	ension	*		W380 x D6			
	jht* ¹⁰	kg	Approx. 90 Approx. 100				
	•	ndards	UL, CE marki	UL, CE marking, SEMI (S2-0703, S8-1103, F47-0200), SEMATECH (S2-93, S8-95)			

^{*1} It should have no condensation.



^{*2} GALDEN® is a registered trademark, belonging to the Solvay Group or its corresponding owner. Fluorinert™ is a trademark of 3M. Regarding the fluid other than the above, please contact SMC.

*3 Outlet temperature when the circulating fluid and facility water are rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment, power supply, and facility water are within specification range and stable. Value obtained 10 minutes after the external load is stabilized. It may be out of ±0.3°C in some other


operating conditions.

The capacity at the circulating fluid outlet when the circulating fluid temperature is 20°C. Pump capacity at 60 Hz indicates the maximum capacity of the HRW ——HS *4 The capacity at the circulating fluid outlet when the circulating fluid temperature is 25 or 1 ample outlets, and inverter type).
*5 Applicable to the HRW□□□-HS (pump inverter type) only.
*6 Minimum volume required for operating only the thermo-chiller. (Circulating fluid temperature: 20°C, including the thermo-chiller's internal pipings or heat exchanger).
*7 The automatic circulating fluid recovering function will be provided by selecting option Z for collecting the circulating fluid inside an external piping.
*8 Required flow rate for cooling capacity or maintaining the temperature stability.
*9 Panel dimensions. These dimensions do not include possible protrusions such as a breaker handle.
*10 Weight in the dry state without circulating fluids.

^{*10} Weight in the dry state without circulating fluids


Cooling Capacity

HRW002-H/008-H/015-H/030-H HRW002-HS/008-HS/015-HS/030-HS

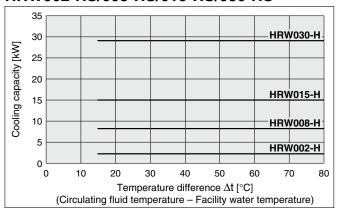

Heating Capacity


HRW002-H/008-H/015-H/030-H HRW002-HS/008-HS/015-HS/030-HS

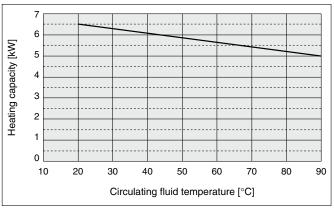


When pump inverter is operating at frequency of 60 Hz (maximum).

Pump Capacity

HRW002-H HRW002-HS

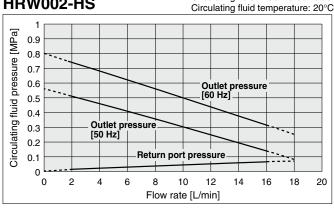


Circulating fluid: Fluorinated fluids

 

(pump inverter type).

HRW008-H/015-H/030-H HRW008-HS/015-HS/030-HS Circulating fluid: Fluorinated fluids Circulating fluid temperature: 20°C

Circulating fluid: Fluorinated fluids

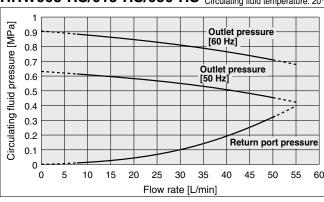


- * If the circulating fluid flow drops below 8 L/min., the shutdown alarm activates and operation stops. Do not use the product when the flow exceeds 50 L/min., since the flow cannot be displayed accurately.

 Pump capacity at 60 Hz indicates the maximum capacity of the HRW008-HS/015-
- HS/030-HS (pump inverter type).

Thermo-chiller Ethylene Glycol Type **HRW** Series



How to Order

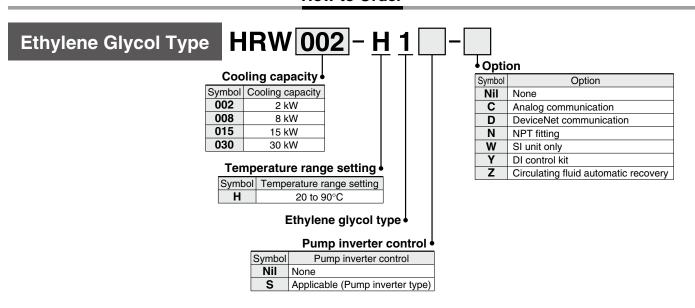

Specifications (For details, please refer to our "Product Specifications" information.)

Model		Model	HRW002-H1 HRW002-H1S	HRW008-H1 HRW008-H1S	HRW015-H1 HRW015-H1S	HRW030-H1 HRW030-H1S	
		ethod		Water-cooled			
Amb		emperature/humidity*1			, Humidity: 30 to 70%RH		
	Circu	ulating fluid*2		60% ethylene glyc	ol aqueous solution		
	Tem	perature range setting*1 °C		20 t	p 90		
_	Coolin	ng capacity (50/60 Hz common) kW	2	8	15	27	
system	ls l	Circulating fluid temperature °C		Facility water to	emperature +15		
) ys	≗	Facility water temperature °C		10 t	o 35		
9	Conditions	Circulating fluid rated flow L/min	4	15	30	40	
fluid	ပိ	radinty mater required non-rate =7111111	10	15	25	40	
g		perature stability*3 °C		±0	***		
a‡i		p capacity (50/60 Hz)*4 MPa	0.35/0.55 (at 4 L/min)	0.45/0.65 (at 15 L/min)	0.40/0.60 (at 30 L/min)	0.35/0.55 (at 40 L/min)	
Circulating	Circulating fluid flow range*5 L/min		3 to 16 9 to 50				
5	Tank capacity*6 L		Approx. 13				
	Circulating fluid recovery tank volume*7 L		12				
	Port	~	Rc3/4				
		l contact material	Nickel brazing (Heat exchanger), Stainless steel, EPDM, Silicone, PPS, Fluororesin				
ţ.		perature range °C		10 t			
water		ired flow rate*8 L/min	10	15	25	40	
Facility wa		pressure range MPa	0.3 to 0.7				
acil	Port		Rc3/4				
ű		l contact material	Nickel brazing (Heat exchanger), Stainless steel, EPDM, Silicone, Bronze, Brass, NBR				
ع ق		er supply		'	to 208 VAC ±10%		
lectrica system		operating current A		26			
Electrical system		ker capacity A	30				
		munications	Serial	RS-485 (D-sub 9 pin) and 0		25 pin)	
	ension				665 x H860		
	jht* ¹⁰	kg	Approx. 90 UL, CE marking, SEMI (S2-0703, S8-1103, F47-0200), SEMATECH (S2-93, S8-95)				
	•	ndards	UL, CE marki	ng, SEMI (S2-0703, S8-110	3, F47-0200), SEMATECH (S2-93, S8-95)	


^{*1} It should have no condensation

- *2 Dilute pure ethylene glycol with tap water. Additives invading fluid contact material such as preservatives cannot be used.
- *3 Outlet temperature when the circulating fluid and facility water are rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment, power supply, and facility water are within specification range and stable. Value obtained 10 minutes after the external load is stabilized (after stabilization with no load for HRW030-H1). It may be out of this range when a DI control kit (option Y) is used or in some other operating conditions.
- *4 The capacity at the circulating fluid outlet when the circulating fluid temperature is 20°C. Pump capacity at 60 Hz indicates the maximum capacity of the HRW 🗆 🗆 H1S (pump inverter type). ∗5 Applicable to the HRW□□□-H1S (pump inverter type) only.
- *6 Minimum volume required for operating only the thermo-chiller. (Circulating fluid temperature: 20°C, including the thermo-chiller's internal pipings or heat exchanger)
- *7 The automatic circulating fluid recovering function will be provided by selecting option Z for collecting the circulating fluid inside an external piping.
 *8 Required flow rate for cooling capacity or maintaining the temperature stability.
- *9 Panel dimensions. These dimensions do not include possible protrusions such as a breaker handle.
- *10 Weight in the dry state without circulating fluids




Cooling Capacity

HRW002-H1/008-H1/015-H1/030-H1 HRW002-H1S/008-H1S/015-H1S/030-H1S

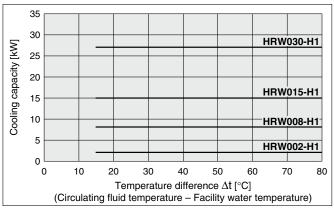

Heating Capacity


HRW002-H1/008-H1/015-H1/030-H1 HRW002-H1S/008-H1S/015-H1S/030-H1S

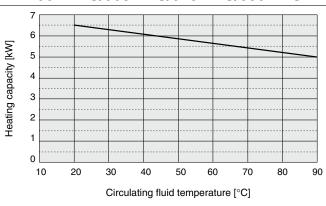

Pump Capacity

HRW002-H1 HRW002-H1S


Circulating fluid: 60% ethylene glycol Circulating fluid temperature: 20°C

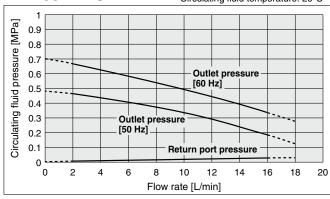

- If the circulating fluid flow drops below 2 L/min., the shutdown alarm activates and operation stops. Do not use the product when the flow exceeds 16 L/min., since the flow cannot be displayed accurately
- Pump capacity at 60 Hz indicates the maximum capacity of the HRW002-H1S

HRW008-H1/015-H1/030-H1 HRW008-H1S/015-H1S/030-H1S Circulating fluid temperature: 20°C

Circulating fluid: 60% ethylene glycol

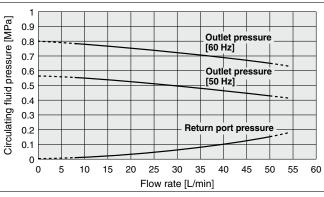


- If the circulating fluid flow drops below 8 L/min., the shutdown alarm activates and operation stops. Do not use the product when the flow exceeds 50 L/min., since the
- flow cannot be displayed accurately. Pump capacity at 60 Hz indicates the maximum capacity of the HRW008-H1S/015-H1S/030-H1S (pump inverter type)

HRSH

Thermo-chiller Tap/Deionized Water Type **HRW** Series



How to Order

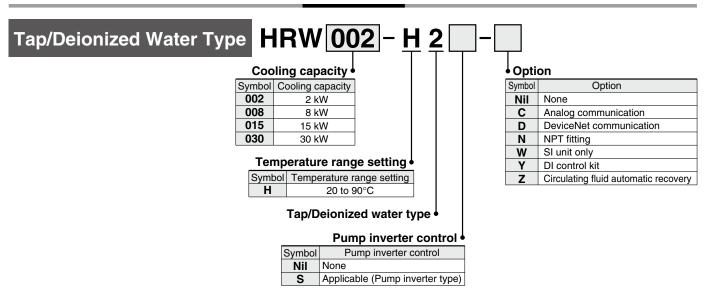

Specifications (For details, please refer to our "Product Specifications" information.)

Model			HRW002-H2 HRW002-H2S	HRW008-H2 HRW008-H2S	HRW015-H2 HRW015-H2S	HRW030-H2 HRW030-H2S			
Cooling method			Water-cooled						
Amb		mperature/humidity*1	Temperature: 10 to 35°C, Humidity: 30 to 70%RH						
	Circu	lating fluid*2	Tap water, Deionized water						
	Temp	erature range setting*1 °C		20 to 90					
_	Coolin	g capacity (50/60 Hz common) kW	2	8	15	30			
system	ısı	Circulating fluid temperature °C		Facility water to	emperature +15				
s/s	12	Facility water temperature °C		10 to	35				
	Conditions	Circulating fluid rated flow L/min	4	15	30	40			
Ē	ပိ	Facility water required flow rate L/min	10	15	25	40			
Circulating fluid	Temp	erature stability*3 °C		±C	.3				
atir		capacity (50/60 Hz)*4 MPa	0.35/0.55 (at 4 L/min)	0.45/0.65 (at 15 L/min)	0.40/0.60 (at 30 L/min)	0.35/0.55 (at 40 L/min)			
Ä		ating fluid flow range*5 L/min	3 to 16 9 to 50						
Ä	Tank	capacity*6 L	Approx. 13						
	Circula	ting fluid recovery tank volume*7 L	12						
	Port s	size	Rc3/4						
		contact material	Nickel brazing (Heat exchanger), Stainless steel, EPDM, Silicone, PPS, Fluororesin						
ē		erature range °C	10 to 35						
Facility water system	Requ	ired flow rate*8 L/min	10	15	25	40			
ility wa	Inlet	pressure range MPa	0.3 to 0.7						
S Cil	Port s	size		Rc3/4					
Ψ.	Fluid	contact material	Nickel brazing (Heat exchanger), Stainless steel, EPDM, Silicone, Bronze, Brass, NBR						
<u> </u>		r supply	3-phase 200/200 to 208 VAC ±10%						
Electrical system	Max.	operating current A	26						
sys	Break	cer capacity A	30						
		munications	Serial RS-485 (D-sub 9 pin) and Contact input/output (D-sub 25 pin)						
	Dimensions*9 mm		W380 x D665 x H860						
Weig	ght* ¹⁰	kg	Approx. 90						
Safe	ty star	ndards	UL, CE marking, SEMI (S2-0703, S8-1103, F47-0200), SEMATECH (S2-93, S8-95)						

^{*1} It should have no condensation.

*7 The automatic circulating fluid recovering function will be provided by selecting option Z for collecting the circulating fluid inside an external piping.
*8 Required flow rate for cooling capacity or maintaining the temperature stability.
*9 Panel dimensions. These dimensions do not include possible protrusions such as a breaker handle.



^{*2} If tap water or deionized water is used, please use water that conforms to Water Quality Standards of the Japan Refrigeration and Air Conditioning Industry Association (JRA GL-

^{02-1994/}cooling water system - circulation type - make-up water). The electric conductivity of the deionized water used as the fluid varies depending on the operating conditions. *3 Outlet temperature when the circulating fluid and facility water are rated flow, and the circulating fluid outlet and return port are directly connected. Installation environment, power supply, and facility water are within specification range and stable. Value obtained 10 minutes after the external load is stabilized (after stabilization with no load for HRW030-H2). It may be out of this range when a DI control kit (option Y) is used or in some other operating conditions.


^{*4} The capacity at the circulating fluid outlet when the circulating fluid temperature is 20°C. Pump capacity at 60 Hz indicates the maximum capacity of the HRW 🗆 🗆 H2S (pump inverter type).

^{*5} Applicable to the HRWU□□-H2S (pump inverter type) only.
*6 Minimum volume required for operating only the thermo-chiller. (Circulating fluid temperature: 20°C, including the thermo-chiller's internal pipings or heat exchanger)

^{*10} Weight in the dry state without circulating fluids


Cooling Capacity

HRW002-H2/008-H2/015-H2/030-H2 HRW002-H2S/008-H2S/015-H2S/030-H2S

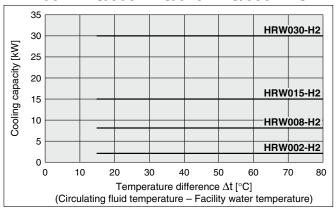

Heating Capacity


HRW002-H2/008-H2/015-H2/030-H2 HRW002-H2S/008-H2S/015-H2S/030-H2S

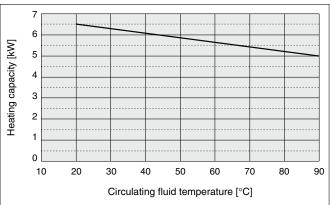

Pump Capacity

HRW002-H2 HRW002-H2S


Circulating fluid: Tap water Circulating fluid temperature: 20°C

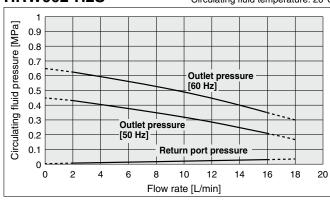

- * If the circulating fluid flow drops below 2 L/min., the shutdown alarm activates and operation stops. Do not use the product when the flow exceeds 16 L/min., since the flow cannot be displayed accurately.
- Pump capacity at 60 Hz indicates the maximum capacity of the HRW002-H2S (pump inverter type).

HRW008-H2/015-H2/030-H2 HRW008-H2S/015-H2S/030-H2S

Circulating fluid: Tap water Circulating fluid temperature: 20°C

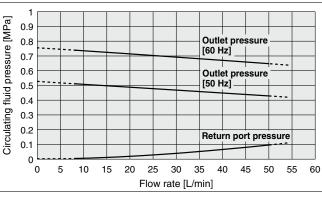

- * If the circulating fluid flow drops below 8 L/min., the shutdown alarm activates and operation stops. Do not use the product when the flow exceeds 50 L/min., since the flow cannot be displayed accurately.
- flow cannot be displayed accurately.

 * Pump capacity at 60 Hz indicates the maximum capacity of the HRW008-H2S/015-H2S/030-H2S (pump inverter type).

HB

HRS090

HRS100/150

HRSH HRSH090

HRSE

HR

HRZD

HRW

HECR

HEC

HEB


Technical Data

HRW Series

Common Specifications

Dimensions



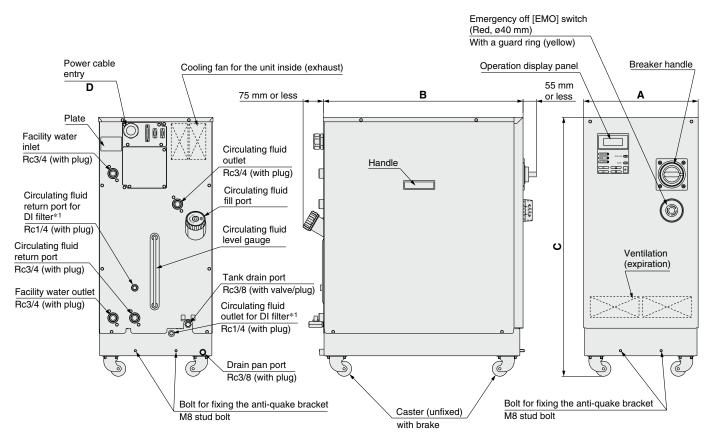

^{*1} Only when the DI control kit (option Y) is selected.

						[mm]
	Model					D
Fluorinated fluid type	Ethylene glycol type	Tap/Deionized water type	A	В	С	
HRW002-H HRW008-H HRW015-H HRW030-H	HRW002-H1 HRW008-H1 HRW015-H1 HRW030-H1	HRW002-H2 HRW008-H2 HRW015-H2 HRW030-H2	380	665	860	ø18.5 to 20.5

$\begin{center} \textbf{Communication Functions} & \textbf{For details, please refer to our "Communication Specifications" information.)} \end{center}$

Connector no. Connector type (on this production of the productio	uct's side)	Specifications P1					
Connector type (on this production of the produc	uct's side)						
Fixing bolt size Insulation m Rated input Input signal Operating vo Rated input Input impeda Rated load v Output signal Alarm signal Alarm signal EMO signal Fated load v Rated load v Maximum loa Rated load v	uct's side)						
Insulation m Rated input Operating vo Rated input Input signal Output signal Alarm signal Alarm signal EMO signal Insulation m Rated input Input impeda Rated load v Maximum loa Rated load v Maximum loa Rated load v		D-sub 25 P type, Female connector					
Input signal Input signal Operating vo Rated input Input impeda Rated load v Output signal Alarm signal Alarm signal EMO signal Rated load v Maximum loa Rated load v		M2.6 x 0.45					
Input signal Operating vo Rated input Input impeda Rated load v Output signal Alarm signal Alarm signal EMO signal Rated load v Maximum loa Rated load v Maximum loa Rated load v	ethod	Photocoupler					
Rated input input impeda Rated load v Output signal Maximum loa Alarm signal Rated load v Maximum loa EMO signal Rated load v	voltage	24 VDC					
Output signal Alarm signal Alarm signal EMO signal Input impeda Rated load v Maximum loa Rated load v Maximum loa Rated load v	oltage range	21.6 to 26.4 VDC					
Output signal Alarm signal Alarm signal EMO signal Rated load v Maximum loa Rated load v	current	5 mA TYP					
Output signal Alarm signal Alarm signal EMO signal Anaimum lo. Rated load v	ance	4.7 kΩ					
Alarm signal Rated load v Maximum loa Rated load v Rated load v	oltage	48 VAC or less/30 VDC or less					
Maximum los EMO signal	d current (total)	When using the power supply of the Thermo-chiller: 200 mA DC (Resistance load/Indu When using the power supply of the user's equipment: 800 mA AC/DC (Resistance load/Inductive load)					
EMO signal Rated load v	oltage	48 VAC or less/30 VDC or less					
EMO signal	ad current	800 mA AC/DC (Resistance load/Inductive load)					
EMO signal Maximum lo.	oltage	48 VAC or less/30 VDC or less					
,		800 mA AC/DC (Resistance load/Inductive load)					
Circuit diagram		Pin assignment number 24 VDC output 24 COM output 25 Combined from factory 8 Run/Stop signal 1 8 Coperation condition 17 Coperation condition 19 Warning signal Output signal 1 Warning signal Output signal 2 Output signal 2 Temp ready signal Output signal 3 Contact output COM Alarm signal Alarm signal Emergency off 18 Contact output COM Emergency off 18 Cont	Output signal Input signal				

^{*1} The custom function is equipped for contact input/output. Using the custom function enables the user to set the signal type for contact input/output or pin assignment numbers. For details, please refer to the "Communication Specifications" information.

HRS100/150

HECR

HRW Series

Communication Functions (For details, please refer to our "Communication Specifications" information.)

Serial RS-485

The serial RS-485 enables the following items to be written and read out.

<Writing>

Run/Stop

Circulating fluid temperature setting Circulating fluid automatic recovery start/ stop*1

<Readout>

Circulating fluid present temperature Circulating fluid flow Circulating fluid discharge pressure


Circulating fluid electric resistivity*2 Alarm occurrence information

Status (operating condition) information

- *1 Only when the circulating fluid automatic recovery function (option Z) is selected.
- *2 Only when the DI control kit (option Y) is selected.


Item	Specifications
Connector no.	P2
Connector type (on this product's side)	D-sub 9 P type, Female connector
Fixing bolt size	M2.6 x 0.45
Standards	EIA RS485
Protocol	Modicon Modbus
Circuit diagram	To the thermo-chiller User's equipment side SD+ SD- SD- SG SG

Connector Location

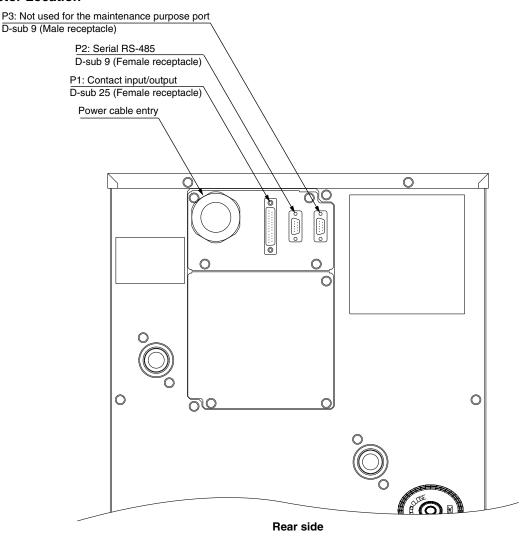



HEB

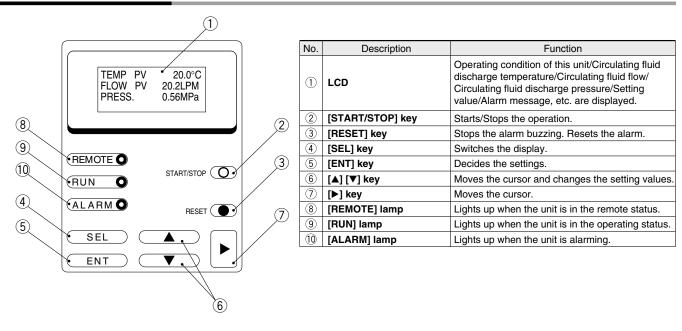

Alarm

This unit can display 23 kinds of alarm messages as standard. Also, it can read out the serial RS-485 communication.

Alarm code	Alarm message	Operation status	Main reason
01	Water Leak Detect FLT	Stop	Liquid deposits in the drain pan of this unit.
02	Incorrect Phase Error FLT	Stop	The power supply to this unit is incorrect.
05	Reservoir Low Level FLT	Stop	The amount of circulating fluid tank is running low.
06	Reservoir Low Level WRN	Continue	The amount of circulating fluid tank is running low.
07	Reservoir High Level WRN	Continue	The amount of circulating fluid in the tank has increased.
08	Temp. Fuse Cutout FLT	Stop	Temperature of the circulating fluid tank is raised.
09	Reservoir High Temp. FLT	Stop	Temperature of the circulating fluid has exceeded the limitation.
10	Return High Temp. WRN	Continue	Temperature of returning circulating fluid has exceeded the limit.
11	Reservoir High Temp. WRN	Continue	Temperature of the circulating fluid has exceeded the limitation set by user.
12	Return Low Flow FLT	Stop	The circulating fluid flow has gone below the limit.
13	Return Low Flow WRN	Continue	Flow rate of the Thermo-chiller has dropped below the set value.
15	Pump Breaker Trip FLT	Stop	The protective equipment in the circulating fluid driving line has started.
17	Interlock Fuse Cutout FLT	Stop	Overcurrent is flown to the control circuit.
18	DC Power Fuse Cutout WRN	Continue	Overcurrent has flowed to the (optional) solenoid valve. (Only for the automatic circulating fluid recovery function - option Z)
19	FAN Motor Stop WRN	Continue	Cooling fan inside the compressor has stopped.
21	Controller Error FLT	Stop	The error occurred in the control systems.
22	Memory Data Error FLT	Stop	The data stored in the controller of this unit went wrong.
23	Communication Error WRN	Continue	The serial communications between this unit and user's system has been suspended.
24	DI Low Level WRN	Continue	DI level of the circulating fluid has gone below the limitation set by user. (Only for DI control kit - option Y)
25	Pump Inverter Error FLT	Stop	The error occurred in the circulating pump inverter. This alarm is applicable to the HRW
26	DNET Comm. Error FLT	Stop	The DeviceNet communications between this unit and user's system has been suspended. (Only for DeviceNet communication specification - option D)
27	DNET Comm. Error WRN	Continue	An error has occurred in the DeviceNet communication system of this unit. (Only for DeviceNet communication specification - option D)
29	F.Water Low Temp. WRN	Continue	Temperature of facility water has dropped below the set temperature.
30	F.Water High Temp. WRN	Continue	Temperature of facility water has exceeded the set temperature.

HRW Series **Options**

* Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.





In addition to the standard contact input/output signal communication and the serial RS-485 communication, analog communication function can be

The analog communication function enables to write and read out the following items.

<Writing>

<Readout>

Circulating fluid temperature setting

Circulating fluid present temperature

Electric resistivity*1

*1 Only when the DI control kit (option Y) is selected.

Scaling voltage - circulating fluid temperature can be set arbitrarily by

For details, please refer to our "Communication Specifications" information.





An adapter is included to change the connection parts of circulating fluid piping and facility water piping to NPT thread type. The adapter must be installed by user.





communication

■ Trademark

DeviceNet™ is a trademark of ODVA.

In addition to the standard contact input/output signal communication and the serial RS-485 communication, DeviceNet function can be added. DeviceNet function enables to write and read out the following items.

<Writina> <Readout>

DeviceNet

Circulating fluid present temperature Run/Stop

Circulating fluid flow Circulating fluid temperature

 
Circulating fluid discharge pressure setting

Electric resistivity*2 Circulating fluid automatic Alarm occurrence information

recovery start/stop* Status (operating condition) information

- *1 Only when the circulating fluid automatic recovery function (option Z) is selected.
- *2 Only when the DI control kit (option Y) is selected.


For details, please refer to our "Communication Specifications" information.



unit selection function will be provided by default. SI unit only

 No change in external dimensions






Select this option if you want to maintain the electric resistivity (DI level) of the circulating fluid at a certain level. However, some components have to be fitted user. For details, refer to specification table for this option.

Please note that this is not applicable to the fluorinated liquid type.

Applicable model		HRW0□□-H1-Y	HRW0□□-H2-Y	
Allowable circulating fluid —		60% ethylene glycol aqueous solution	Deionized water	
DI level display range ΜΩ		0 to 20		
DI level set range	MΩ.cm	0 to 20*1	l	
Solenoid valve hysteresis for control	MΩ.cm	0 to 0.9		
DI level reduction alarm set range	MΩ·cm	0 to 20		

*1 The DI filter is needed to control the DI level. (SMC Part No.: HRZ-DF001) Please purchase additionally because the DI filter is not included in this option. Also, if necessary, additionally purchase the insulating material for the DI filter. (SMC Part No.: HRZ-DF002)

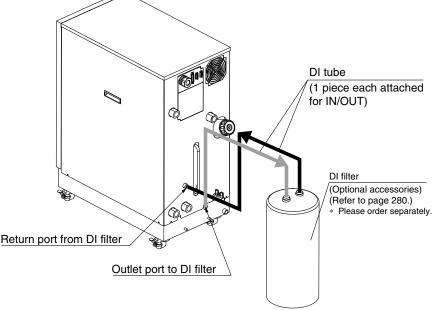

- * Install the DI filter outside the thermochiller for piping. Secure the space for installing the DI filter in the rear side of the thermo-chiller.
- * It may go outside of the temperature stability range of $\pm 0.3^{\circ}\text{C}$ when this option is used in some operating conditions.



Select this option for users who want to use the circulating fluid automatic recovery function.

The automatic recovery function is a device which can recover the circulating fluid inside pipings into a sub-tank of the thermo-chiller by the external communication or operation display panel.


Some components need to be fitted by user. For details, consult "Product Specifications" information for these options.

Applicable model		Common for all models
Circulating fluid recoverable volume*1	L	12
Purge gas	_	Nitrogen gas
Purge gas supply port	_	Self-align fitting for O.D. ø8*2
Purge gas supply pressure	MPa	0.4 to 0.7
Purge gas filtration	μm	0.01 or less
Regulator set pressure	MPa	0.15 to 0.3*3
Recoverable circulating fluid temperature	°C	10 to 40
Recovery start/stop	_	Start: External communication*4 or operation display panel/Stop: Automatic
Timeout error	sec	Timer from recovery start to completion Stops recovering when the timer turns to set time. Possible set range: 60 to 300, at the time of shipping from the factory: 300
Height difference with the user system side m		10 or less

^{*1} This is the space volume of the sub-tank when the liquid level of the circulating fluid is within the specification. Guideline of the recovery volume is 80% of the

*3 At the time of shipping from factory, it is set to 0.2 MPa.

*4 For details, please refer to our "Communication Specifications" information.

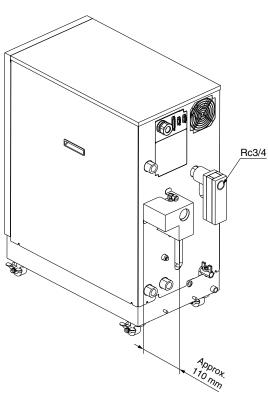

HRS090

HRS100/150 HRSH090

HRSH

HECR

HEB

HEC



circulating fluid recoverable volume.

*2 Before piping, clean inside the pipings with air blow, etc. Use the piping with no dust generation by purge gas. When using resin tube, where necessary, use insert fittings, etc. in order not to deform the tubings when connecting to self-align fittings.

HRW Series


Optional Accessories

* Necessary to be fitted by user.

1 Bypass Piping Set

When the circulating fluid goes below the rated flow, cooling capacity will be reduced and the temperature stability will be badly affected. In such a case, use the bypass piping set.

Part no.	Applicable model
HRW-BP001	Common for all models

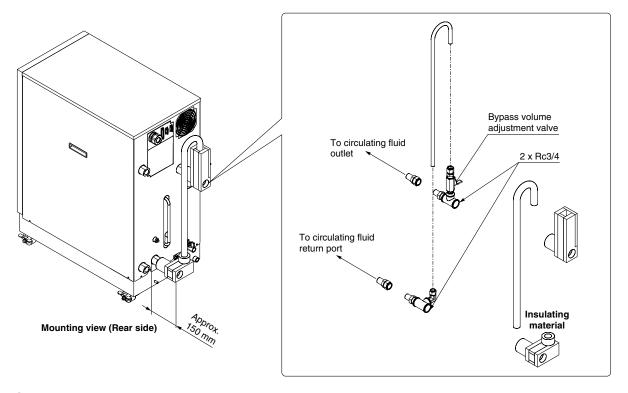


2 Anti-quake Bracket

Bracket for earthquakes

Prepare the anchor bolts (M12) which are suited to the floor material by user.

Part no.	Applicable model
HRZ-TK002	Common for all models


* 2 pieces per set (for 1 unit) (HRZ-TK002)

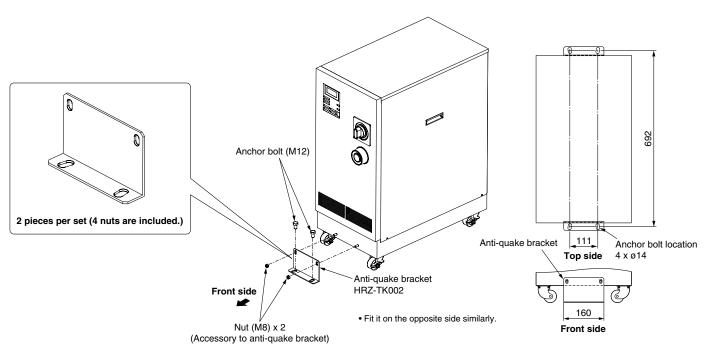

3 4-Port Manifold

4-branching the circulating fluid enables 4 temperature controls at the maximum with the 1 unit thermo-chiller. Order the heat insulator for 4 port manifold (HRW-MA002) separately if necessary.

Part no.	Applicable model
HRW-MA001	Common for all models
HRW-MA002	Common for all models

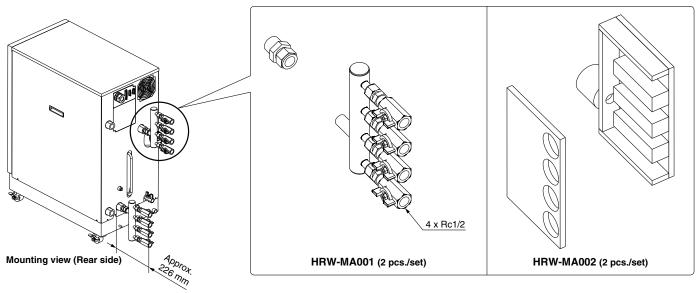


4 DI Filter

This is the ion replacement resin to maintain the electric resistivity of the circulating fluid.

Users who selected the DI control kit (option Y) need to purchase the DI filter separately.

Part no.	Applicable model		
HRZ-DF001	Common for all models which can select the DI control kit. (option Y)		

 * The DI filters are consumable. Depending on the status (electric resistivity set value, circulating fluid temperature, piping volume, etc.), product life cycles will vary accordingly.




Weight: Approx. 20 kg

(5) Insulating Material for DI Filter

When the DI filter is used at a high temperature, we recommend that you use this insulating material to protect the radiated heat from the DI filter or possible burns. We also recommend that you use this to prevent heat absorption from the DI filter and to avoid forming condensation.

<u> </u>					
Part no.	Applicable model				
HRZ-DF002	Common for all models which can select the DI control kit. (option Y)				

 

HRS100/150 HRS090

HRSH090

SE

HRSH

HRZ

HR

ECR

HEC

HEB

echnical Data




HRW Series

6 Contaminant Filter

A filter mounted in the circulating fluid circuit to eliminate the dust which is contained in the circulating fluid. (Filtration: 20 $\mu m)$ It is provided with its own heat insulator.

Part no.	Applicable model			
HRW-CF001	O a manage for all mandals			
HRW-CF002	Common for all models			

^{*} The internal element of the contaminant filter (Part no.: HRW-CF002) is a replacement part. The period in service depends on the operating conditions.

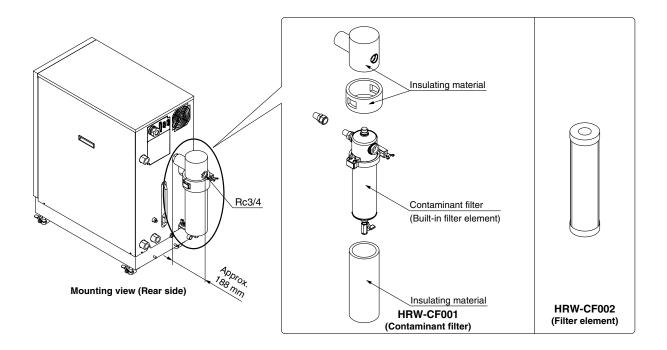

7 60% Ethylene Glycol Aqueous Solution


This solution can be used as a circulating fluid for ethylene glycol-type thermo-chillers. (Capacity: $10\ L$)


Part no.	Applicable model
HRZ-BR001	Common for all ethylene glycol-type models

8 Concentration Meter

This meter can be used to control the concentration of ethylene glycol aqueous solution regularly.

Part no.	Applicable model	
HRZ-BR002	Common for all ethylene glycol-type models	

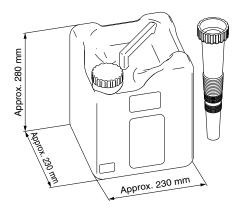

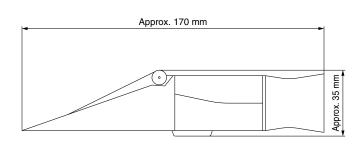

281

HRW Series Specific Product Precautions 1

Be sure to read this before handling the products. Refer to page 383 for safety instructions and pages 384 to 387 for temperature control equipment precautions.

Design

⚠ Warning

1. This catalog shows the specifications of a single unit.

- For details, please refer to our "Product Specifications" and thoroughly consider the adaptability between the user's system and this unit.
- Although the protection circuit as a single unit is installed, the user is requested to carry out the safety design for the whole system.

Selection

∧ Caution

1. Model selection

In order to select the correct thermo-chiller model, the amount of thermal generation from the user's system, the operating circulating fluid, and its circulating flow are required. Select a model, by referring to the guideline to model selection on page 263.

2. Option selection

Options have to be selected when ordering the thermo-chiller. It is not possible to add them after purchasing the unit.

Handling

Marning

1. Thoroughly read the Operation Manual.

Read the Operation Manual completely before operation, and keep this manual available whenever necessary.

Operating Environment/Storage Environment

∧ Caution

- 1. Do not use in the following environment because it will lead to a breakdown.
 - 1. Environment like written in "Temperature Control Equipment Precautions."
 - 2. Locations where spatter will adhere to when welding.
 - Locations where it is likely that the leakage of flammable gas may occur.
 - Locations where the ambient temperature exceeds the limits as mentioned below.

During operation 10°C to 35°C

During storage 0°C to 50°C (but as long as water or circulating fluid are not left inside the pipings)

5. Locations where the ambient relative humidity exceeds the limit as mentioned below.

During operation 30% to 70%

During storage 15% to 85%

- (Inside the operation facilities) locations where there is not sufficient space for maintenance.
- In locations where the ambient pressure exceeds the atmospheric pressure.
- The Thermo-chiller does not have clean room specification. It generates dust from the pump inside the unit and the cooling fan for the unit inside.

Circulating Fluid

⚠ Caution

- 1. Avoid oil or other foreign matter entering the circulating fluid.
- 2. Use ethylene glycol that does not contain additives such as preservatives.
- 3. The condensation of ethylene glycol aqueous solution must be 60% or less. If the condensation is too high, the pump will be overloaded, resulting in occurrence of "Pump Breaker Trip FLT."
- 4. Avoid water moisture entering the fluorinated fluid.
- 5. Use tap water (including for diluting ethylene glycol aqueous solution) which must meet the water quality standards as mentioned below.

Tap Water (as Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

		Unit	Standard value	Influence	
	Item			Corrosion	Scale generation
	pH (at 25°C)	_	6.0 to 8.0	0	0
_	Electric conductivity (25°C)	[µS/cm]	100*1 to 300*1	0	0
lem	Chloride ion (CI-)	[mg/L]	50 or less	0	
Standard item	Sulfuric acid ion (SO ₄ ²⁻)	[mg/L]	50 or less	0	
nda	Acid consumption amount (at pH4.8)	[mg/L]	50 or less		0
Stal	Total hardness	[mg/L]	70 or less		0
	Calcium hardness (CaCO ₃)	[mg/L]	50 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	30 or less		0
_	Iron (Fe)	[mg/L]	0.3 or less	0	0
ie	Copper (Cu)	[mg/L]	0.1 or less	0	
Se	Sulfide ion (S ₂ -)	[mg/L]	Should not be detected.	0	
Reference item	Ammonium ion (NH ₄ +)	[mg/L]	0.1 or less	0	
 Sefe	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

- *1 In the case of [M Ω ·cm], it will be 0.003 to 0.01.
- O: Factors that have an effect on corrosion or scale generation.
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

HRS

HRS090

HRS100/150

HRSH090

HRSH

RZ

RZD

HRW

HECR

HEC

HEB

lical a

Technical Data





HRW Series Specific Product Precautions 2

Be sure to read this before handling the products. Refer to page 383 for safety instructions and pages 384 to 387 for temperature control equipment precautions.

Facility Water Supply

⚠ Warning

<Water-cooled refrigeration>

 The water-cooled refrigeration type thermo-chiller radiates heat to the facility water.

Prepare the facility water system that satisfies the facility water specifications below.

2. When using tap water as facility water, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below.

<Tap Water (as Facility Water) Quality Standards>

The Japan Refrigeration and Air Conditioning Industry Association JRA GL-02-1994 "Cooling water system – Circulation type – Circulating water"

Item		Unit		Influence	
			Standard value	Corrosion	Scale generation
	pH (at 25°C)	_	6.5 to 8.2	0	0
_	Electric conductivity (25°C)	[µS/cm]	100*1 to 800*1	0	0
ten	Chloride ion (Cl ⁻)	[mg/L]	200 or less	0	
Standard item	Sulfuric acid ion (SO ₄ ²⁻)	[mg/L]	200 or less	0	
da	Acid consumption amount (at pH4.8)	[mg/L]	100 or less		0
Star	Total hardness	[mg/L]	200 or less		0
0,	Calcium hardness (CaCO ₃)	[mg/L]	150 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	50 or less		0
ڃ	Iron (Fe)	[mg/L]	1.0 or less	0	0
ite	Copper (Cu)	[mg/L]	0.3 or less	0	
Se Se	Sulfide ion (S ₂ -)	[mg/L]	Should not be detected.	0	
l e	Ammonium ion (NH ₄ +)	[mg/L]	1.0 or less	0	
Reference item	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
L.E.	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

- *1 In the case of [M Ω ·cm], it will be 0.001 to 0.01.
- O: Factors that have an effect on corrosion or scale generation.
- Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.
- 3. Set the supply pressure between 0.3 to 0.7 MPa. Ensure a pressure difference at the facility water inlet/outlet of 0.3 MPa or more.

If the supply pressure is high, it will cause water leakage. If the supply pressure and pressure difference at the facility water inlet/outlet is low, it will cause an insufficient flow rate of the facility water, and poor temperature control.

Transportation/Carriage/Movement


⚠ Warning

1. Transporting with forklift

- 1. It is not possible to hang this product.
- The fork insertion position is either on the left side face or right side face of the unit. Be careful not to bump the fork against a caster or level foot and be sure to put through the fork to the opposite side.
- Be careful not to bump the fork to the cover panel or piping ports.

2. Transporting with casters

- This product is heavy and should be moved by at least two people.
- 2. Do not grip the pipings on the rear side or the handles of the panel.

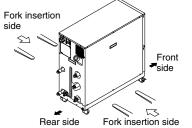

Mounting/Installation

⚠ Caution

- 1. Avoid using this product outdoors.
- 2. Install on a rigid floor which can withstand this product's weight.
- 3. Please install a suitable anchor bolt for the antiquake bracket taking into consideration the user's floor material.
- 4. Avoid placing heavy objects on this product.

Piping

⚠ Caution

1. Regarding the circulating fluid pipings, consider carefully the suitability for shutoff pressure, temperature and circulating fluid.

If the operating performance specifications are regularly exceeded, the pipings may burst during operation.

2. The surface of the circulating fluid pipings should be covered with the insulating materials which can effectively confine the heat.

Absorbing the heat from the surface of pipings may reduce the cooling capacity performance and the heating capacity may be shortened due to heat radiation.

3. When using fluorinated liquid as the circulating fluid, do not use pipe tape.

Liquid leakage may occur around the pipe tape. For sealant, we recommend that you use the following sealant: SMC Part No., HRZ-S0003 (Silicone sealant)

4. For the circulating fluid pipings, use clean pipings which have no dust, oil or water moisture inside the pipings, and blow with air prior to undertaking any piping works.

If any dust, oil or water moisture enters the circulating fluid circuit, inferior cooling performance or equipment failure due to frozen water may occur, resulting in bubbles in the circulating fluid inside the tank.

5. Select the circulating fluid pipings which can exceed the required rated flow.

For the rated flow, refer to the pump capacity table.

- For the circulating fluid piping connection, install a drain pan just in case the circulating fluid may leak.
- 7. Do not return the circulating fluid to the unit by installing a pump in the user system.



HRW Series Specific Product Precautions 3

 
Be sure to read this before handling the products. Refer to page 383 for safety instructions and pages 384 to 387 for temperature control equipment precautions.

Electrical Wiring

⚠ Caution

- 1. Power supply and signal cable should be prepared by user.
- 2. Provide a stable power supply which is not affected by surge or distortion.

If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 μ sec., it may result in malfunction.




3. This product is installed with a breaker with the following operating characteristics.

For the user's equipment (inlet side), use a breaker whose operating time is equal to or longer than the breaker of this product. If a breaker with shorter operating time is connected, the user's equipment could be cut off due to the inrush current of the motor of this product.

Breaker Operating Characteristics

Common for all models

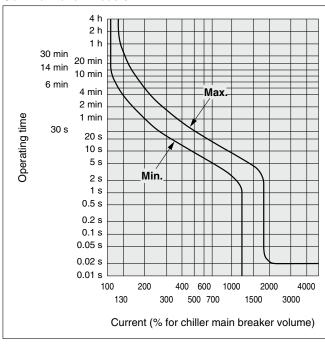

Operation

⚠ Caution

1. Confirmation before operation

- 1. The circulating fluid should be within the specified range of "HIGH" and "LOW."
- 2. Be sure to tighten the cap for the circulating fluid port until the click sound is heard.

2. Emergency stop method

In the case of an emergency, press down the EMO switch which is fitted on the front face of this product.

Maintenance

Marning

- 1.Do not operate the switch with wet hands or touch electrical parts such as an electrical plug. This will lead to an electrical shock.
- 2. Do not splash water directly on this product for cleaning. This will lead to an electrical shock or a fire.
- 3. When the panel was removed for the purpose of inspection or cleaning, mount the panel after works were done.

If the panel is still open, or running the equipment with the panel removed, it may cause an injury or electric shock.

⚠ Caution

- 1. In order to prevent a sudden product failure of the unit, replace the replacement parts every 36 months.
- 2. Perform an inspection of the circulating fluid every 3 months.
 - In the case of fluorinated fluids:
 Discharge the circulating liquid and avoid any dirty objects, or water moisture, or foreign matter entering the system.
 - 2. In the case of ethylene glycol aqueous solution: Maintain the condensation at 60%.
 - 3. In case of tap water, deionized water: Replacement is recommended.
- 3. Check the water quality of facility water every 3 months.

Regarding the water quality standards for facility water, refer to page 386.

HRS

| HRS090

HRS100/150

HRSH HRSH090

HRSE

HR

-M

HECR

HEC

HEB

ecnnicai Data

