

5 Port Solenoid Valve

VQC1000/2000 Series

Metal Seal

Rubber Seal

Connector Type Manifold

Power saving

Standard: **0.4 w**


(Reduced by **60%** compared to current model)

High-pressure (1 MPa, Metal seal): **0.95 w**

IP67 enclosure compatible



RoHS

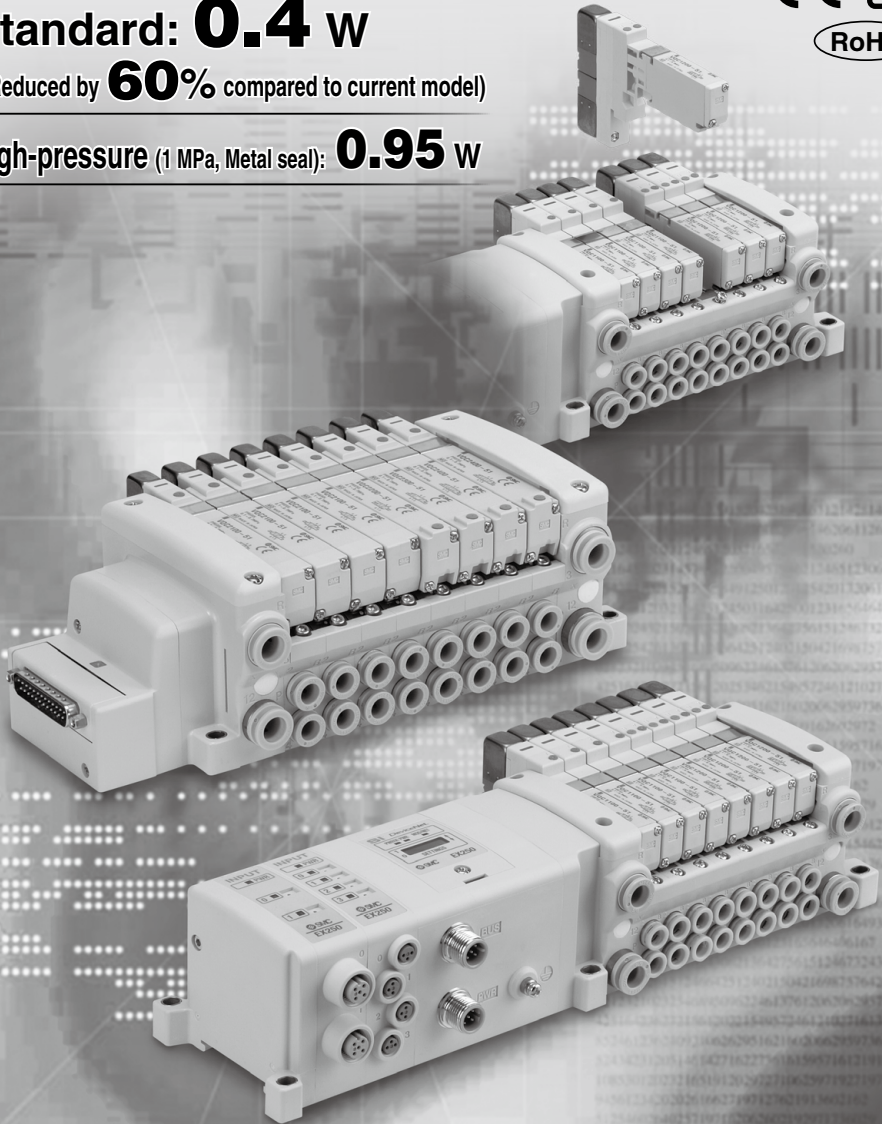

| |
|------------|
| SV |
| SYJ |
| SZ |
| VF |
| VP4 |
| VQ 1/2 |
| VQ 4/5 |
| VQC 1/2 |
| VQC 4/5 |
| VQZ |
| SQ |
| VFS |
| VFR |
| VQ7 |

Connector Type Manifold

VQC1000/2000 Series

Power saving

Standard: **0.4 W** (Reduced by **60%** compared to current model)

High-pressure (1 MPa, Metal seal): **0.95 W**

IP67 enclosure compatible

Dust-tight, Immersion-proof

(Based on IEC60529) (S/T/L/M kit)

Applicable to EX600 (Input/Output) serial transmission system (Fieldbus system)

- Available for DeviceNet®, PROFIBUS DP, CC-Link, EtherNet/IP™, EtherCAT and PROFINET Fieldbus protocols
- EtherNet/IP™ and PROFINET are compatible with wireless systems.

- **Max. 9 units** ^{Note)} can be connected in any order.

The unit to connect input device such as an auto switch, pressure switch and flow switch, and the unit to connect output device such as a solenoid valve, relay and indicator light can be connected in any order.


Note) Except SI unit

- **Analog unit can be connected with analog input device or analog output device.**

As well as a Digital (switch) Input/Output Unit, a unit applicable to analog signal is provided, and can be connected with various device for control.

- **Self-diagnosis function**

It is possible to ascertain the maintenance period and identify the parts that require maintenance, by an input (sensor) open circuit detecting function and an input/output signal of ON/OFF counter function. Also, the monitoring of input/output signal and the setting of parameters can be performed with a Handheld Terminal.

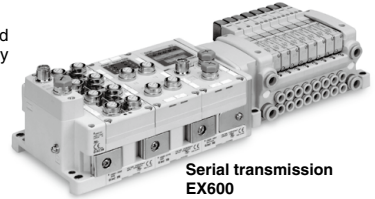

The EX260 series supports safety communication (PROFIsafe).

- **This is a Fieldbus unit which supports safety standard ISO 13849-compliant safety circuit constructions.**



PROFIsafe is established as an international standard (IEC 61784-3-3). It is a communication protocol that transmits safety-related data by PROFINET communication and can be used up until safety standards ISO 13849-1 PL e and IEC 61508/IEC 62061 SIL 3.

- **Using the safety communication protocol**

Refer to the EX260 **Web Catalog** for details on units that support the safety communication protocol.

When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side.

Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole.

The use of valves that have been validated as being compliant with ISO 13849-2 may be required.

For details on valves that have been validated, please contact SMC.

In addition, refer to "Safety Instructions" for precautions on model selection.


Compact and high flow

| Series | Manifold pitch (mm) | Flow rate characteristics <small>Note)</small> | | | | | | Applicable cylinder bore size (mm) |
|----------------|---------------------|--|------|------|------------------------------|------|------|------------------------------------|
| | | Metal seal | | | Rubber seal | | | |
| | | C [dm ³ /(s·bar)] | b | Cv | C [dm ³ /(s·bar)] | b | Cv | |
| VQC1000 | 10.5 | 0.72 | 0.25 | 0.18 | 1.0 | 0.30 | 0.25 | Up to ø50 |
| VQC2000 | 16 | 2.6 | 0.15 | 0.60 | 3.2 | 0.30 | 0.80 | Up to ø80 |

Note) Flow rate characteristics: 2-position single, 4/2 → 5/3 (A/B → R1/R2)

Connector entry direction can be changed with a single push. (F/P kit)

The connector entry direction can be changed from the top to the side by simply pressing the manual release button. It is not necessary to use the manual release button when switching from the side to the top.

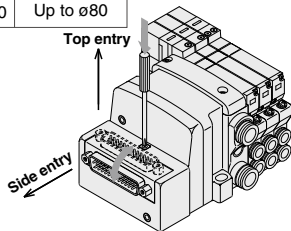



A wide variety of prepackaged wiring configurations

| S kit (Serial transmission) | F kit (D-sub connector) | P kit (Flat ribbon cable) | T kit (Terminal block box) | L kit (Lead wire) | M kit (Circular connector) |
|---------------------------------------|-----------------------------------|-------------------------------------|--------------------------------------|-----------------------------|--------------------------------------|
| | | | | | |
| IP67 enclosure compatible | IP67 enclosure compatible | IP67 enclosure compatible | IP67 enclosure compatible | IP67 enclosure compatible | IP67 enclosure compatible |

- Our six standard wiring packages bring a world of ease to wiring and maintenance work, while the protective enclosures of four of them conform to IP67 standards.
- The S kit is compatible with a combined I/O unit. (Not applicable to Gateway unit)

Connector type manifold

- The use of multi-pin connectors to replace wiring inside manifold blocks provides flexibility when adding stations or changing manifold configuration.
- All kits use multi-pin connectors, so switching from the F kit (D-sub connector) to the S kit (serial transmission) can be done simply by changing the kit section.

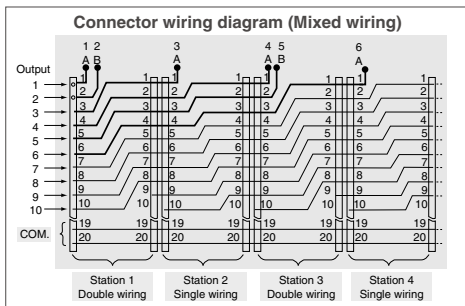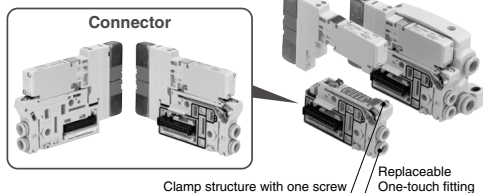


(Refer to the connector wiring diagram.)
Printed circuit board patterns between connectors are shifted at every station. This allows for viable connections to take place without necessarily specifying whether the manifold station is double, single, or mixed wiring.

Dual 3-port valves, 4 positions

VQC1000/2000 (Rubber seal only)


 
 
 
 
 
 
 
 
 
 
 
 
- Two 3-port valves built into one body
- The 3-port valves on the A and B sides can operate independently.
- When used as 3-port valves, only half the number of stations is required.
- Can also be used as a 4-position, 5-port type valve.






Exhaust center : **VQC1A01**
 : **VQC2A01**
Pressure center : **VQC1B01**
 : **VQC2B01**

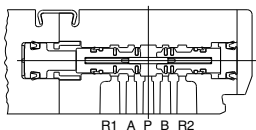

| Model | Symbol |
|----------------------------------|--|
| VQC1A01 VQC2A01 | <p>A side: N.C. valve 4(A) B side: N.C. valve 2(B)</p> <p>5(R1) 1(P) 3(R2)</p> |
| VQC1B01 VQC2B01 | <p>A side: N.O. valve 4(A) B side: N.O. valve 2(B)</p> <p>5(R1) 1(P) 3(R2)</p> |
| VQC1C01 VQC2C01 | <p>A side: N.C. valve 4(A) B side: N.O. valve 2(B)</p> <p>5(R1) 1(P) 3(R2)</p> |

VQC series/Base Mounted: Variations

|  | | Sonic conductance C [dm ² /(s·bar)] (CYL → EXH) 4/2 → 5/3 | | Single/Double 3-position (Closed center) | Applicable cylinder bore size | S kit Serial transmission | | | | | |
|--|-------------|--|------|---|-------------------------------|---|---|--|--|--|---|
| | | | | | | Gateway-type | Integrated-type (I/O) | | | Integrated-type (for output) | |
| | | | | | | EX500 Compatible protocol • PROFIBUS DP • EtherNet/IP™ • PROFINET   IP67 compliant | EX600 Compatible protocol • DeviceNet® • PROFIBUS DP • CC-Link • EtherNet/IP™ • EtherCAT • PROFINET [®] * Compatible with wireless systems   IP67 compliant | EX245 Compatible protocol • PROFINET   IP65 compliant | EX250 Compatible protocol • DeviceNet® • PROFIBUS DP • AS-Interface • CANopen • EtherNet/IP™   IP67 compliant | EX260 Compatible protocol • DeviceNet® • PROFIBUS DP • CC-Link • EtherCAT • PROFINET • EtherNet/IP™ • Ethernet POWERLINK • IO-Link • PROFIsafe   IP67 compliant | EX126 Compatible protocol • CC-Link   IP67 compliant |
| VQC1000 Series P. 544 | Metal seal | VQC1□00 | 0.72 | 0.72 | Up to ø50 | ● | ● | — | ● | ● | ● |
| | Rubber seal | VQC1□01 | 1.0 | 0.65 | | ● | ● | — | ● | ● | ● |
| VQC2000 Series P. 550 | Metal seal | VQC2□00 | 2.6 | 2.0 | Up to ø80 | ● | ● | ● | ● | ● | ● |
| | Rubber seal | VQC2□01 | 3.2 | 2.2 | | ● | ● | ● | ● | ● | ● |

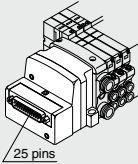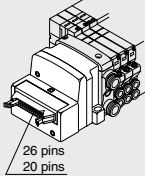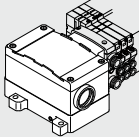  
| | F kit | P kit | T kit | L kit | M kit | Port size | |
|--|--|---|---|--|--|---|--|
| | D-sub connector | Flat ribbon cable | Terminal block box | Electrical entry | Circular connector | | |
| | <p>D-sub connector</p> <p>(Conforming to MIL D-sub connector)</p>  <p>25 pins</p> | <p>Flat ribbon cable</p> <p>(Conforming to MIL flat ribbon cable connector)</p>  <p>26 pins 20 pins</p> | <p>Terminal block box (Terminal block)</p> <p>(Terminal block is compactly arranged on one side.)</p>  <p>IP67 compliant</p> | <p>Lead wire</p> <p>(IP67 enclosure with use of multiple wire cable with sheath and waterproof connector)</p>  <p>25-core cable</p> <p>IP67 compliant</p> | <p>Circular connector</p> <p>(IP67 enclosure with use of waterproof circular connector)</p>  <p>26 pins</p> <p>IP67 compliant</p> | <p>SUP EXH port</p> <p>1, 3 (P, R)</p> | <p>Cylinder port</p> <p>2, 4 (A, B)</p> |
| | ● | ● | ● | ● | ● | <p>C8 (ø8)</p> <p>N9 (ø5/16")</p> | <p>C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread)</p> <p>N1 (ø1/8") N3 (ø5/32") N7 (ø1/4")</p> |
| | ● | ● | ● | ● | ● | <p>C10 (ø10)</p> <p>N11 (ø3/8")</p> <p>In case of branch type C12 (ø12) N13 (ø1/2")</p> | <p>C4 (ø4) C6 (ø6) C8 (ø8)</p> <p>N3 (ø5/32") N7 (ø1/4") N9 (ø5/16")</p> |

- SV**
- SYJ**
- SZ**
- VF**
- VP4**
- VQ 1/2
- VQ 4/5
- VQC 1/2**
- VQC 4/5
- VQZ**
- SQ**
- VFS**
- VFR**
- VQ7**

VQC1000/2000 Series

Cylinder Speed Chart

This chart is provided as guidelines only.
For performance under various conditions, use SMC's Model Selection Program before making a judgment.

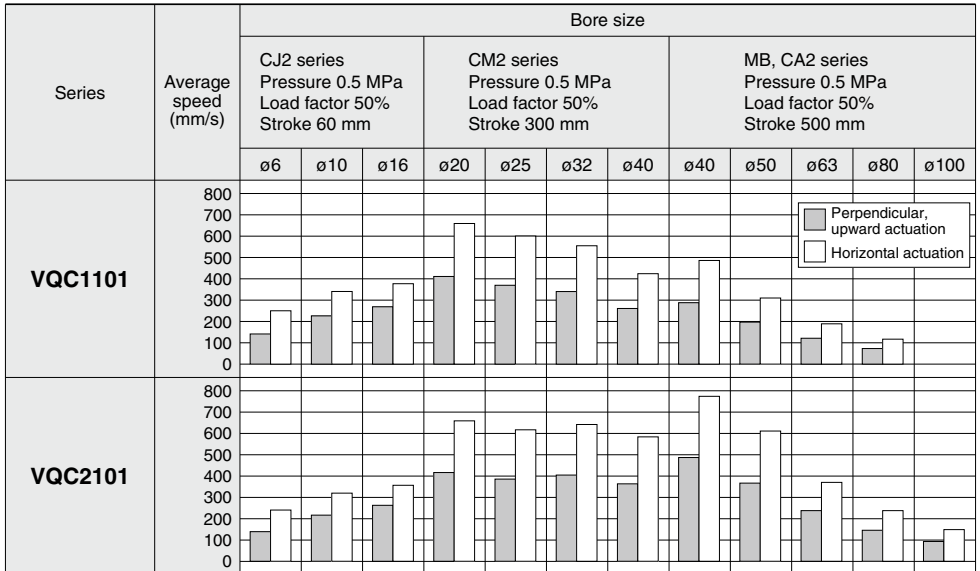

* It is when the cylinder is extending that is meter-out controlled by speed controller which is directly connected with cylinder, and its needle valve with being fully open.

* The average velocity of the cylinder is what the stroke is divided by the total stroke time.


* Load factor: ((Load mass x 9.8)/Theoretical force) x 100%

Conditions

| Series | Conditions | CJ2 series | CM2 series | MB, CA2 series |
|---------|------------------|-------------------------------|------------|----------------|
| VQC1101 | Tube x Length | T0604 (O.D. ø6/I.D. ø4) x 1 m | | |
| | Speed controller | AS3002F-06 | | |
| | Silencer | AN15-C08 | | |
| VQC2101 | Tube x Length | T0806 (O.D. ø8/I.D. ø6) x 1 m | | |
| | Speed controller | AS3002F-08 | | |
| | Silencer | AN20-C10 | | |

INDEX

| | |
|--|---------|
| Features | P.538 |
| Variations | P.540 |
| Cylinder Speed Chart | P.542 |
| VQC1000 How to Order, Manifold Options | P.544 |
| VQC2000 How to Order, Manifold Options | P.550 |
| VQC1000/2000 Model, Standard/Manifold Specifications | P.556 |
| VQC1000/2000 S kit (Serial transmission) EX500 Gateway Decentralized System 2 (128 points) | P.558 |
| VQC1000/2000 S kit (Serial transmission) EX500 Gateway Decentralized System (64 points) | P.560 |
| VQC1000/2000 S kit (Serial transmission) EX600 | P.562 |
| VQC2000 S kit (Serial transmission) EX245 | P.565-1 |
| VQC1000/2000 S kit (Serial transmission) EX250 | P.566 |
| VQC1000/2000 S kit (Serial transmission) EX260 | P.567 |
| VQC1000/2000 S kit (Serial transmission) EX126 | P.570 |
| VQC1000/2000 F kit (D-sub connector) | P.572 |
| VQC1000/2000 P kit (Flat ribbon cable) | P.574 |
| VQC1000/2000 T kit (Terminal block box) | P.576 |
| VQC1000/2000 L kit (Lead wire) | P.578 |
| VQC1000/2000 M kit (Circular connector) | P.580 |
| VQC1000/2000 Construction | P.582 |
| VQC1000/2000 Exploded View of Manifold | P.584 |
| VQC1000/2000 Manifold Optional Parts | P.588 |
| VQC1000/2000 Specific Product Precautions | P.595 |

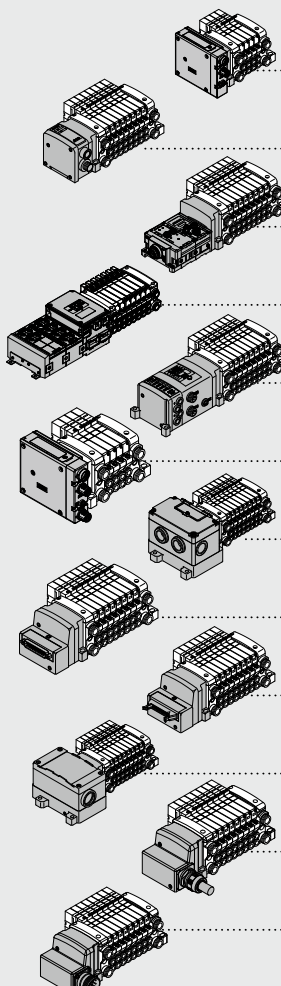

| |
|---------|
| SV |
| SYJ |
| SZ |
| VF |
| VP4 |
| VQ 1/2 |
| VQ 4/5 |
| VQC 1/2 |
| VQC 4/5 |
| VQZ |
| SQ |
| VFS |
| VFR |
| VQ7 |


Base Mounted Plug-in Unit

VQC1000 Series



Refer to page 555 for details on manifolds that support safety communication (PROFIsafe).

How to Order Manifold

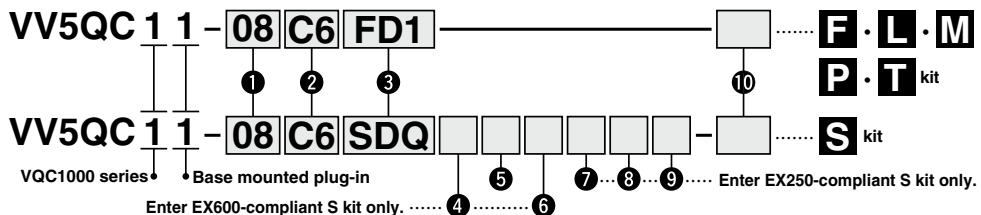

1 Valve stations

| | |
|----|-----------|
| 01 | 1 station |
| : | : |

The maximum number of stations differs depending on the electrical entry. (Refer to 1 Kit type/Electrical entry/Cable length.)
 Note) In case of compatibility with the S kit/AS-Interface, the maximum number of solenoids is as shown below, so please be careful of the number of stations.
 • 8 in/8 out: Maximum 8 solenoids
 • 4 in/4 out: Maximum 4 solenoids

2 Cylinder port size

| | |
|-----------------------|---|
| C3 | With ø3.2 One-touch fitting |
| C4 | With ø4 One-touch fitting |
| C6 | With ø6 One-touch fitting |
| M5 | M5 thread |
| CM | Mixed sizes and with port plug |
| L3 | Top ported elbow with ø3.2 One-touch fitting |
| L4 | Top ported elbow with ø4 One-touch fitting |
| L6 | Top ported elbow with ø6 One-touch fitting |
| L5 | M5 thread |
| B3 | Bottom ported elbow with ø3.2 One-touch fitting |
| B4 | Bottom ported elbow with ø4 One-touch fitting |
| B6 | Bottom ported elbow with ø6 One-touch fitting |
| B5 | M5 thread |
| LM | Elbow port, mixed sizes (Including upward, downward piping and mixed) |
| MM ^{Note 2)} | Mixed size for different types of piping, option installed |

Note 1) Indicate the size by means of the manifold specification sheet in case of "CM", "LM", "NM".
 Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.
 Note 3) Symbols for inch sizes are as follows:
 • N1: ø1/8" • N3: ø5/32"
 • N7: ø1/4" • NM: Mixed
 The top ported elbow is LN□ and the bottom ported elbow is BN□.

5 SI unit output polarity

| SI unit output polarity | EX250 integrated-type (I/O) serial transmission system | | | | |
|-------------------------|--|-------------|--------------|---------|--------------------------|
| | DeviceNet [®] | PROFIBUS DP | AS-Interface | CANopen | EtherNet/IP [™] |
| NH Positive common | — | — | — | — | — |
| N Negative common | ○ | ○ | ○ | ○ | ○ |

| SI unit output polarity | EX500 Gateway Decentralized System 2 (128 pins) | EX500 Gateway Decentralized System (64 pins) | EX260 integrated-type (for output) serial transmission system | | | | | | EX126 integrated-type (for output) serial transmission system | |
|-------------------------|---|--|---|-------------|---------|----------|----------|--------------------------|---|--------------------|
| | | | DeviceNet [®] | PROFIBUS DP | CC-Link | EtherCAT | PROFINET | EtherNet/IP [™] | | Ethernet POWERLINK |
| NH Positive common | — | — | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| N Negative common | — | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | — |

| SI unit output polarity | EX600 integrated-type (I/O) serial transmission system (Fieldbus system) | | | | | | | | |
|-------------------------|--|-------------|---------|--------------------------|----------|----------|---|-----------------------------------|-----------------|
| | DeviceNet [®] | PROFIBUS DP | CC-Link | EtherNet/IP [™] | EtherCAT | PROFINET | EtherNet/IP [™] compatible wireless base | PROFINET compatible wireless base | Wireless remote |
| NH Positive common | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| N Negative common | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |

* Select "Nil" for without SI unit (SD0□).

4 End plate type (Enter EX600-compliant S kit only.)

| | |
|-----|---|
| Nil | Without end plate |
| 2 | M12 power supply connector, B-coded |
| 3 | 7/8 inch power supply connector |
| 4 | M12 power supply connector IN/OUT, A-coded, Pin arrangement 1 |
| 5 | M12 power supply connector IN/OUT, A-coded, Pin arrangement 2 |

Note) Without SI unit, the symbol is nil.
 * The pin layout for "4" and "5" pin connector is different.

6 I/O unit stations (Enter EX600-compliant S kit only.)

| | |
|-----|------------|
| Nil | None |
| 1 | 1 station |
| : | : |
| 9 | 9 stations |

Note 1) Without SI unit, the symbol is nil.
 Note 2) SI unit is not included in I/O unit stations.
 Note 3) When I/O unit is selected, it is shipped separately, and assembled by customer. Refer to the attached operation manual for mounting method.

7 Number of input blocks (Enter EX250-compliant S kit only.)

| | |
|-----|-----------------------------------|
| Nil | Without SI unit/input block (SD0) |
| 0 | Without input block |
| 1 | With 1 input block |
| : | : |
| 8 | With 8 input blocks |

Note) For the S kit compatible with AS-Interface, the maximum number of stations is limited. Refer to page 805 in Best Pneumatics No. 1-1 for details.

8 Input block type (Enter EX250-compliant S kit only.)

| | |
|-----|-----------------------|
| Nil | Without input block |
| 1 | M12, 2 inputs |
| 2 | M12, 4 inputs |
| 3 | M8, 4 inputs (3 pins) |


9 Input block specification (Enter EX250-compliant S kit only.)

| | |
|-----|---|
| Nil | PNP sensor input or without input block |
| N | NPN sensor input |

10 Option

| | |
|-----------------------|--|
| Nil | None |
| B ^{Note 2)} | All stations with back pressure check valve |
| D | With DIN rail (Rail length: Standard) ^{Note 7)} |
| D□ ^{Note 3)} | With DIN rail (Rail length: Special) ^{Note 7)} |
| K ^{Note 4)} | Special wiring spec. (Except double wiring) |
| N ^{Note 10)} | With name plate |
| R ^{Note 5)} | External pilot |
| S ^{Note 6)} | Direct EXH outlet with built-in silencer |

Note 1) When two or more symbols are specified, indicate them alphabetically. Example - BRS
 Note 2) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
 Note 3) For special DIN rail length, indicate "D□". (Enter the number of stations inside □.)
 Example - D08
 In this case, stations will be mounted on a DIN rail for 8 stations regardless of the actual number of manifold stations.
 The specified number of stations must be larger than the number of stations on the manifold. Indicate "-D0" for the option without DIN rail.
 Note 4) When single wiring and double wiring are mixed, specify wiring type of each station by means of the manifold specification sheet.
 Note 5) For external pilot option, "-R", indicate the external pilot specification "R" for the applicable valves as well.
 Note 6) Built-in silencer type does not satisfy IP67.
 Note 7) When "Without SI unit (SD0, SD60)" is specified, "With DIN rail (D)" cannot be selected.
 Note 8) When changing the specifications of the EX600 from no DIN rail to DIN rail mounting, please consult SMC.
 Note 9) DIN rail is not attached (but shipped together) on the manifold in case of the EX600 with DIN rail. Refer to back page 597 for mounting method.
 Note 10) When mounting the blanking plate with connector and the slide locking manual type valve by ordering only the manifold, order the name plate separately. For details, refer to page 589.

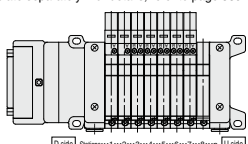

* Stations are counted from station 1 on the D-side.


Refer to Best Pneumatics No. 1-1 and the Operation Manual for the details of EX600 Integrated-type (For I/O) Serial Transmission System. Please download the Operation Manual via our website, <http://www.smcworld.com>

EX250 series PROFIBUS DP compatible products (Ⓚ Kit type/Electrical entry/Cable length/Symbol: SDN) are to be discontinued as of November 2022. As a substitute, please consider the use of an EX600 series product (Ⓚ Kit type/Electrical entry/Cable length/Symbol: SD6N). However, keep in mind that the product specifications, external appearance, etc., differ.
 EX600 series EtherCAT compatible products (Ⓚ Kit type/Symbol: SD6D) are to be discontinued as of October 2022.
 As a substitute, please consider the use of an EX260 series product (SI unit specification/Symbol: SDA). However, keep in mind that the product specifications, external appearance, etc., differ.
 For details, please contact your SMC sales representative.

3 Kit type/Electrical entry/Cable length

* Numbers in parentheses represent the maximum number of solenoids in case of mixed single and double wiring. The maximum number of stations is determined by the total number of solenoids. When ordering mixed wiring, please add the option symbol "K".


S kit (Serial transmission: EX500 gateway-type)

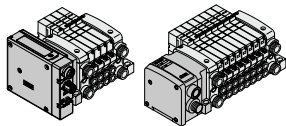

Note) A separate gateway unit and communication cable are required.


| | | | |
|------|---|-------------------------------|-----------------------|
| SD0 | Without SI unit | — | — |
| SDA3 | EX500 Gateway Decentralized System 2 (128 points) | 32 outputs ^{Note 1)} | 1 to 12 stations (24) |
| SDA2 | EX500 Gateway Decentralized System (64 points) | 16 outputs | 1 to 8 stations (16) |

S kit (Serial transmission: EX260 integrated-type (for output))

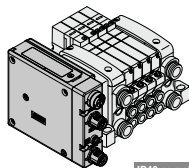

SI unit: EX260 IP67 compliant

 S kit (Serial transmission (Fieldbus system): EX600 integrated-type (I/O))




IP67 compliant

SI unit: EX600

| | | | |
|-------|--|------------------|------|
| SD60 | Without SI unit | — | — |
| SD6Q | DeviceNet® | — | — |
| SD6N | PROFIBUS DP | — | — |
| SD6V | CC-Link | — | — |
| SD6F | PROFINET | — | — |
| SD6FA | PROFINET (IO-Link unit) | 1 to 12 stations | (24) |
| SD6ZE | EtherNet/IP™ (1 port) | — | — |
| SD6EA | EtherNet/IP™ (2 port) | — | — |
| SD6D | EtherCAT | — | — |
| SD6WE | EtherNet/IP™ compatible wireless base™ (5) | — | — |
| SD6WF | PROFINET compatible wireless base™ (5) | — | — |
| SD6WS | Wireless remote ^{Note 5)} | — | — |

S kit (Serial transmission: EX250 integrated-type (I/O))

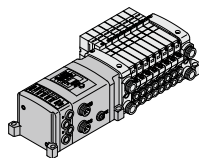


SI unit: EX250

IP67 compliant

| | | |
|-------|--|-----------------------|
| SD0 | Without SI unit | 1 to 12 stations |
| SDQ | DeviceNet® | (24) |
| SDN | PROFIBUS DP | |
| SDTA | AS-Interface, 8 in/8 out, 31 slave modes, 2 power supply systems | 1 to 4 stations (8) |
| SDTB | AS-Interface, 4 in/4 out, 31 slave modes, 2 power supply systems | 1 to 2 stations (4) |
| SDTC | AS-Interface, 8 in/8 out, 31 slave modes, 1 power supply systems | 1 to 4 stations (8) |
| SDTD | AS-Interface, 4 in/4 out, 31 slave modes, 1 power supply systems | 1 to 2 stations (4) |
| SDY | CANopen | 1 to 12 stations (24) |
| SDZEN | EtherNet/IP™ | (24) |

| Symbol | Protocol | Number of outputs | Communication connector | Stations |
|--------|--------------------|-------------------|-------------------------|-----------------------|
| SD0 | | Without SI unit | | |
| SQA | DeviceNet® | 32 | M12 | 1 to 12 stations (24) |
| SQB | | 16 | | 1 to 8 stations (16) |
| SNA | PROFIBUS DP | 32 | M12 | 1 to 12 stations (24) |
| SNB | | 16 | | 1 to 8 stations (16) |
| SNC | | 32 | | 1 to 12 stations (24) |
| SND | | 16 | | 1 to 8 stations (16) |
| SVA | CC-Link | 32 | M12 | 1 to 12 stations (24) |
| SVB | | 16 | | 1 to 8 stations (16) |
| SDA | EtherCAT | 32 | M12 | 1 to 12 stations (24) |
| SDB | | 16 | | 1 to 8 stations (16) |
| SFA | PROFINET | 32 | M12 | 1 to 12 stations (24) |
| SFB | | 16 | | 1 to 8 stations (16) |
| SEA | EtherNet/IP™ | 32 | M12 | 1 to 12 stations (24) |
| SEB | | 16 | | 1 to 8 stations (16) |
| SGA | Ethernet POWERLINK | 32 | M12 | 1 to 12 stations (24) |
| SGB | | 16 | | 1 to 8 stations (16) |
| SKA | IO-Link | 32 | M12 | 1 to 12 stations (24) |

S kit (Serial transmission: EX126 integrated-type (for output))

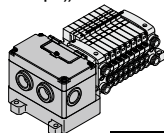


SI unit: EX126

IP67 compliant

| | | |
|------|---------|----------------------|
| SDVB | CC-Link | 1 to 8 stations (16) |
|------|---------|----------------------|

F kit (D-sub connector)

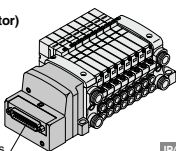


25 pins

IP40 compliant

| | | | |
|-----|--|-----------------------|---|
| FD0 | D-sub connector (25P) without cable | — | — |
| FD1 | D-sub connector (25P) with 1.5 m cable | — | — |
| FD2 | D-sub connector (25P) with 3.0 m cable | 1 to 12 stations (24) | |
| FD3 | D-sub connector (25P) with 5.0 m cable | — | — |

P kit (Flat ribbon cable)

Note) For a 20P flat ribbon cable, the cable assembly must be ordered separately.

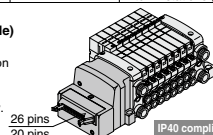


26 pins

20 pins

IP40 compliant

| | | | |
|-----|--|-----------------------|---|
| PDD | Flat ribbon cable (26P) without cable | — | — |
| PD1 | Flat ribbon cable (26P) with 1.5 m cable | — | — |
| PD2 | Flat ribbon cable (26P) with 3.0 m cable | 1 to 12 stations (24) | |
| PD3 | Flat ribbon cable (26P) with 5.0 m cable | — | — |
| PDC | Flat ribbon cable (20P) without cable | 1 to 9 stations (18) | |


T kit (Terminal block box)

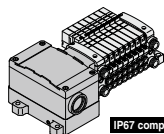

IP67 compliant

| | | |
|-----|--------------------|-----------------------|
| TD0 | Terminal block box | 1 to 10 stations (20) |
|-----|--------------------|-----------------------|

 
L kit (Lead wire)



IP67 compliant

| | | | |
|-----|--------------------------------------|-----------------------|---|
| LD0 | Lead wire (25 cores) 0.6 m lead wire | — | — |
| LD1 | Lead wire (25 cores) 1.5 m lead wire | 1 to 12 stations (24) | |
| LD2 | Lead wire (25 cores) 3.0 m lead wire | — | — |

M kit (Circular connector)

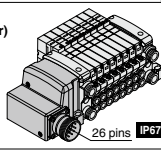

26 pins

IP67 compliant

| | | | |
|-----|---|-----------------------|---|
| MD0 | Circular connector (26P) without cable | — | — |
| MD1 | Circular connector (26P) with 1.5 m cable | — | — |
| MD2 | Circular connector (26P) with 3.0 m cable | 1 to 12 stations (24) | |
| MD3 | Circular connector (26P) with 5.0 m cable | — | — |

* The maximum number of stations displayed in parentheses is applied to the special wiring specifications. (Option "K")
 Note 1) When using the SI unit with 32 outputs, use the GW unit compatible with the EX500 Gateway Decentralized System 2 (128 points).

Note 2) When selecting SI units with SDTC or SDTD specifications, there are limits to the supply current from the SI unit to the input block or valve. Refer to page 805 in Best Pneumatics No. 1-1 for details.

Note 3) When selecting SI units with SDZCN specifications only, IP40 is compatible. (All other SI units are IP67 compliant.)
 Note 4) For the SI unit part no., refer to page 546
 Note 5) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

VQC1000 Series

Note that the EX250-SPR1 PROFIBUS DP compatible SI unit is to be discontinued as of November 2022.

Note that EX600 series EtherCAT compatible SI units (EX600-SEC1 and EX600-SEC2) are to be discontinued as of October 2022.

SI Unit Part No.

EX500 Gateway Decentralized System 2 (128 points)

| Symbol | SI unit part no. | | Page |
|-------------|-----------------------|--|-------|
| | Negative common (PNP) | | |
| SDA3 | EX500-S103 | | P.585 |

EX500 Gateway Decentralized System (64 points)

| Symbol | SI unit part no. | | Page |
|-------------|-----------------------|-----------------------|-------|
| | Positive common (NPN) | Negative common (PNP) | |
| SDA2 | EX500-Q001 | EX500-Q101 | P.585 |

EX250

| Symbol | Compatible protocol | SI unit part no. | Page |
|--------------|--|------------------|-------|
| SDQ | DeviceNet® | EX250-SDN1 | P.586 |
| SDN | PROFIBUS DP | EX250-SPR1 | |
| SDTA | AS-Interface, 8 in/8 out, 31 slave modes, 2 power supply systems | EX250-SAS3 | |
| SDTB | AS-Interface, 4 in/4 out, 31 slave modes, 2 power supply systems | EX250-SAS5 | |
| SDTC | AS-Interface, 8 in/8 out, 31 slave modes, 1 power supply systems | EX250-SAS7 | |
| SDTD | AS-Interface, 4 in/4 out, 31 slave modes, 1 power supply systems | EX250-SAS9 | |
| SDY | CANopen | EX250-SCA1A | |
| SDZEN | EtherNet/IP™ | EX250-SEN1 | |

EX600

| Symbol | Compatible protocol | SI unit part no. | | Page |
|--------------|--|-----------------------|-----------------------|-------|
| | | Positive common (NPN) | Negative common (PNP) | |
| SD6Q | DeviceNet® | EX600-SDN2A | EX600-SDN1A | P.585 |
| SD6N | PROFIBUS DP | EX600-SPR2A | EX600-SPR1A | |
| SD6V | CC-Link | EX600-SMJ2 | EX600-SMJ1 | |
| SD6F | PROFINET | EX600-SPN2 | EX600-SPN1 | |
| SD6FA | PROFINET (IO-Link unit) | EX600-SPN4 | EX600-SPN3 | |
| SD6ZE | EtherNet/IP™ (1 port) | EX600-SEN2 | EX600-SEN1 | |
| SD6EA | EtherNet/IP™ (2 port) | EX600-SEN4 | EX600-SEN3 | |
| SD6D | EtherCAT | EX600-SEC2 | EX600-SEC1 | |
| SD6WE | EtherNet/IP™ compatible wireless base type | EX600-WEN2 | EX600-WEN1 | |
| SD6WF | PROFINET compatible wireless base type | EX600-WPN2 | EX600-WPN1 | |
| SD6WS | Wireless remote (Note) | EX600-WSV2 | EX600-WSV1 | |

Note) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

EX126

| Symbol | Compatible protocol | SI unit part no. | Page |
|-------------|---------------------|------------------|-------|
| SDVB | CC-Link | EX126D-SMJ1 | P.586 |


EX260

| Symbol | Compatible protocol | Number of outputs | SI unit part no. | | Communication connector | Page |
|------------|---------------------|-------------------|-----------------------|-----------------------|-------------------------|-------|
| | | | Positive common (NPN) | Negative common (PNP) | | |
| SQA | DeviceNet® | 32 | EX260-SDN2 | EX260-SDN1 | M12 | P.586 |
| SQB | | | EX260-SDM4 | EX260-SDN3 | | |
| SNA | PROFIBUS DP | 32 | EX260-SPR2 | EX260-SPR1 | | |
| SNB | | | EX260-SPR4 | EX260-SPR3 | | |
| SNC | D-sub (Note) | 32 | EX260-SPR6 | EX260-SPR5 | | |
| SND | | | EX260-SPR8 | EX260-SPR7 | | |
| SVA | CC-Link | 32 | EX260-SMJ2 | EX260-SMJ1 | M12 | |
| SVB | | | EX260-SMJ4 | EX260-SMJ3 | | |
| SDA | EtherCAT | 32 | EX260-SEC2 | EX260-SEC1 | M12 | |
| SDB | | | EX260-SEC4 | EX260-SEC3 | | |
| SFA | PROFINET | 32 | EX260-SPN2 | EX260-SPN1 | M12 | |
| SFB | | | EX260-SPN4 | EX260-SPN3 | | |
| SEA | EtherNet/IP™ | 32 | EX260-SEN2 | EX260-SEN1 | M12 | |
| SEB | | | EX260-SEN4 | EX260-SEN3 | | |
| SQA | Ethernet POWERLINK | 32 | — | EX260-SPL1 | M12 | |
| SCB | | | — | EX260-SPL3 | | |
| SKA | IO-Link | 32 | — | EX260-SIL1 | M12 | |

Note) When the communication connector specification is D-sub, the enclosure is IP40. (IP67 for other specifications)

For details about the EX series (Serial transmission system), refer to Best Pneumatics No. 1-1 and the Operation Manual. Please download the Operation Manual via SMC website, <http://www.smcworld.com>

 How to Order Valves



(A) Type of actuation

| | | | |
|---|---|------------|--|
| 1 | 2-position single (A)4 2(B) (R1)5 1 3(R2) (P) | Note) A | 4-position dual 3-port valve (A) 4(A) 2(B) (R1) 5 1 (P) 3(R2) N.C. N.C. |
| | 2-position double (Metal) (A)4 2(B) (R1)5 1 3(R2) (P) | | 4-position dual 3-port valve (B) 4(A) 2(B) (R1) 5 1 (P) 3(R2) N.O. N.O. |
| 2 | 2-position double (Rubber) (A)4 2(B) (R1)5 1 3(R2) (P) | Note) C | 4-position dual 3-port valve (C) 4(A) 2(B) (R1) 5 1 (P) 3(R2) N.C. N.O. |
| | 3-position closed center (A)4 2(B) (R1)5 1 3(R2) (P) | | Note) Rubber seal only |
| 3 | 3-position exhaust center (A)4 2(B) (R1)5 1 3(R2) (P) | | |
| 4 | 3-position pressure center (A)4 2(B) (R1)5 1 3(R2) (P) | | |

(B) Seal

| | |
|---|-------------|
| 0 | Metal seal |
| 1 | Rubber seal |

(C) Function

| | |
|-----------|--------------------------------------|
| Nil | Standard (0.4 W) |
| B | High-speed response type (0.95 W) |
| K Note 1) | High-pressure type (1.0 MPa, 0.95 W) |
| N Note 2) | Negative common |
| R Note 3) | External pilot |

* When two or more symbols are specified, indicate them alphabetically. However, combination of "B" and "K" is not possible.

Note 1) Metal seal only

Note 2) When "COM" is specified for the SI unit, select and mount the valve of negative common.

Note 3) Dual 3-port is not applicable.

(D) Coil voltage

| | |
|---------|--------|
| 5 Note) | 24 VDC |
| 6 | 12 VDC |

Note) Only 24 VDC is available with the S kit.

(E) Light/surge voltage suppressor

| | |
|--------------|------------------|
| Nil | Yes |
| E Note 1, 2) | None (Non-polar) |

Note 1) Not applicable to the S kit.

Note 2) A combination of "Function N (Negative common)" and "E" is unavailable.

Since "E" has no polarity, it can also be used as a negative common. Selection of "Function N" is not required.


(F) Manual override

| | |
|-----|--|
| Nil | Non-locking push type (Tool required) |
| B | Push-turn locking type (Tool required) |
| C | Turn locking type (Manual) |
| D | Slide locking type (Manual) |

How to Order Manifold Assembly

Example

Manifold
Power supply with
M12 connector

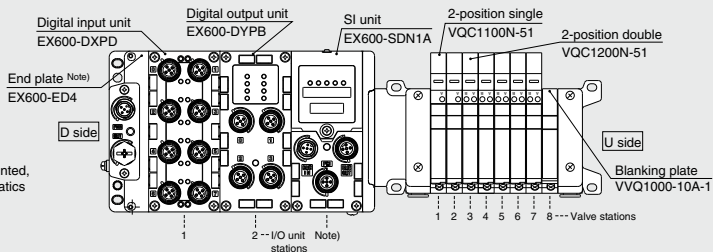

For the I/O unit part number mounted, refer to page 815 in Best Pneumatics No. 1-1.

- Digital unit
- Analog unit

Serial transmission kit

- VV50C11-08C6SD604N2 1 set Manifold base part number
- * VQC1100N-51 2 sets Valve part number (Stations 1 to 2)
- * VQC1200N-51 5 sets Valve part number (Stations 3 to 7)
- * VVQ1000-10A-1 1 set Blanking plate number (Station 8)
- * EX600-DXPD 1 set I/O unit part number (Station 1)
- * EX600-DYPB 1 set I/O unit part number (Station 2)

The asterisk denotes the symbol for assembly. Prefix it to the part nos. of the solenoid valve, etc.

Enter in order starting from the first station on the D-side. When entry of part numbers becomes complicated, indicate with the manifold specification sheet.


Enter in order starting from the first station on the D-side. When entry of part numbers becomes complicated, indicate with the manifold specification sheet.

Note) Do not enter the SI unit part number and the end plate part number together.


VQC1000 Series

Manifold Options Refer to pages 588 through to 591 for details.


Blanking plate assembly
VVQ1000-10A-1

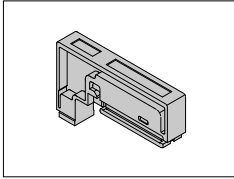


Individual SUP spacer
VVQ1000-P-1-C₆
N₇

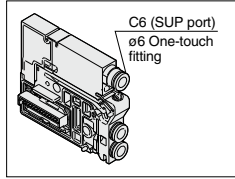


Individual EXH spacer
VVQ1000-R-1-C₆
N₇

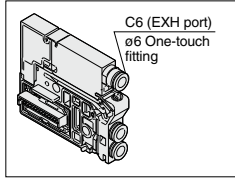


SUP block plate
VVQ1000-16A

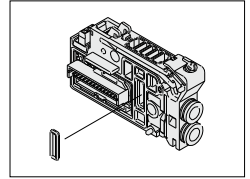


Blanking plate with connector
VVQ1000-1C-□-□

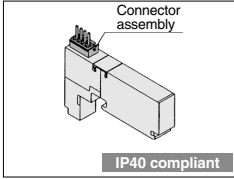


EXH block plate assembly
VVQC1000-19A-S₃-C₄
D₁-N₁-N₃
N₇

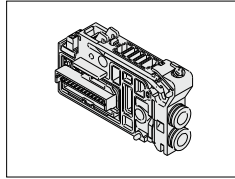


Back pressure check valve assembly [-B]
VVQ1000-18A

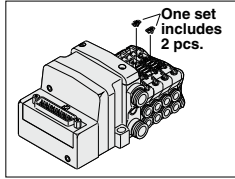


Name plate [-N]
VVQ1000-N_{NC}-1 (to Max. stations) (-X4)

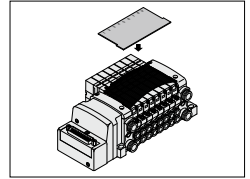


Blanking plug
KQ2P-□

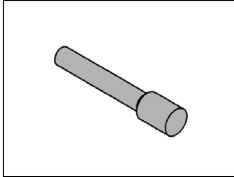


Port plug
VVQ0000-58A

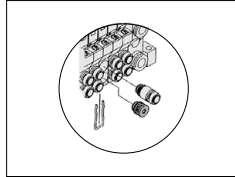


Elbow fitting assembly
VVQ1000-F-L□

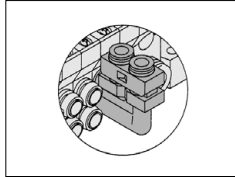


DIN rail mounting bracket [-D]
VVQ1000-57A
(For F/L/M/P/S (EX500) kit)
VVQC1000-57A-S
(For S (EX250) kit)
VVQC1000-57A-T (For T kit)

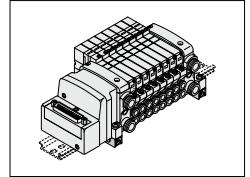

Direct EXH outlet with built-in silencer [-S]

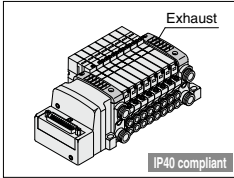


Dual flow fitting assembly
VVQ1000-52A-N₉

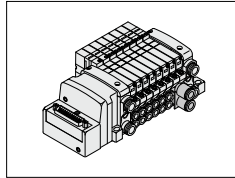

Special electrical wiring specifications [-K]

Wiring example)
D-sub connector

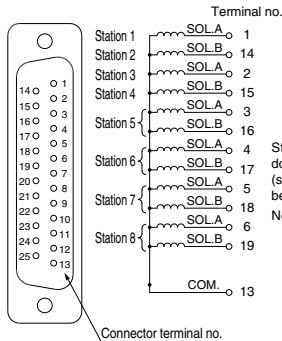

Standard manifolds are for double wiring, but mixed wiring (single and double wiring) can be specified as an option.

Note) Refer to the pages of each kit for details.

F kit P. 572


P kit P. 574

T kit P. 576


L kit P. 578

M kit P. 580

Silencer (For EXH port)
AN15-C08

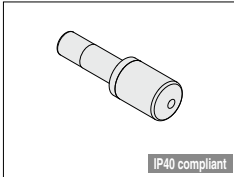

Double check block
VVQ1000-FPG-□-□-□

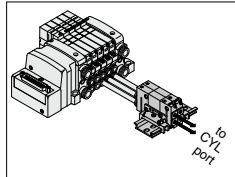

| |
|-------------------|
| SV |
| SYJ |
| SZ |
| VF |
| VP4 |
| VQ 1/2 |
| VQ 4/5 |
| VQC 1/2 |
| VQC 4/5 |
| VQZ |
| SQ |
| VFS |
| VFR |
| VQ7 |

Base Mounted

Plug-in Unit

VQC2000 Series




S kit

The selectable items vary for each series. Select from the applicable item numbers in the table below.

| Series | Item number (Refer to pages 550, 551 and 551-1) |
|---------------|---|
| EX600 | 1, 2, 4, 7, 8, 9, 10 |
| EX245 | 1, 2, 4, 5, 6, 8 |
| EX250 | 1, 2, 4, 8, 10, 11, 12, 13 |
| EX500,260,126 | 1, 2, 4, 8, 10 |

Refer to page 555 for details on manifolds that support safety communication (PROFIsafe).

How to Order Manifold

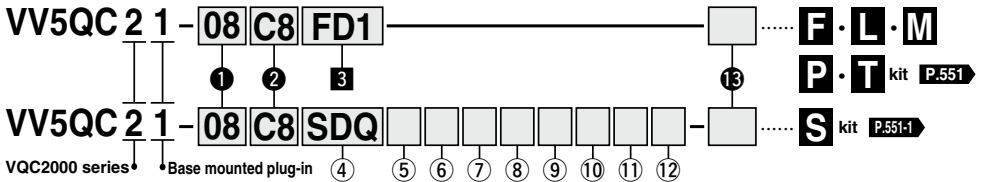

1 Valve stations

| | |
|----|-----------|
| 01 | 1 station |
| ⋮ | ⋮ |

The maximum number of stations differs depending on the electrical entry. (Refer to 4) Kit type/Electrical entry/Cable length.)

Note) In case of compatibility with the S kit/AS-Interface, the maximum number of solenoids is as shown below, so please be careful of the number of stations.

- 8 in/8 out: Maximum 8 solenoids
- 4 in/4 out: Maximum 4 solenoids

2 Cylinder port size

| | |
|----|---|
| C4 | With ø4 One-touch fitting |
| C6 | With ø6 One-touch fitting |
| C8 | With ø8 One-touch fitting |
| CM | Mixed sizes and with port plug |
| L4 | Top ported elbow with ø4 One-touch fitting |
| L6 | Top ported elbow with ø6 One-touch fitting |
| L8 | Top ported elbow with ø8 One-touch fitting |
| B4 | Bottom ported elbow with ø4 One-touch fitting |
| B6 | Bottom ported elbow with ø6 One-touch fitting |
| B8 | Bottom ported elbow with ø8 One-touch fitting |
| LM | Elbow port, mixed sizes (Including upward, downward piping and mixed) |
| MM | Mixed size for different types of piping, option installed |

Note 1) Indicate the size by means of the manifold specification sheet in case of "CM", "LM", "NM".

Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.

Note 3) Symbols for inch sizes are as follows:

- N3: ø5/32" • N7: ø1/4"
- N9: ø5/16" • NM: Mixed
- The top ported elbow is LN□ and the bottom ported elbow is BN□.

5 With or without I/O modules (Enter EX245-compliant S kit only.)

| | |
|-----|--------------------|
| Nil | Without I/O module |
| Y | With I/O module |

6 Number of I/O modules (Enter EX245-compliant S kit only.)

| | |
|-----|--------------------------------------|
| Nil | Without I/O module (Without SI Unit) |
| 1 | 1 station |
| ⋮ | ⋮ |
| 8 | 8 stations |

7 End plate type (Enter EX600-compliant S kit only.)

| | |
|-----|--|
| Nil | Without end plate |
| 2 | M12 power supply connector, B-coded |
| 3 | 7/8 inch power supply connector |
| 4 | M12 power supply connector INOUT, A-coded, Pin arrangement 1 |
| 5 | M12 power supply connector INOUT, A-coded, Pin arrangement 2 |

Note) Without SI unit, the symbol is nil.

* The pin layout for "4" and "5" pin connector is different.

9 I/O unit stations (Enter EX600-compliant S kit only.)

| | |
|-----|------------|
| Nil | None |
| 1 | 1 station |
| ⋮ | ⋮ |
| 9 | 9 stations |

Note 1) Without SI unit, the symbol is nil.

Note 2) SI unit is not included in I/O unit stations.

Note 3) When I/O unit is selected, it is shipped separately, and assembled by customer. Refer to the attached operation manual for mounting method.

10 Number of input blocks (Enter EX250-compliant S kit only.)

| | |
|-----|-----------------------------------|
| Nil | Without SI unit/input block (SDO) |
| 0 | Without input block |
| 1 | With 1 input block |
| ⋮ | ⋮ |
| 8 | With 8 input blocks |

Note) For the S kit compatible with AS-Interface, the maximum number of stations is limited. Refer to page 805 in Best Pneumatics No. 1-1 for details.

11 Input block type (Enter EX250-compliant S kit only.)

| | |
|-----|-----------------------|
| Nil | Without input block |
| 1 | M12, 2 inputs |
| 2 | M12, 4 inputs |
| 3 | M8, 4 inputs (3 pins) |

12 Input block specification (Enter EX250-compliant S kit only.)

| | |
|-----|---|
| Nil | PNP sensor input or without input block |
| N | NPN sensor input |

13 Option

| | |
|-----|---|
| Nil | None |
| B | All stations with back pressure check valve |
| D | With DIN rail (Rail length: Standard) Note 9) |
| D□ | With DIN rail (Rail length: Special) Note 9) |
| K | Special wiring spec. (Except double wiring) |
| N | With name plate |
| R | External pilot |
| S | Direct EXH outlet with built-in silencer |
| T | Branched P and R ports on U-side |

Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -BRS

Note 2) When a back pressure check valve is desired, and it is to be installed only on certain manifold stations, specify the mounting position by means of the manifold specification sheet.

Note 3) When DIN rail mounting (with DIN rail) is selected with a power supply 7/8 inch connector for end plate of the VQC2000 series, and I/O unit station number is 9, and max. valve station number is 23, DIN rail mount cannot be specified for 24 stations. (Refer to the DIN rail full length on page 565.)

Note 4) For special DIN rail length, indicate "D□". (Enter the number of stations inside □.) Example: -D08
In this case, stations will be mounted on a DIN rail for 8 stations regardless of the actual number of manifold stations.

The specified number of stations must be larger than the number of stations on the manifold. Indicate "-D0" for the option without DIN rail.

Note 5) When single wiring and double wiring are mixed, specify wiring type of each station by means of the manifold specification sheet.

Note 6) For external pilot option, "-R", indicate the external pilot specification "R" for the applicable valves as well.

Note 7) Built-in silencer type does not satisfy IP67.

Note 8) SUP and EXH ports on the U-side (on cylinder port side and coil side is branched.) Port is equipped with One-touch fitting for ø12.

Note 9) When "Without SI unit (SDO, SD60)" and EX245 series are specified, "With DIN rail (D)" cannot be selected.







Note 10) When changing the specifications of the EX600 from no DIN rail to DIN rail mounting, please consult SMC.

Note 11) DIN rail is not attached (but shipped together) on the manifold in case of the EX600 with DIN rail. Refer to page 597 for mounting method.

Note 12) When mounting the slide locking manual type valve by ordering only the manifold, order the name plate separately. For details, refer to page 593.

3 Kit type/Electrical entry/Cable length

* Numbers in parentheses represent the maximum number of solenoids in case of mixed single and double wiring. The maximum number of stations is determined by the total number of solenoids. When ordering mixed wiring, please add the option symbol "K".
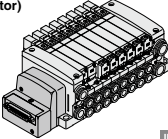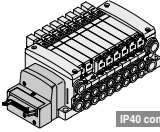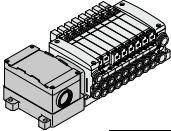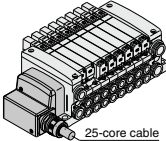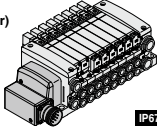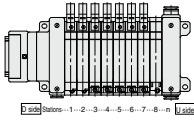
| | | |
|--|---|--|
| <p>F kit (D-sub connector)</p>  <p style="text-align: right;">IP40 compliant</p> | <p>P kit (Flat ribbon cable)</p> <p>Note) For a 20P flat ribbon cable, the cable assembly must be ordered separately.</p>  <p style="text-align: right;">IP40 compliant</p> | <p>T kit (Terminal block box)</p>  <p style="text-align: right;">IP67 compliant</p> |
| <p>FD0 D-sub connector (25P) without cable</p> <p>FD1 D-sub connector (25P) with 1.5 m cable</p> <p>FD2 D-sub connector (25P) with 3.0 m cable</p> <p>FD3 D-sub connector (25P) with 5.0 m cable</p> | <p>PD0 Flat ribbon cable (26P) without cable</p> <p>PD1 Flat ribbon cable (26P) with 1.5 m cable</p> <p>PD2 Flat ribbon cable (26P) with 3.0 m cable</p> <p>PD3 Flat ribbon cable (26P) with 5.0 m cable</p> | <p>TD0 Terminal block box</p> |
| <p>L kit (Lead wire)</p>  <p style="text-align: right;">25-core cable IP67 compliant</p> | <p>M kit (Circular connector)</p>  <p style="text-align: right;">IP67 compliant</p> |  <p style="text-align: right;">* Stations are counted from station 1 on the D-side.</p> |
| <p>LD0 Lead wire (25 cores) 0.6 m lead wire</p> <p>LD1 Lead wire (25 cores) 1.5 m lead wire</p> <p>LD2 Lead wire (25 cores) 3.0 m lead wire</p> | <p>MD0 Circular connector (26P) without cable</p> <p>MD1 Circular connector (26P) with 1.5 m cable</p> <p>MD2 Circular connector (26P) with 3.0 m cable</p> <p>MD3 Circular connector (26P) with 5.0 m cable</p> | |

| |
|---------|
| SV |
| SYJ |
| SZ |
| VF |
| VP4 |
| VQ 1/2 |
| VQ 4/5 |
| VQC 1/2 |
| VQC 4/5 |
| VQZ |
| SQ |
| VFS |
| VFR |
| VQ7 |


VQC2000 Series

EX250 series PROFIBUS DP compatible products (④ Kit type: SDN) are to be discontinued as of November 2022. As a substitute, please consider the use of an EX600 series product (④ Kit type: SD6N). However, keep in mind that the product specifications, external appearance, etc., differ. EtherCAT compatible products (④ Kit type/Symbol: SD6D) are to be discontinued as of October 2022. For details, please contact your SMC sales representative. As a substitute, please consider the use of an EX260 series product (SI unit specification/Symbol: SDA). However, keep in mind that the product specifications, external appearance, etc., differ. For details, please contact your SMC sales representative.

④ Kit type/Electrical entry/Cable length

* Numbers in parentheses represent the maximum number of solenoids in case of mixed single and double wiring. The maximum number of stations is determined by the total number of solenoids. When ordering mixed wiring, please add the option symbol "K".

S kit (Serial transmission: EX500 gateway-type)

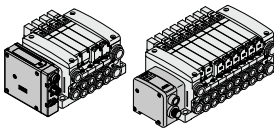


IP67 compliant

SI unit: EX500

Note A) A separate gateway unit and communication cable are required.

| | | | |
|------|---|-------------------------------|-----------------------|
| SD0 | Without SI unit | — | — |
| SDA3 | EX500 Gateway Decentralized System 2 (128 points) | 32 outputs ^{Note 1)} | 1 to 12 stations (24) |
| SDA2 | EX500 Gateway Decentralized System (64 points) | 16 outputs | 1 to 8 stations (16) |

S kit (Serial transmission: EX600 integrated-type (I/O))

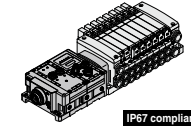


IP67 compliant

SI unit: EX600

| | | |
|-------|--|-----------------------|
| SD60 | Without SI unit | 1 to 12 stations (24) |
| SD6Q | DeviceNet® | |
| SD6N | PROFIBUS DP | |
| SD6V | CC-Link | |
| SD6F | PROFINET | |
| SD6FA | PROFINET (IO-Link unit) | |
| SD6ZE | EtherNet/IP™ (1 port) | |
| SD6EA | EtherNet/IP™ (2 port) | |
| SD6D | EtherCAT | |
| SD6WE | EtherNet/IP™ compatible wireless base ^{Note 5)} | |
| SD6WF | PROFINET compatible wireless base ^{Note 5)} | |
| SD6WS | Wireless remote ^{Note 5)} | |

S kit (Serial transmission: EX245 integrated-type (I/O))

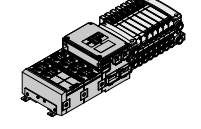


IP65 compliant

SI unit: EX245

| Symbol | Protocol | Communication connector | Power supply connector | Stations |
|--------|-----------------|-------------------------|--------------------------|-----------------------|
| SD0 | Without SI unit | | | |
| SDAAN | PROFIBUS DP | Push/Pull (SR); 2 pcs. | Push/Pull (24 V); 2 pcs. | 1 to 12 stations (24) |
| SDABN | PROFINET | Push/Pull (RH); 2 pcs. | Push/Pull (24 V); 2 pcs. | 1 to 12 stations (24) |
| SDACN | EtherCAT | M12: 2 pcs. | 7/8 inch: 2 pcs. | |

S kit (Serial transmission: EX250 integrated-type (I/O))

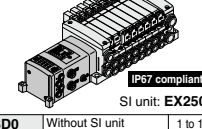


IP67 compliant

SI unit: EX250

| | | | |
|---------|--|--|---------------------|
| SD0 | Without SI unit | 1 to 12 stations | |
| SDQ | DeviceNet® | (24) | |
| SDN | PROFIBUS DP | | |
| SDTA | AS-interface, 8 in/8 out, 31 slave modes, 2 power supply systems | 1 to 4 stations (8) | |
| SDTB | AS-interface, 4 in/4 out, 31 slave modes, 2 power supply systems | 1 to 2 stations (4) | |
| SDTC | AS-interface, 8 in/8 out, 31 slave modes, 1 power supply systems | 1 to 4 stations (8) | |
| Note 2) | SDTD | AS-interface, 4 in/4 out, 31 slave modes, 1 power supply systems | 1 to 2 stations (4) |
| SDY | CANopen | 1 to 12 stations (24) | |
| SDZEN | EtherNet/IP™ | (24) | |

S kit (Serial transmission: EX260 integrated-type (for output))

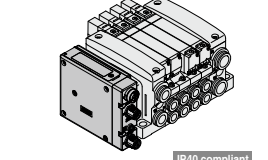


IP40 compliant

IP67 compliant

SI unit: EX260

| Symbol | Protocol | Number of outputs | Communication connector | Stations |
|--------|--------------------|-------------------|--------------------------|-----------------------|
| SD0 | Without SI unit | | | |
| SQA | DeviceNet® | 32 | M12 | 1 to 12 stations (24) |
| SQB | | 16 | | 1 to 8 stations (16) |
| SNA | | 32 | | 1 to 12 stations (24) |
| SNB | | 16 | | 1 to 8 stations (16) |
| SNC | PROFIBUS DP | 32 | D-sub ^{Note 3)} | 1 to 12 stations (24) |
| SD | | 16 | | 1 to 8 stations (16) |
| SVA | | 32 | | 1 to 12 stations (24) |
| SVB | | 16 | | 1 to 8 stations (16) |
| SDA | CC-Link | 32 | M12 | 1 to 12 stations (24) |
| SDB | | 16 | | 1 to 8 stations (16) |
| SFA | EtherCAT | 32 | M12 | 1 to 12 stations (24) |
| SFB | | 16 | | 1 to 8 stations (16) |
| SEA | PROFINET | 32 | M12 | 1 to 12 stations (24) |
| SEB | | 16 | | 1 to 8 stations (16) |
| SGA | EtherNet/IP™ | 32 | M12 | 1 to 12 stations (24) |
| SGB | | 16 | | 1 to 8 stations (16) |
| SKA | Ethernet POWERLINK | 32 | M12 | 1 to 12 stations (24) |
| | IO-Link | 16 | M12 | 1 to 8 stations (16) |
| | | 32 | M12 | 1 to 12 stations (24) |

S kit (Serial transmission: EX126 integrated-type (for output))

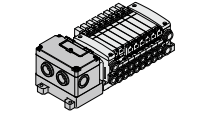

IP67 compliant

SI unit: EX126

| | | |
|------|---------|----------------------|
| SDVB | CC-Link | 1 to 8 stations (16) |
|------|---------|----------------------|


The maximum number of stations displayed in parentheses is applied to the special wiring specifications. (Option "K")
 Note 1) When using the SI unit with 32 outputs, use the GW unit compatible with the EX500 Gateway Decentralized System 2 (128 points).
 Note 2) When selecting SI units with SDTC or SDTD

specifications, there are limits to the supply current from the SI unit to the input block or valve. Refer to page 805 in Best Pneumatics No. 1-1 for details.
 Note 3) When selecting SI units with SDZCN specifications only, IP40 is compatible.
 Note 4) For the SI unit part no., refer to page 552.

Note 5) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

⑧ SI unit output polarity

| SI unit output polarity | EX250 integrated-type (I/O) serial transmission system | | | | |
|--------------------------|--|-------------|--------------|---------|--------------|
| | DeviceNet® | PROFIBUS DP | AS-interface | CANopen | EtherNet/IP™ |
| N Positive common | — | — | — | — | — |
| N Negative common | ○ | ○ | ○ | ○ | ○ |

 

* Stations are counted from station 1 on the D-side.

| SI unit output polarity | EX245 integrated-type (I/O) serial transmission system | EX500 Gateway Decentralized System 2 (128 points) | EX500 Gateway Decentralized System (64 points) | EX260 integrated-type (for output) serial transmission system | | | | | | EX126 integrated-type (for output) serial transmission system | | |
|--------------------------|--|---|--|---|-------------|---------|----------|----------|--------------|---|---------|---------|
| | PROFINET | | | DeviceNet® | PROFIBUS DP | CC-Link | EtherCAT | PROFINET | EtherNet/IP™ | Ethernet POWERLINK | IO-Link | CC-Link |
| N Positive common | — | — | — | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| N Negative common | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |

| SI unit output polarity | EX600 integrated-type (I/O) serial transmission system | | | | | | | | Wireless remote |
|--------------------------|--|-------------|---------|--------------|----------|----------|---------------------------------------|-----------------------------------|-----------------|
| | DeviceNet® | PROFIBUS DP | CC-Link | EtherNet/IP™ | EtherCAT | PROFINET | EtherNet/IP™ compatible wireless base | PROFINET compatible wireless base | |
| N Positive common | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |
| N Negative common | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ | ○ |

* Select "Nil" for without SI unit (SD0C).

Refer to Best Pneumatics No. 1-1 and the Operation Manual for the details of EX600 Integrated-type (For I/O) Serial Transmission System. Please download the Operation Manual via our website, <http://www.smcworld.com>

VQC2000 Series

Note that the EX250-SPR1 PROFIBUS DP compatible SI unit is to be discontinued as of November 2022.

Note that EX600 series EtherCAT compatible SI units (EX600-SEC1 and EX600-SEC2) are to be discontinued as of October 2022.

SI Unit Part No.

EX500 Gateway Decentralized System 2 (128 points)

| Symbol | SI unit part no. | | Page |
|-------------|-----------------------|--|-------|
| | Negative common (PNP) | | |
| SDA3 | EX500-S103 | | P.585 |

EX500 Gateway Decentralized System (64 points)

| Symbol | SI unit part no. | | Page |
|-------------|-----------------------|-----------------------|-------|
| | Positive common (NPN) | Negative common (PNP) | |
| SDA2 | EX500-Q001 | EX500-Q101 | P.585 |

EX600

| Symbol | Compatible protocol | SI unit part no. | | Page |
|--------------|--|-----------------------|-----------------------|-------|
| | | Positive common (NPN) | Negative common (PNP) | |
| SD6Q | DeviceNet® | EX600-SDN2A | EX600-SDN1A | P.585 |
| SD6N | PROFIBUS DP | EX600-SPR2A | EX600-SPR1A | |
| SD6V | CC-Link | EX600-SMJ2 | EX600-SMJ1 | |
| SD6F | PROFINET | EX600-SPN2 | EX600-SPN1 | |
| SD6FA | PROFINET (IO-Link unit) | EX600-SPN4 | EX600-SPN3 | |
| SD6ZE | EtherNet/IP™ (1 port) | EX600-SEN2 | EX600-SEN1 | |
| SD6EA | EtherNet/IP™ (2 port) | EX600-SEN4 | EX600-SEN3 | |
| SD6D | EtherCAT | EX600-SEC2 | EX600-SEC1 | |
| SD6WE | EtherNet/IP™ compatible wireless base ^{Note)} | EX600-WEN2 | EX600-WEN1 | |
| SD6WF | PROFINET compatible wireless base ^{Note)} | EX600-WPN2 | EX600-WPN1 | |
| SD6WS | Wireless remote ^{Note)} | EX600-WSV2 | EX600-WSV1 | |

Note) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

EX245

| Symbol | Compatible protocol | SI unit part no. | Page |
|--------------|---------------------|------------------|-------|
| SDAAN | PROFINET | EX245-SPN1A | P.586 |
| SDABN | | EX245-SPN2A | |
| SDACN | | EX245-SPN3A | |

EX260

| Symbol | Compatible protocol | Number of outputs | SI unit part no. | | Communication connector | Page |
|------------|---------------------|-------------------|-----------------------|-----------------------|-------------------------|-------|
| | | | Positive common (NPN) | Negative common (PNP) | | |
| SQA | DeviceNet® | 32 | EX260-SDN2 | EX260-SDN1 | M12 | P.586 |
| SQB | | 16 | EX260-SDN4 | EX260-SDN3 | | |
| SNA | PROFIBUS DP | 32 | EX260-SPR2 | EX260-SPR1 | D-sub ^{Note)} | |
| SNB | | 16 | EX260-SPR4 | EX260-SPR3 | | |
| SNC | | 32 | EX260-SPR6 | EX260-SPR5 | | |
| SND | | 16 | EX260-SPR8 | EX260-SPR7 | | |
| SVA | CC-Link | 32 | EX260-SMJ2 | EX260-SMJ1 | M12 | |
| SVB | | 16 | EX260-SMJ4 | EX260-SMJ3 | | |
| SDA | EtherCAT | 32 | EX260-SEC2 | EX260-SEC1 | M12 | |
| SDB | | 16 | EX260-SEC4 | EX260-SEC3 | | |
| SFA | PROFINET | 32 | EX260-SPN2 | EX260-SPN1 | M12 | |
| SFB | | 16 | EX260-SPN4 | EX260-SPN3 | | |
| SEA | EtherNet/IP™ | 32 | EX260-SEN2 | EX260-SEN1 | M12 | |
| SEB | | 16 | EX260-SEN4 | EX260-SEN3 | | |
| SGA | Ethernet | 32 | — | EX260-SPL1 | M12 | |
| SGB | POWERLINK | 16 | — | EX260-SPL3 | | |
| SKA | IO-Link | 32 | — | EX260-SIL1 | M12 | |

Note) When the communication connector specification is D-sub, the enclosure is IP40. (IP67 for other specifications)

EX250

| Symbol | Compatible protocol | SI unit part no. | Page |
|--------------|--|------------------|-------|
| SDQ | DeviceNet® | EX250-SDN1 | P.586 |
| SDN | PROFIBUS DP | EX250-SPR1 | |
| SDTA | AS-Interface, 8 in/8 out, 31 slave modes, 2 power supply systems | EX250-SAS3 | |
| SDTB | AS-Interface, 4 in/4 out, 31 slave modes, 2 power supply systems | EX250-SAS5 | |
| SDTC | AS-Interface, 8 in/8 out, 31 slave modes, 1 power supply systems | EX250-SAS7 | |
| SDTD | AS-Interface, 4 in/4 out, 31 slave modes, 1 power supply systems | EX250-SAS9 | |
| SDY | CANopen | EX250-SCA1A | |
| SDZEN | EtherNet/IP™ | EX250-SEN1 | |

EX126

| Symbol | Compatible protocol | SI unit part no. | Page |
|-------------|---------------------|------------------|-------|
| SDVB | CC-Link | EX126D-SMJ1 | P.586 |

For details about the EX series (Serial transmission system), refer to Best Pneumatics No. 1-1 and the Operation Manual. Please download the Operation Manual via SMC website, <http://www.smcworld.com>

How to Order Valves

VQC2 1 0 0 - 5 1

A
B
C
D
E
F

(A) Type of actuation

| | | | |
|----------|--------------------------------|-------------------------|----------------------------------|
| 1 | 2-position single | (Note) A | 4-position dual 3-port valve |
| 2 | 2-position double (Metal) | (Note) B | 4-position dual 3-port valve |
| | 2-position double (Rubber) | (Note) C | 4-position dual 3-port valve |
| 3 | 3-position closed center | (Note) Rubber seal only | |
| 4 | 3-position exhaust center | | |
| 5 | 3-position pressure center | | |

(B) Seal

| | |
|----------|-------------|
| 0 | Metal seal |
| 1 | Rubber seal |

(C) Function

| | |
|--------------------------------|--------------------------------------|
| Nil | Standard (0.4 W) |
| B | High-speed response type (0.95 W) |
| K <small>Note 1</small> | High-pressure type (1.0 MPa, 0.95 W) |
| N <small>Note 2</small> | Negative common |
| R <small>Note 3</small> | External pilot |

* When two or more symbols are specified, indicate them alphabetically. However, combination of "B" and "K" is not possible.

Note 1) Metal seal only

Note 2) When "COM" is specified for the SI unit, select and mount the valve of negative common.

Note 3) Dual 3-port type is not applicable.

(D) Coil voltage

| | |
|------------------------------|--------|
| 5 <small>Note</small> | 24 VDC |
| 6 | 12 VDC |

Note) Only 24 VDC is available with the S kit.

(E) Light/surge voltage suppressor

| | |
|-----------------------------------|------------------|
| Nil | Yes |
| E <small>Note 1, 2</small> | None (Non-polar) |

Note 1) Not applicable to the S kit.

Note 2) A combination of "Function N (Negative common)" and "E" is unavailable.

Since "E" has no polarity, it can also be used as a negative common. Selection of "Function N" is not required.

(F) Manual override

| | | |
|------------|---|--|
| Nil | Non-locking push type (Tool required) | |
| B | Push-turn locking type (Tool required) | |
| C | Turn locking type (Tool required) | |
| D | Slide locking type (Manual) | |

SV

SYJ

SZ

VF

VP4

VQ

1/2

VQ

4/5

VQC

1/2

VQC

4/5

VQZ

SQ

VFS


VFR

VQ7

VQC2000 Series

How to Order Manifold Assembly: EX600*

Example (VV5QC21-□SD6□)

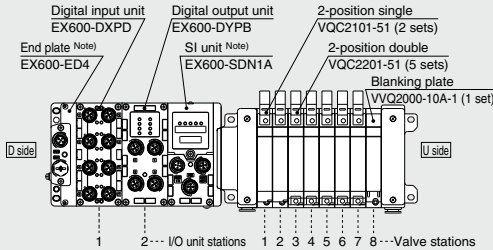


- VV5QC21-08C8SD6Q4N2...1 set (S kit 8-station manifold base part no.)
 - *VQC2101-512 sets (2-position single part no.) (Stations 1 to 2)
 - *VQC2201-515 sets (2-position double part no.) (Stations 3 to 7)
 - *VVQ2000-10A-11 set (Blanking plate) (Station 8)
 - *EX600-DXPD1 set I/O unit part number (Station 1)
 - *EX600-DYPB1 set I/O unit part number (Station 2)
- The asterisk denotes the symbol for assembly.
Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted, then the I/O unit in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) Do not enter the SI Unit part number and the end plate part number together.

How to Order Manifold Assembly: EX245*

Example (VV5QC21-□SDAAN□)

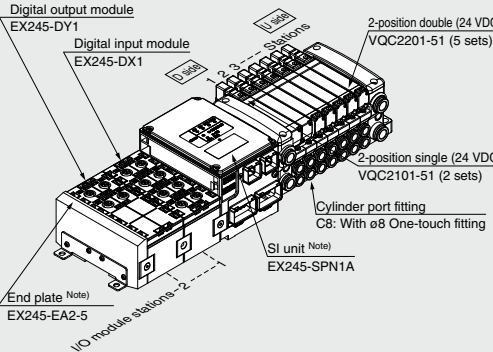

- VV5QC21-07C8SDAANY2...1 set (S kit 7-station manifold base part no.)
 - *VQC2101-512 sets (Single solenoid part no.) (Stations 1 to 2)
 - *VQC2201-515 sets (Double solenoid part no.) (Stations 3 to 7)
 - *EX245-DX11 set (I/O unit part number) (Station 1)
 - *EX245-DY11 set (I/O unit part number) (Station 2)
- The asterisk denotes the symbol for assembly.
Prefix it to the part numbers of the valve etc.

Specify the part numbers for valves and options together beneath the manifold base part number. Besides, when the arrangement will be complicated, specify them by means of the manifold specification sheet.


Note) Do not enter the SI Unit part number and the end plate part number together.

* The EX245/250 I/O module (block) station arrangement is numbered starting from the SI unit side.


VQC2000 Series

Manifold Options Refer to pages 592 through to 594 for details.


Blanking plate assembly
VVQ2000-10A-1

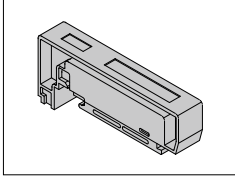


Individual SUP spacer
VVQ2000-P-1-C₈
N₉

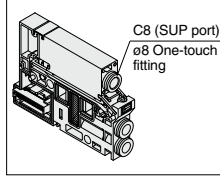


Individual EXH spacer
VVQ2000-R-1-C₈
N₉

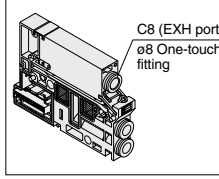


SUP block plate
VVQ2000-16A

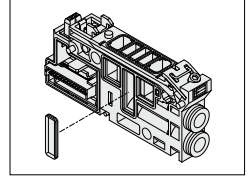


EXH block plate
VVQ2000-19A

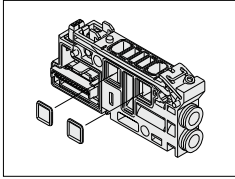


Back pressure check valve assembly [-B]
VVQ2000-18A

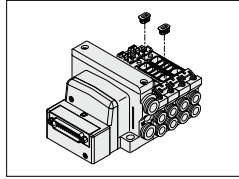


Name plate [-N]
VVQ2000-N-(1 to Max. stations) (-X4)

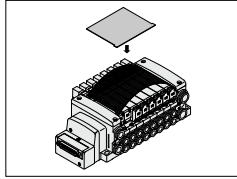


Blanking plug
KQ2P-□

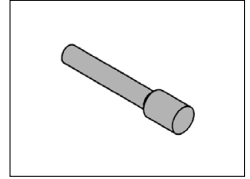


Port plug
VVQ1000-58A

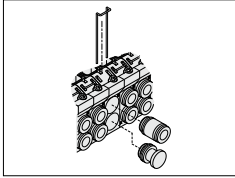


DIN rail mounting bracket [-D]
VVQ2000-57A
(For F/L/M/P/S (EX500) kit)
VVQ2000-57A-S
(For S (EX250) kit)
VVQ2000-57A-T (For T kit)

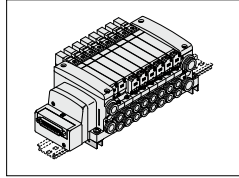


Direct EXH outlet with built-in silencer [-S]

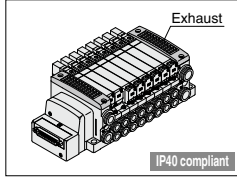


Silencer (For EXH port)
AN20-C10

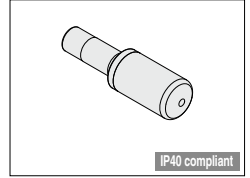


Elbow fitting assembly
VVQ2000-F-L-□

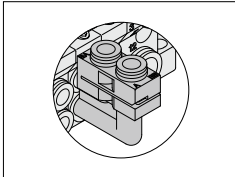

Dual flow fitting assembly
VVQ2000-52A-C₁₀
N₁₁

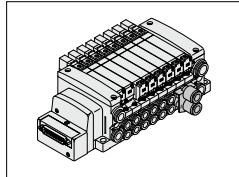


Double check block
VVQ2000-FPG-□-□-□

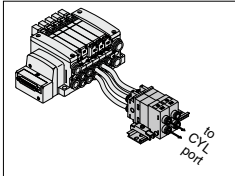

Special electrical wiring specifications [-K]

Wiring example)
D-sub connector

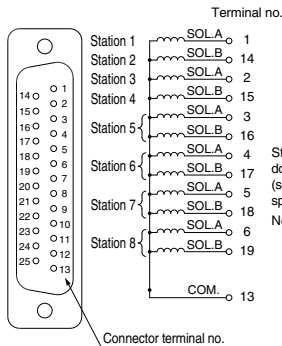

Standard manifolds are for double wiring, but mixed wiring (single and double wiring) can be specified as an option.

Note) Refer to the pages of each kit for details.

F kit P. 572

P kit P. 574

T kit P. 576

L kit P. 578

M kit P. 580

Base Mounted Plug-in Unit

EX260 Safety Communication Protocol (PROFIsafe)


VQC1000/2000 Series

Using the safety communication protocol

Refer to the EX260 Web Catalog for details on units that support the safety communication protocol. When using a manifold valve within an ISO 13849-compliant safety system, the device needs to be considered from both the pneumatic circuit and the electric side. Devices (including valves) need to be selected based on whether their functions are in line with the safety level of the equipment as a whole. The use of valves that have been validated as being compliant with ISO 13849-2 may be required. For details on valves that have been validated, please contact SMC. In addition, refer to "Safety Instructions" for precautions on model selection.

Refer to pages 544 and 550 for details on manifolds that support Fieldbus and Industrial Ethernet.

How to Order Manifolds

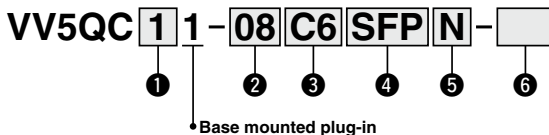

1 Series

| | |
|---|---------|
| 1 | VQC1000 |
| 2 | VQC2000 |

2 Valve stations

| Symbol | Stations | Note |
|--------|-------------|---|
| 01 | 1 station | Double wiring ^{Note 1)} |
| ⋮ | ⋮ | |
| 12 | 12 stations | |
| 01 | 1 station | Special wiring spec. ^{Note 2)} (Up to 24 solenoids available) |
| ⋮ | ⋮ | |
| 24 | 24 stations | |

Note 1) Double wiring: 2-position single, double, 3-position, and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

Note 2) Special wiring spec.: Indicate "K" for an option. Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position, and 4-position valves cannot be used where single wiring has been specified.)

3 Cylinder port size

| | VQC1000 | VQC2000 | |
|-----------------------|---|---------|---|
| C3 | With ø3.2 One-touch fitting | ● | — |
| C4 | With ø4 One-touch fitting | ● | ● |
| C6 | With ø6 One-touch fitting | ● | ● |
| C8 | With ø8 One-touch fitting | — | ● |
| M5 | M5 thread | ● | — |
| CM | Mixed sizes and with port plug | ● | — |
| L3 | Top ported elbow with ø3.2 One-touch fitting | ● | — |
| L4 | Top ported elbow with ø4 One-touch fitting | ● | ● |
| L6 | Top ported elbow with ø6 One-touch fitting | ● | ● |
| L8 | Top ported elbow with ø8 One-touch fitting | — | ● |
| L5 | M5 thread | ● | — |
| B3 | Bottom ported elbow with ø3.2 One-touch fitting | ● | — |
| B4 | Bottom ported elbow with ø4 One-touch fitting | ● | ● |
| B6 | Bottom ported elbow with ø6 One-touch fitting | ● | ● |
| B8 | Bottom ported elbow with ø8 One-touch fitting | — | ● |
| B5 | M5 thread | ● | — |
| LM | Elbow port, mixed sizes (including upward, downward piping and mixed) | ● | ● |
| MM ^{Note 2)} | Mixed size for different types of piping, option installed | ● | ● |

Note 1) Indicate the size by means of the manifold specification sheet in case of "CM", "LM", "NM". Note 2) When selecting the mixed size for different types of piping or dual flow fitting assembly, enter "MM" and give instructions in the manifold specification sheet.

Note 3) Symbols for inch sizes are as follows:

- N1: ø1/8" (VV5QC11 only)
- N3: ø5/32"
- N7: ø1/4"
- N9: ø5/16" (VV5QC21 only)
- NM: Mixed

The top ported elbow is LN□ and the bottom ported elbow is BN□.

4 Kit type

Serial transmission: EX260 integrated-type (for output) **IP67 compliant**

| Symbol | Protocol | Number of outputs | Communication connector | SI unit part no. |
|--------|-----------|-------------------|-------------------------|------------------|
| SD0 | | | Without SI unit | — |
| SFP | PROFIsafe | 32 | M12 | EX260-FPS1 |


5 SI unit output polarity

| SI unit output polarity | EX260 integrated-type (for output) serial transmission system | |
|-------------------------|---|---|
| | PROFIsafe | |
| N | Negative common | ○ |

Note) Positive common (NPN) type is not applicable.

6 Option

| | |
|-----------------------|--|
| Nll | None |
| B ^{Note 2)} | All stations with back pressure check valve |
| D | With DIN rail (Rail length: Standard) ^{Note 7)} |
| D□ ^{Note 3)} | With DIN rail (Rail length: Special) ^{Note 7)} |
| K ^{Note 4)} | Special wiring spec. (Except double wiring) |
| N ^{Note 10)} | With name plate |
| R ^{Note 5)} | External pilot |
| S ^{Note 6)} | Direct EXH outlet with built-in silencer |
| T ^{Note 9)} | Branched P and R ports on U-side |

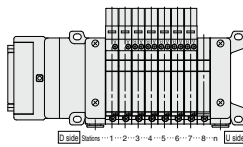

- Note 1) When two or more symbols are specified, indicate them alphabetically. Example: -BRS
- Note 2) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, specify the mounting position by means of the manifold specification sheet.
- Note 3) For special DIN rail length, indicate "D□". (Enter the number of stations inside □). Example: -D08. In this case, stations will be mounted on a DIN rail for 8 stations regardless of the actual number of manifold stations. The specified number of stations must be larger than the number of stations on the manifold. Indicate "-D0" for the option without DIN rail.
- Note 4) When single wiring and double wiring are mixed, specify wiring type of each station by means of the manifold specification sheet.
- Note 5) For external pilot option, "-R", indicate the external pilot specification "R" for the applicable valves as well.
- Note 6) Built-in silencer type does not satisfy IP67.
- Note 7) When "Without SI unit (SD0)" is specified, "With DIN rail (D)" cannot be selected.
- Note 8) When mounting the blanking plate with connector by ordering only the manifold, order the name plate separately. For details, refer to page 589.
- Note 9) VQC2000 only. SUP and EXH ports on the U-side (on cylinder port side and coil side is branched.) Port is equipped with One-touch fitting for ø12.

How to Order Valves

For details on valves that have been validated, please contact SMC.



VQC1000/2000 Series

SI Unit Part No.

EX260 SI Unit (Safety Communication)

EX260-F **PS1**

• Communication protocol

| Symbol | Protocol | Number of outputs | SI unit output polarity | Communication connector | Manifold symbol | Page |
|------------|-----------|-------------------|------------------------------|-------------------------|-----------------|------|
| PS1 | PROFIsafe | 32 | Source/PNP (Negative common) | M12 | SFPN | 586 |

For details about the EX series (Serial transmission system), refer to Best Pneumatics No. 1-1 and the Operation Manual. Please download the Operation Manual via SMC website, <http://www.smcworld.com>

SV

SYJ

SZ

VF

VP4

VQ
1/2

VQ
4/5

VQC
1/2

VQC
4/5

VQZ

SQ

VFS

VFR


VQ7

Plug-in Unit


Model

Symbol

 
2-position single




2-position double (Metal)

 


2-position double (Rubber)

 


3-position closed center

 


3-position exhaust center

 


3-position pressure center

 


4-position dual 3-port valve (A)

 

4-position dual 3-port valve (B)

 

4-position dual 3-port valve (C)

 


| Series | Type of actuation | Model | | Flow rate characteristics | | | | | | Response time ^{Note 2)} (ms) | | Weight (g) | |
|------------|-------------------|----------------|------------------------|------------------------------|------|------|------------------------------|------|------|---------------------------------------|-----------------------------|------------|------------|
| | | | | 1 → 4, 2 (P → A, B) | | | 4, 2 → 5, 3 (A, B → R1, R2) | | | Standard: 0.4 W | High-speed response: 0.95 W | | |
| | | | | C [dm ³ /(s·bar)] | b | Cv | C [dm ³ /(s·bar)] | b | Cv | | | | |
| VQC1000 | 2-position | Single | Metal seal | VQC1100 | 0.70 | 0.15 | 0.16 | 0.72 | 0.25 | 0.18 | 15 or less | 12 or less | 67 |
| | | | Rubber seal | VQC1101 | 0.85 | 0.20 | 0.21 | 1.0 | 0.30 | 0.25 | 20 or less | 15 or less | |
| | Double | Metal seal | VQC1200 | 0.70 | 0.15 | 0.16 | 0.72 | 0.25 | 0.18 | 13 or less | 10 or less | 77 | |
| | | Rubber seal | VQC1201 | 0.85 | 0.20 | 0.21 | 1.0 | 0.30 | 0.25 | 20 or less | 15 or less | | |
| | 3-position | Closed center | Metal seal | VQC1300 | 0.68 | 0.15 | 0.16 | 0.72 | 0.25 | 0.18 | 26 or less | | 20 or less |
| | | | Rubber seal | VQC1301 | 0.70 | 0.20 | 0.16 | 0.65 | 0.42 | 0.18 | 33 or less | | 25 or less |
| | | Exhaust center | Metal seal | VQC1400 | 0.68 | 0.15 | 0.16 | 0.72 | 0.25 | 0.18 | 26 or less | | 20 or less |
| | | | Rubber seal | VQC1401 | 0.70 | 0.20 | 0.16 | 1.0 | 0.30 | 0.25 | 33 or less | | 25 or less |
| | Pressure center | Metal seal | VQC1500 | 0.70 | 0.15 | 0.16 | 0.72 | 0.25 | 0.18 | 26 or less | 20 or less | | |
| | | Rubber seal | VQC1501 | 0.85 | 0.20 | 0.21 | 0.65 | 0.42 | 0.18 | 33 or less | 25 or less | | |
| 4-position | Dual 3-port valve | Rubber seal | VQC2 _{A/C} 01 | 0.70 | 0.20 | 0.16 | 0.70 | 0.20 | 0.16 | 33 or less | 25 or less | | |
| VQC2000 | 2-position | Single | Metal seal | VQC2100 | 2.0 | 0.15 | 0.46 | 2.6 | 0.15 | 0.60 | 29 or less | | 22 or less |
| | | | Rubber seal | VQC2101 | 2.2 | 0.28 | 0.55 | 3.2 | 0.30 | 0.80 | 31 or less | 24 or less | |
| | Double | Metal seal | VQC2200 | 2.0 | 0.15 | 0.46 | 2.6 | 0.15 | 0.60 | 20 or less | 15 or less | 105 | |
| | | Rubber seal | VQC2201 | 2.2 | 0.28 | 0.55 | 3.2 | 0.30 | 0.80 | 26 or less | 20 or less | | |
| | Closed center | Metal seal | VQC2300 | 2.0 | 0.15 | 0.46 | 2.0 | 0.18 | 0.46 | 38 or less | 29 or less | | |
| | | Rubber seal | VQC2301 | 2.0 | 0.28 | 0.49 | 2.2 | 0.31 | 0.60 | 44 or less | 34 or less | | |
| | Exhaust center | Metal seal | VQC2400 | 2.0 | 0.15 | 0.46 | 2.6 | 0.15 | 0.60 | 38 or less | 29 or less | | |
| | | Rubber seal | VQC2401 | 2.0 | 0.28 | 0.49 | 3.2 | 0.30 | 0.80 | 44 or less | 34 or less | | |
| | Pressure center | Metal seal | VQC2500 | 2.4 | 0.17 | 0.57 | 2.0 | 0.18 | 0.46 | 38 or less | 29 or less | | |
| | | Rubber seal | VQC2501 | 3.2 | 0.28 | 0.80 | 2.2 | 0.31 | 0.60 | 44 or less | 34 or less | | |
| 4-position | Dual 3-port valve | Rubber seal | VQC2 _{A/C} 01 | 1.8 | 0.28 | 0.46 | 1.8 | 0.28 | 0.46 | 44 or less | 34 or less | | |

Note 1) Values represented in this column are in the following conditions:

VQC1000: Cylinder port size C6 without a back pressure check valve

VQC2000: Cylinder port size C8 without a back pressure check valve

Note 2) Values represented in this column are based on JIS B 8419: 2010 (operating with clean air and a supply pressure of 0.5 MPa. Equipped with light/surge voltage suppressor. Values vary depending on the pressure as well as the air quality.) Values for double type are when the switch is turned ON.

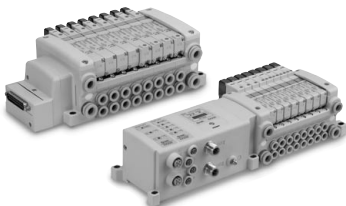

Standard Specifications

| | | | | |
|-----------------------------|--|---|--|----------|
| Valve specifications | Valve type | Metal seal | Rubber seal | |
| | Fluid | Air | | |
| | Maximum operating pressure | 0.7 MPa (High-pressure type: 1.0 MPa) | | |
| | Minimum operating pressure | Single | 0.1 MPa | 0.15 MPa |
| | | Double | 0.1 MPa | |
| | | 3-position | 0.1 MPa | 0.2 MPa |
| | | 4-position | — | 0.15 MPa |
| | Ambient and fluid temperature | -10 to 50°C ^{Note 1)} | | |
| | Lubrication | Not required | | |
| | Manual override | Push type, Locking type (Tool required) semi-standard | | |
| Impact/Vibration resistance | 150/30 m/s ² ^{Note 2)} | | | |
| Enclosure | Dustproof (IP67 compatible) ^{Note 3)} | | | |
| Electrical specifications | Rated coil voltage | 24 VDC | | |
| | Allowable voltage fluctuation | ±10% of rated voltage | | |
| | Coil insulation type | Equivalent to Class B | | |
| | Power consumption (Current) | 24 VDC | 0.4 W DC (17 mA), 0.95 W DC (40 mA) ^{Note 4)} | |
| | | 12 VDC | 0.4 W DC (34 mA), 0.95 W DC (80 mA) ^{Note 4)} | |

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance No malfunction resulted from the impact test using a drop impact tester. Test was performed one time each in the axial and right angle directions of the main valve and armature for both energized and de-energized states.

Vibration resistance ... No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed in the axial and right angle directions of the main valve and armature for both energized and de-energized states.

Note 3) Refer to pages 540 and 541 for applicable variations.

Note 4) Value for high-speed response, high-pressure type (0.95 W)

Manifold Specifications

| Series | Base model | Connection type | Piping specifications | | Applicable stations ^{Note 2)} | Applicable solenoid valves | 5-station weight (g) | |
|---------|-------------|--|-----------------------|---|--|--|--|--|
| | | | Port direction | Port size ^{Note 1)} | | | | |
| | | | | 1, 3 (P, R) | | | | 2, 4 (A, B) |
| VQC1000 | VV5QC11-□□□ | F kit: D-sub connector P kit: Flat ribbon cable T kit: Terminal block box S kit: Serial transmission L kit: Lead wire M kit: Circular connector | Side | C8 (ø8) [Option: Direct EXH outlet with built-in silencer] C3 (ø3.2) C4 (ø4) C6 (ø6) M5 (M5 thread) | (F/L/M/P kit 1 to 12 stations) (T kit 1 to 10 stations) | VQC1□00-5 VQC1□01-5 | 643 (Single) 754 (Double, 3-position) | |
| VQC2000 | VV5QC21-□□□ | | Side | C10 (ø10) [Option: Direct EXH outlet with built-in silencer] Branch type C12 (ø12) | C4 (ø4) C6 (ø6) C8 (ø8) | (S kit ^{Note 3)} 1 to 8 stations: EX500 1 to 12 stations: EX250 EX245 | VQC2□00-5 VQC2□01-5 | 1076 (Single) 1119 (Double, 3-position) |

Note 1) Inch-size One-touch fittings are also available.

Note 2) Special wiring specifications are available as semi-standard to increase the maximum number of stations.

Note 3) Depending on the protocol, there is a limit to the number of stations an S kit can be applied to. Refer to page 551-1 for details.

SV

SYJ

SZ

VF

VP4

VQ

1/2

VQ

4/5

VQC

1/2

VQC

4/5

VQZ

SQ

VFS

VFR

VQ7


VQC Series

S VQC1000 Series

Kit (Serial transmission) For EX500 Gateway Decentralized System 2 (128 points) IP67 compliant

VV5QC11

S kit (Serial transmission kit: EX500)

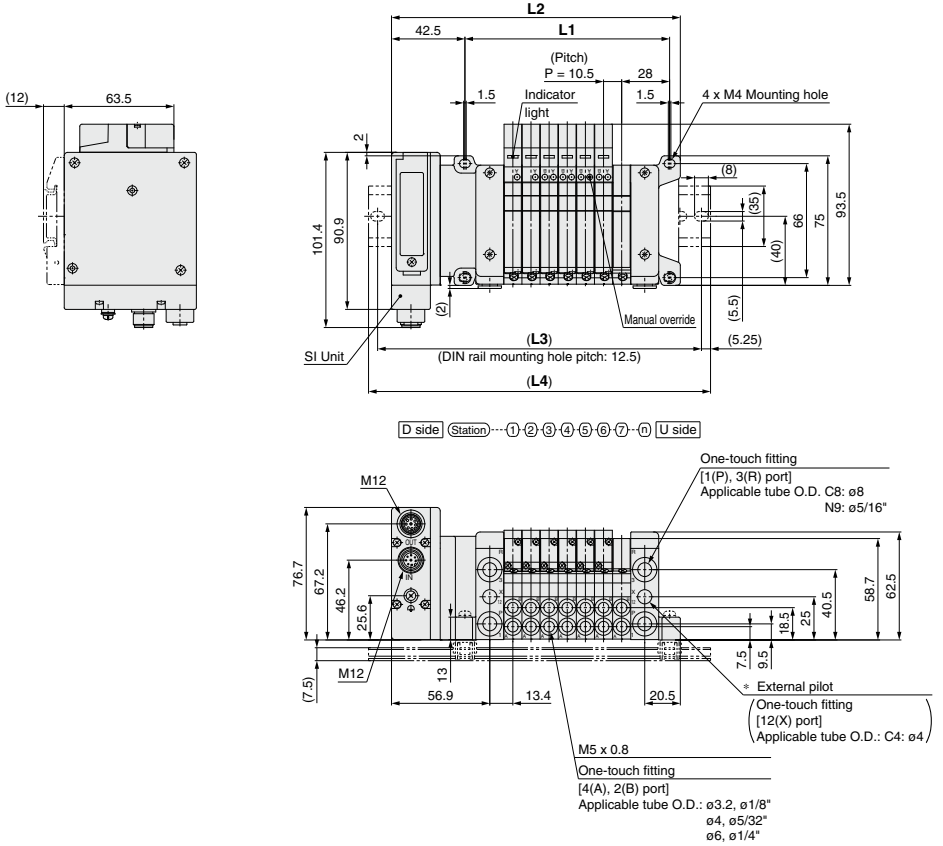

L: Dimensions


| L \ n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
|-----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 55.5 | 66 | 76.5 | 87 | 97.5 | 108 | 118.5 | 129 | 139.5 | 150 | 160.5 | 171 | 181.5 | 192 | 202.5 |
| L2 | 104.2 | 114.7 | 125.2 | 135.7 | 146.2 | 156.7 | 167.2 | 177.7 | 188.2 | 198.7 | 209.2 | 219.7 | 230.2 | 240.7 | 251.2 |
| L3 | 125 | 137.5 | 150 | 162.5 | 175 | 187.5 | 187.5 | 200 | 212.5 | 225 | 237.5 | 250 | 250 | 262.5 | 275 |
| L4 | 135.5 | 148 | 160.5 | 173 | 185.5 | 198 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 | 260.5 | 273 | 285.5 |

| L \ n | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|-----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 213 | 223.5 | 234 | 244.5 | 255 | 265.5 | 276 | 286.5 | 297 |
| L2 | 261.7 | 272.2 | 282.7 | 293.2 | 303.7 | 314.2 | 324.7 | 335.2 | 345.7 |
| L3 | 287.5 | 300 | 312.5 | 325 | 325 | 337.5 | 350 | 362.5 | 375 |
| L4 | 298 | 310.5 | 323 | 335.5 | 335.5 | 348 | 360.5 | 373 | 385.5 |

n: Stations

S VQC2000 Series
 Kit (Serial transmission) For EX500 Gateway Decentralized System 2 (128 points) IP67 compliant

VV5QC21
S kit (Serial transmission kit: EX500)

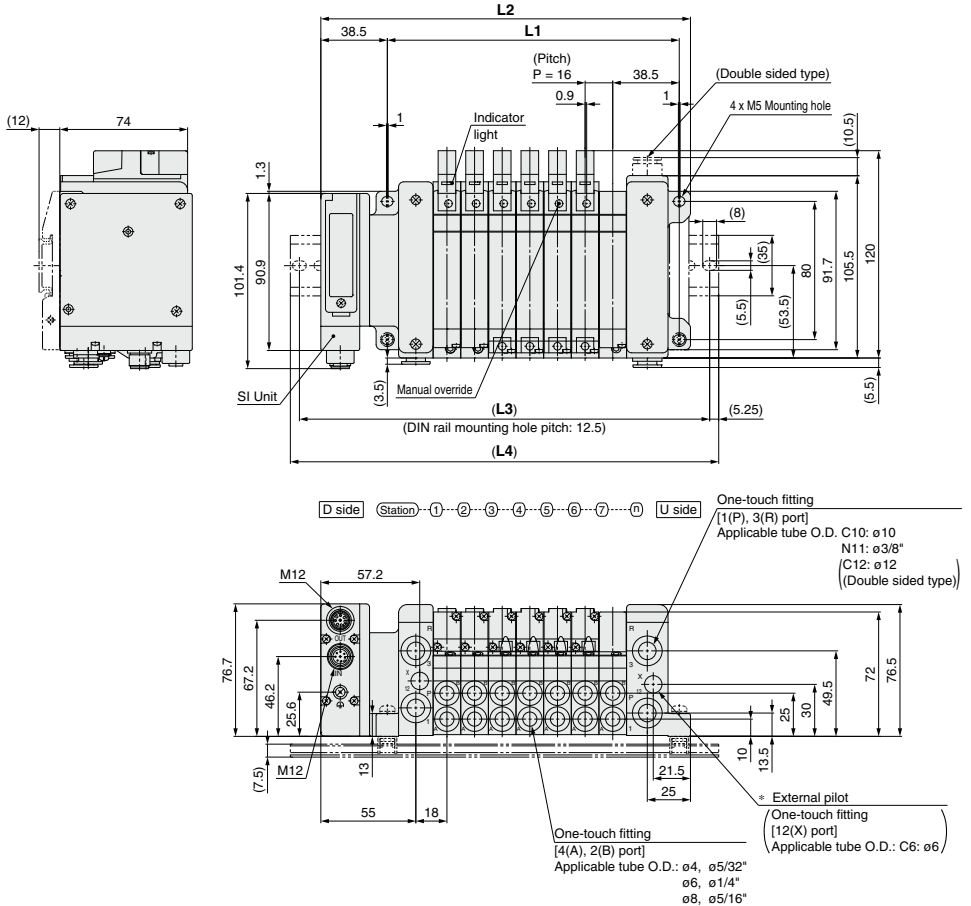

- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2**
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7

L: Dimensions

| | | n: Stations | | | | | | | | | | | | | | |
|-----------|---|-------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| L1 | | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 |
| L2 | | 118 | 134 | 150 | 166 | 182 | 198 | 214 | 230 | 246 | 262 | 278 | 294 | 310 | 326 | 342 |
| L3 | | 137.5 | 162.5 | 175 | 187.5 | 212.5 | 225 | 237.5 | 250 | 275 | 287.5 | 300 | 325 | 337.5 | 350 | 362.5 |
| L4 | | 148 | 173 | 185.5 | 198 | 223 | 235.5 | 248 | 260.5 | 285.5 | 298 | 310.5 | 335.5 | 348 | 360.5 | 373 |

| L | n | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|-----------|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 313 | 329 | 345 | 361 | 377 | 393 | 409 | 425 | 441 |
| L2 | | 358 | 374 | 390 | 406 | 422 | 438 | 454 | 470 | 486 |
| L3 | | 387.5 | 400 | 412.5 | 437.5 | 450 | 462.5 | 475 | 500 | 512.5 |
| L4 | | 398 | 410.5 | 423 | 448 | 460.5 | 473 | 485.5 | 510.5 | 523 |


VQC Series

S VQC1000 Series


Kit (Serial transmission) For EX500 Gateway Decentralized System (64 points) IP67 compliant

VV5QC11

S kit (Serial transmission kit: EX500)

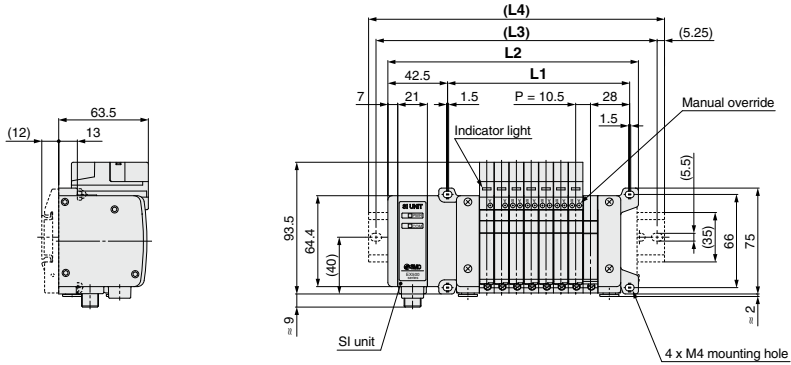

[D side (Stations) ①②③④⑤⑥⑦⑧-n] [U side]

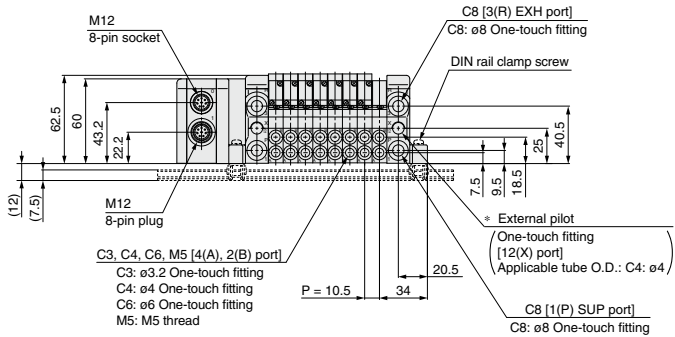

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).


Formula: $L1 = 10.5n + 45$, $L2 = 10.5n + 93.5$ n: Stations (Maximum 16 stations)

| L \ n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 55.5 | 66 | 76.5 | 87 | 97.5 | 108 | 118.5 | 129 | 139.5 | 150 | 160.5 | 171 | 181.5 | 192 | 202.5 | 213 |
| L2 | 104 | 114.5 | 125 | 135.5 | 146 | 156.5 | 167 | 177.5 | 188 | 198.5 | 209 | 219.5 | 230 | 240.5 | 251 | 261.5 |
| L3 | 125 | 137.5 | 150 | 162.5 | 175 | 187.5 | 187.5 | 200 | 212.5 | 225 | 237.5 | 250 | 250 | 262.5 | 275 | 287.5 |
| L4 | 135.5 | 148 | 160.5 | 173 | 185.5 | 198 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 | 260.5 | 273 | 285.5 | 298 |


S VQC2000 Series

Kit (Serial transmission) For EX500 Gateway Decentralized System (64 points) IP67 compliant

VV5QC21
S kit (Serial transmission kit: EX500)

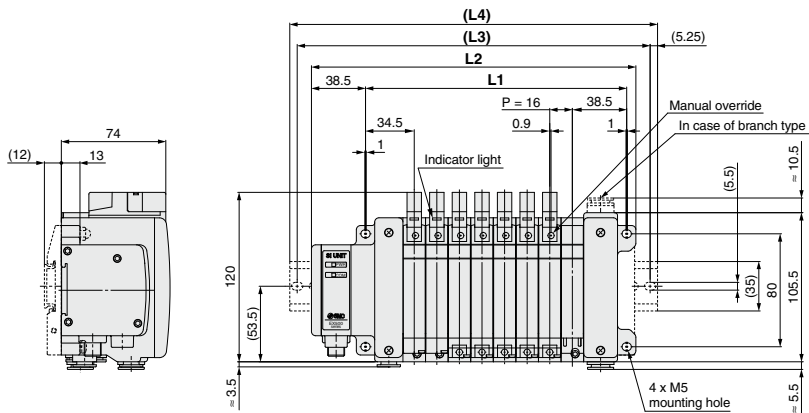

[D side] Stations ①-②-③-④-⑤-⑥-⑦-⑧...⑰ [U side]

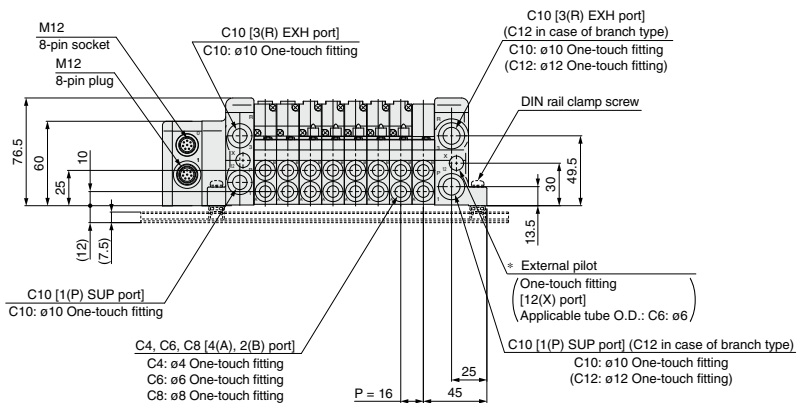

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: $L1 = 16n + 57$, $L2 = 16n + 102$ n: Stations (Maximum 16 stations)

| n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
|-----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 | 313 |
| L2 | 118 | 134 | 150 | 166 | 182 | 198 | 214 | 230 | 246 | 262 | 278 | 294 | 310 | 326 | 342 | 358 |
| L3 | 137.5 | 162.5 | 175 | 187.5 | 212.5 | 225 | 237.5 | 250 | 275 | 287.5 | 300 | 325 | 337.5 | 350 | 362.5 | 387.5 |
| L4 | 148 | 173 | 185.5 | 198 | 223 | 235.5 | 248 | 260.5 | 285.5 | 298 | 310.5 | 335.5 | 348 | 360.5 | 373 | 398 |


- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2**
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7

VQC Series


S VQC1000 Series

Kit (Serial transmission) For EX600 Integrated-type (I/O) Serial Transmission System IP67 compliant

VV5QC11
S kit (Serial transmission kit: EX600)
 Power supply with M12 connector

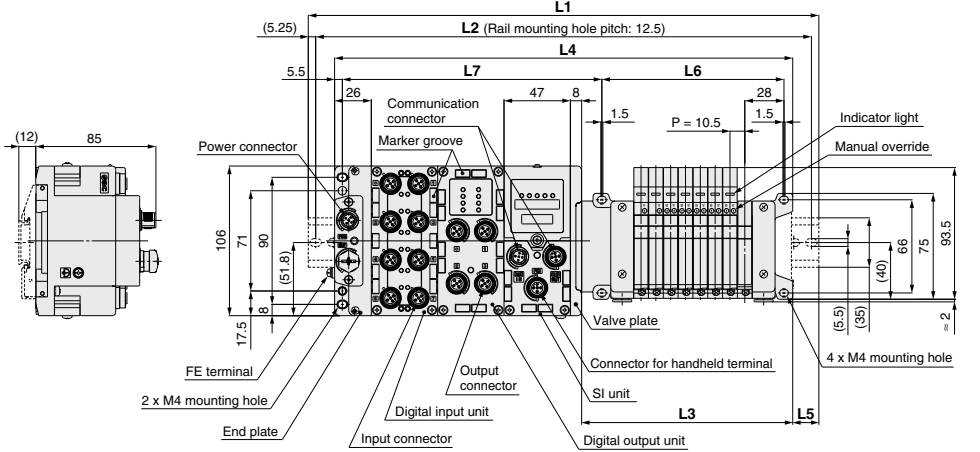

D side (Stations) ① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ U side

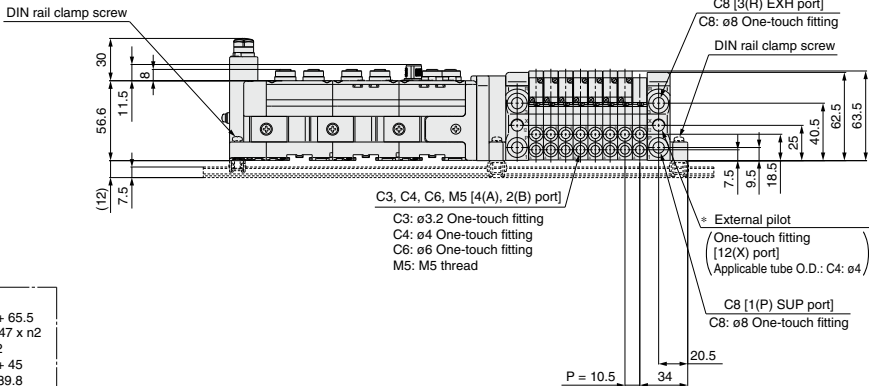

$L2 = L1 - 10.5$
 $L3 = 10.5 \times n1 + 65.5$
 $L4 = L3 + 81 + 47 \times n2$
 $L5 = (L1 - L4) / 2$
 $L6 = 10.5 \times n1 + 45$
 $L7 = 47 \times n2 + 89.8$


L1: DIN Rail Full Length

| I/O unit stations (n2) \ Valve stations (n1) | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | |
|--|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 0 | 198 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 | 260.5 | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 335.5 | 348 | 360.5 | 373 | 385.5 | 398 | 398 | 410.5 | 423 | 435.5 | |
| 1 | 235.5 | 248 | 260.5 | 273 | 285.5 | 298 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 | 360.5 | 373 | 385.5 | 398 | 410.5 | 423 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 485.5 |
| 2 | 285.5 | 298 | 310.5 | 323 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 398 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 498 | 510.5 | 523 | 523 | 523 |
| 3 | 335.5 | 348 | 360.5 | 360.5 | 373 | 385.5 | 398 | 410.5 | 423 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 510.5 | 523 | 523 | 535.5 | 548 | 560.5 | 560.5 | 573 | 573 |
| 4 | 385.5 | 385.5 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 460.5 | 473 | 485.5 | 498 | 510.5 | 523 | 523 | 535.5 | 548 | 560.5 | 573 | 585.5 | 598 | 598 | 610.5 | 623 | 623 |
| 5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 485.5 | 498 | 510.5 | 523 | 535.5 | 548 | 548 | 560.5 | 573 | 585.5 | 598 | 610.5 | 623 | 623 | 635.5 | 648 | 660.5 | 673 | 673 |
| 6 | 473 | 485.5 | 498 | 510.5 | 523 | 523 | 535.5 | 548 | 560.5 | 573 | 585.5 | 585.5 | 598 | 610.5 | 623 | 635.5 | 648 | 648 | 660.5 | 673 | 685.5 | 698 | 710.5 | 710.5 | 710.5 |
| 7 | 523 | 535.5 | 548 | 548 | 560.5 | 573 | 585.5 | 598 | 610.5 | 610.5 | 623 | 635.5 | 648 | 660.5 | 673 | 685.5 | 685.5 | 698 | 710.5 | 723 | 735.5 | 748 | 748 | 760.5 | 760.5 |
| 8 | 573 | 585.5 | 585.5 | 598 | 610.5 | 623 | 635.5 | 648 | 648 | 660.5 | 673 | 685.5 | 698 | 710.5 | 710.5 | 723 | 735.5 | 748 | 760.5 | 773 | 773 | 785.5 | 798 | 810.5 | 810.5 |
| 9 | 610.5 | 623 | 635.5 | 648 | 660.5 | 673 | 673 | 685.5 | 698 | 710.5 | 723 | 735.5 | 748 | 748 | 760.5 | 773 | 785.5 | 798 | 810.5 | 810.5 | 823 | 835.5 | 848 | 860.5 | 860.5 |


S VQC1000 Series

Kit (Serial transmission) For EX600 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC11 S kit (Serial transmission kit: EX600) Power supply with 7/8 inch connector

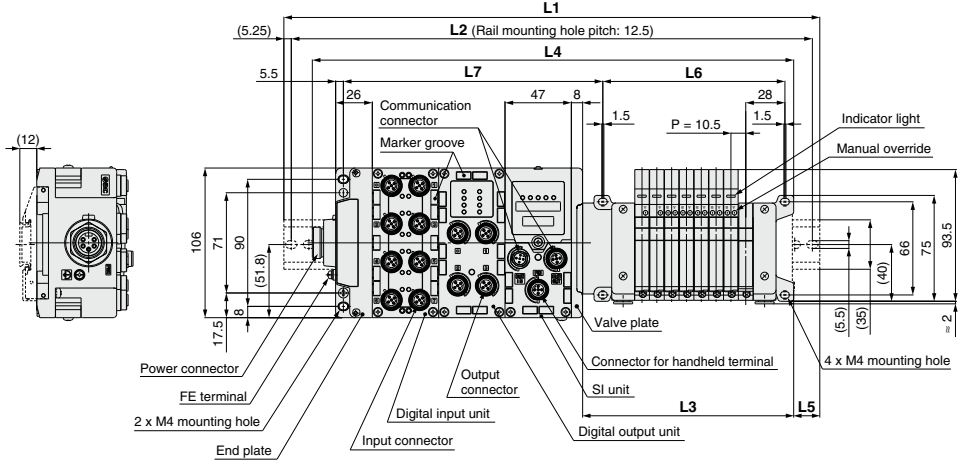

D side (Stations) 1 2 3 4 5 6 7 8 n U side

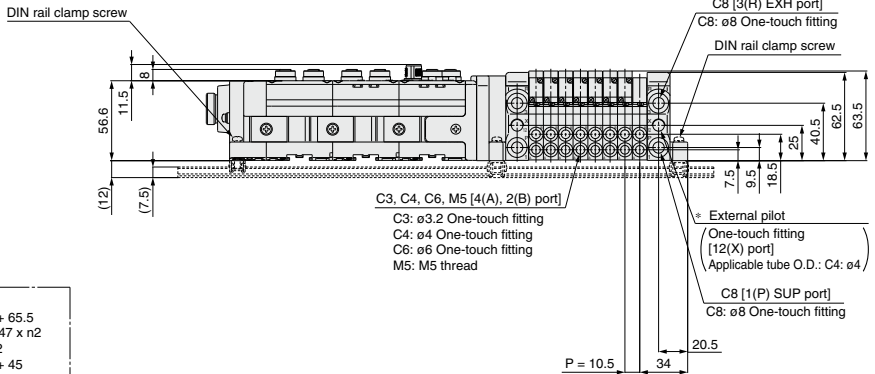

$L2 = L1 - 10.5$
 $L3 = 10.5 \times n1 + 65.5$
 $L4 = L3 + 81 + 47 \times n2$
 $L5 = (L1 - L4) / 2$
 $L6 = 10.5 \times n1 + 45$
 $L7 = 47 \times n2 + 89.8$

L1: DIN Rail Full Length

| I/O unit stations (n2) | Valve stations (n1) | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------|---------------------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
| 0 | 210.5 | 223 | 235.5 | 235.5 | 248 | 260.5 | 273 | 285.5 | 298 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 373 | 385.5 | 398 | 410.5 | 423 | 435.5 | 435.5 | 448 |
| 1 | 260.5 | 273 | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 335.5 | 348 | 360.5 | 373 | 385.5 | 398 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 460.5 | 473 | 485.5 | 498 |
| 2 | 298 | 310.5 | 323 | 335.5 | 348 | 360.5 | 360.5 | 373 | 385.5 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 460.5 | 473 | 485.5 | 498 | 510.5 | 523 | 535.5 | 535.5 | 548 |
| 3 | 348 | 360.5 | 373 | 385.5 | 398 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 510.5 | 523 | 535.5 | 548 | 560.5 | 560.5 | 573 | 585.5 | 598 | 598 |
| 4 | 398 | 410.5 | 423 | 423 | 435.5 | 448 | 460.5 | 473 | 485.5 | 498 | 498 | 510.5 | 523 | 535.5 | 548 | 560.5 | 560.5 | 573 | 585.5 | 598 | 610.5 | 623 | 623 | 635.5 |
| 5 | 448 | 460.5 | 460.5 | 473 | 485.5 | 498 | 510.5 | 523 | 523 | 535.5 | 548 | 560.5 | 573 | 585.5 | 585.5 | 598 | 610.5 | 623 | 635.5 | 648 | 660.5 | 660.5 | 673 | 685.5 |
| 6 | 485.5 | 498 | 510.5 | 523 | 535.5 | 548 | 560.5 | 560.5 | 573 | 585.5 | 598 | 610.5 | 623 | 623 | 635.5 | 648 | 660.5 | 673 | 685.5 | 698 | 710.5 | 723 | 723 | 735.5 |
| 7 | 535.5 | 548 | 560.5 | 573 | 585.5 | 585.5 | 598 | 610.5 | 623 | 635.5 | 648 | 648 | 660.5 | 673 | 685.5 | 698 | 710.5 | 723 | 723 | 735.5 | 748 | 760.5 | 773 | 785.5 |
| 8 | 585.5 | 598 | 610.5 | 623 | 623 | 635.5 | 648 | 660.5 | 673 | 685.5 | 685.5 | 698 | 710.5 | 723 | 735.5 | 748 | 748 | 760.5 | 773 | 785.5 | 798 | 810.5 | 810.5 | 823 |
| 9 | 635.5 | 648 | 648 | 660.5 | 673 | 685.5 | 698 | 710.5 | 710.5 | 723 | 735.5 | 748 | 760.5 | 773 | 785.5 | 785.5 | 798 | 810.5 | 823 | 835.5 | 848 | 848 | 860.5 | 873 |

- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7

VQC Series


S VQC2000 Series

Kit (Serial transmission) For EX600 Integrated-type (I/O) Serial Transmission System IP67 compliant

VV5QC21

S kit (Serial transmission kit: EX600)

Power supply with M12 connector

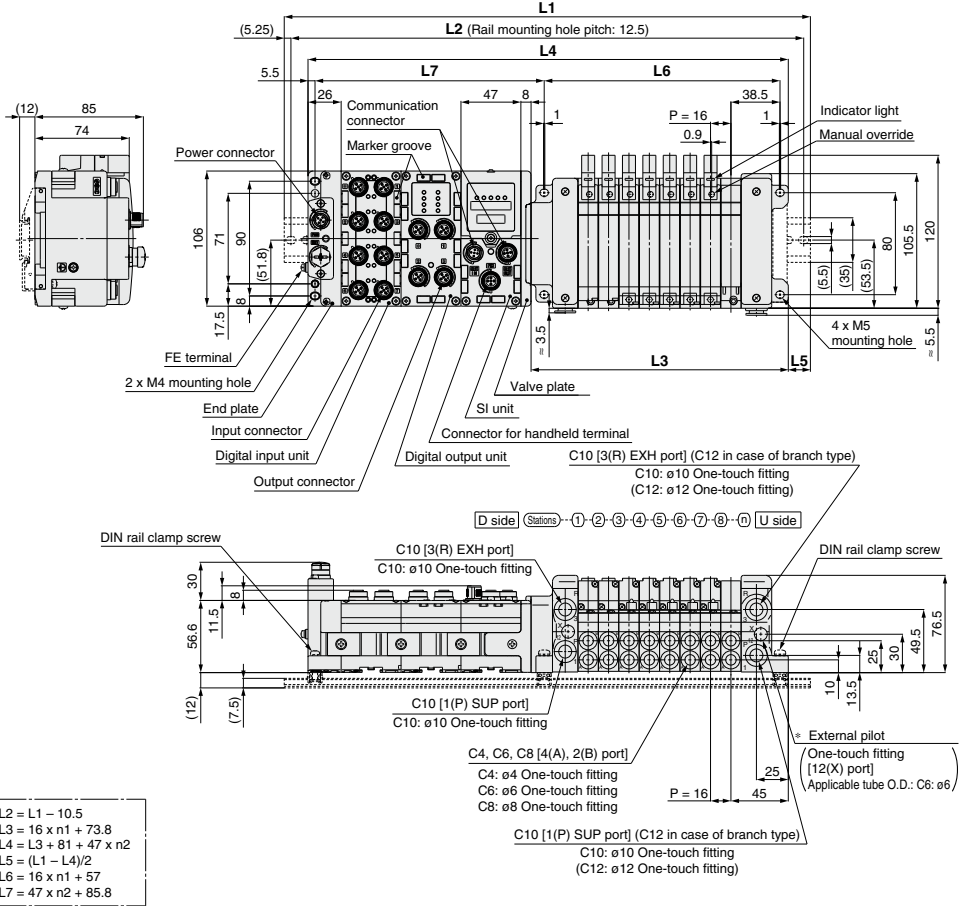


L1: DIN Rail Full Length

| I/O unit stations (n2) \ Valve stations (n1) | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 | |
|--|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 0 | 210.5 | 223 | 235.5 | 260.5 | 273 | 285.5 | 298 | 323 | 335.5 | 348 | 373 | 385.5 | 398 | 410.5 | 435.5 | 448 | 460.5 | 473 | 498 | 510.5 | 523 | 548 | 560.5 | 573 | |
| 1 | 248 | 273 | 285.5 | 298 | 323 | 335.5 | 348 | 360.5 | 385.5 | 398 | 410.5 | 435.5 | 448 | 460.5 | 473 | 498 | 510.5 | 523 | 548 | 560.5 | 573 | 585.5 | 610.5 | 623 | |
| 2 | 298 | 323 | 335.5 | 348 | 360.5 | 385.5 | 398 | 410.5 | 423 | 448 | 460.5 | 473 | 498 | 510.5 | 523 | 535.5 | 560.5 | 573 | 585.5 | 610.5 | 623 | 635.5 | 648 | 673 | 710.5 |
| 3 | 348 | 360.5 | 385.5 | 398 | 410.5 | 423 | 448 | 460.5 | 473 | 498 | 510.5 | 523 | 535.5 | 560.5 | 573 | 585.5 | 598 | 623 | 635.5 | 648 | 673 | 685.5 | 698 | 710.5 | 748 |
| 4 | 398 | 410.5 | 423 | 448 | 460.5 | 473 | 485.5 | 510.5 | 523 | 535.5 | 560.5 | 573 | 585.5 | 598 | 623 | 635.5 | 648 | 673 | 685.5 | 698 | 710.5 | 735.5 | 748 | 760.5 | 785.5 |
| 5 | 448 | 460.5 | 473 | 485.5 | 510.5 | 523 | 535.5 | 548 | 573 | 585.5 | 598 | 623 | 635.5 | 648 | 660.5 | 685.5 | 698 | 710.5 | 735.5 | 748 | 760.5 | 773 | 798 | 810.5 | 848 |
| 6 | 485.5 | 510.5 | 523 | 535.5 | 548 | 573 | 585.5 | 598 | 623 | 635.5 | 648 | 660.5 | 685.5 | 698 | 710.5 | 723 | 748 | 760.5 | 773 | 798 | 810.5 | 823 | 835.5 | 860.5 | 898 |
| 7 | 535.5 | 548 | 573 | 585.5 | 598 | 610.5 | 635.5 | 648 | 660.5 | 685.5 | 698 | 710.5 | 723 | 748 | 760.5 | 773 | 798 | 810.5 | 823 | 835.5 | 860.5 | 873 | 885.5 | 898 | 948 |
| 8 | 585.5 | 598 | 610.5 | 635.5 | 648 | 660.5 | 673 | 698 | 710.5 | 723 | 748 | 760.5 | 773 | 785.5 | 810.5 | 823 | 835.5 | 860.5 | 873 | 885.5 | 898 | 923 | 935.5 | 948 | 998 |
| 9 | 635.5 | 648 | 660.5 | 673 | 698 | 710.5 | 723 | 748 | 760.5 | 773 | 785.5 | 810.5 | 823 | 835.5 | 848 | 873 | 885.5 | 898 | 923 | 935.5 | 948 | 960.5 | 985.5 | 998 | 1048 |

S VQC2000 Series

Kit (Serial transmission) For EX600 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC21
S kit (Serial transmission kit: EX600)
 Power supply with 7/8 inch connector

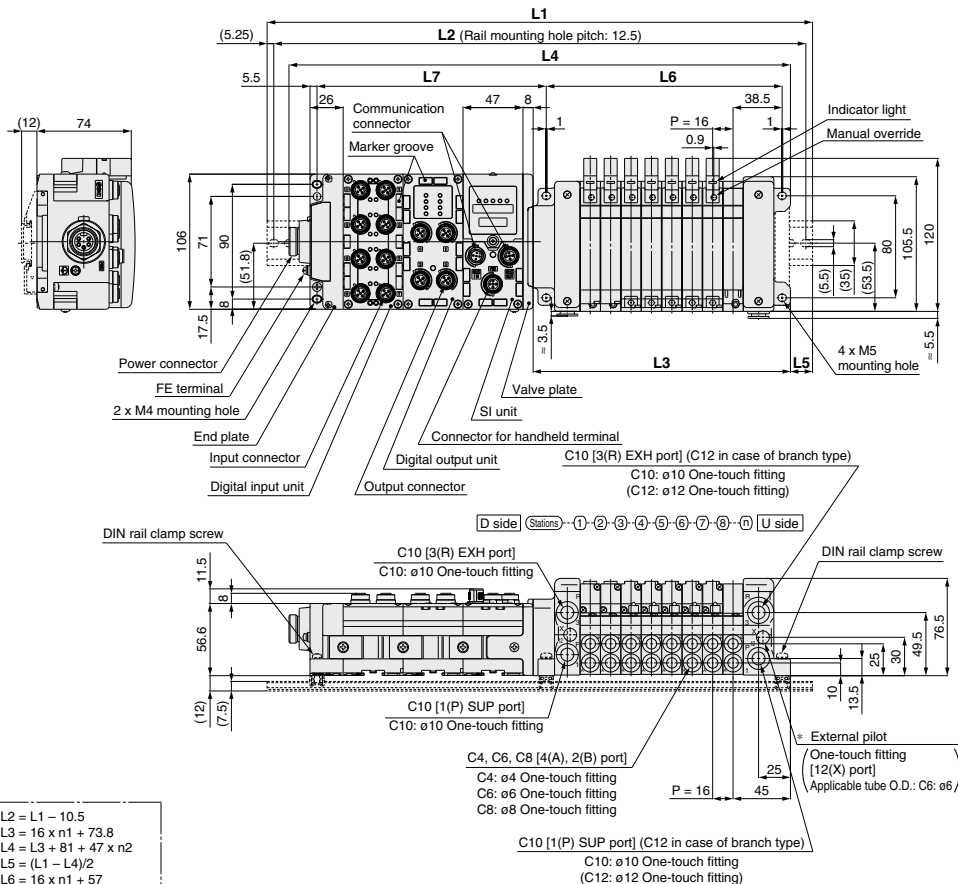

L2 = L1 - 10.5
 L3 = 16 x n1 + 73.8
 L4 = L3 + 81 + 47 x n2
 L5 = (L1 - L4) / 2
 L6 = 16 x n1 + 57
 L7 = 47 x n2 + 85.8

L1: DIN Rail Full Length

| I/O unit stations (n2) \ Valve stations (n1) | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|--|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 0 | 223 | 235.5 | 260.5 | 273 | 285.5 | 298 | 323 | 335.5 | 348 | 373 | 385.5 | 398 | 410.5 | 435.5 | 448 | 460.5 | 485.5 | 498 | 510.5 | 523 | 548 | 560.5 | 573 | 585.5 |
| 1 | 273 | 285.5 | 298 | 323 | 335.5 | 348 | 360.5 | 385.5 | 398 | 410.5 | 435.5 | 448 | 460.5 | 473 | 498 | 510.5 | 523 | 548 | 560.5 | 573 | 585.5 | 610.5 | 623 | 635.5 |
| 2 | 323 | 335.5 | 348 | 360.5 | 385.5 | 398 | 410.5 | 435.5 | 448 | 460.5 | 473 | 498 | 510.5 | 523 | 535.5 | 560.5 | 573 | 585.5 | 610.5 | 623 | 635.5 | 648 | 673 | 685.5 |
| 3 | 360.5 | 385.5 | 398 | 410.5 | 423 | 448 | 460.5 | 473 | 498 | 510.5 | 523 | 535.5 | 560.5 | 573 | 585.5 | 610.5 | 623 | 635.5 | 648 | 673 | 685.5 | 698 | 710.5 | 735.5 |
| 4 | 410.5 | 423 | 448 | 460.5 | 473 | 485.5 | 510.5 | 523 | 535.5 | 560.5 | 573 | 585.5 | 598 | 623 | 635.5 | 648 | 673 | 685.5 | 698 | 710.5 | 735.5 | 748 | 760.5 | 785.5 |
| 5 | 460.5 | 473 | 485.5 | 510.5 | 523 | 535.5 | 560.5 | 573 | 585.5 | 598 | 623 | 635.5 | 648 | 660.5 | 685.5 | 698 | 710.5 | 735.5 | 748 | 760.5 | 773 | 798 | 810.5 | 823 |
| 6 | 510.5 | 523 | 535.5 | 548 | 573 | 585.5 | 598 | 623 | 635.5 | 648 | 660.5 | 685.5 | 698 | 710.5 | 735.5 | 748 | 760.5 | 773 | 798 | 810.5 | 823 | 835.5 | 860.5 | 873 |
| 7 | 548 | 573 | 585.5 | 598 | 610.5 | 635.5 | 648 | 660.5 | 685.5 | 698 | 710.5 | 723 | 748 | 760.5 | 773 | 798 | 810.5 | 823 | 835.5 | 860.5 | 873 | 885.5 | 910.5 | 923 |
| 8 | 598 | 610.5 | 635.5 | 648 | 660.5 | 685.5 | 698 | 710.5 | 723 | 748 | 760.5 | 773 | 785.5 | 810.5 | 823 | 835.5 | 860.5 | 873 | 885.5 | 898 | 923 | 935.5 | 948 | 973 |
| 9 | 648 | 660.5 | 673 | 698 | 710.5 | 723 | 748 | 760.5 | 773 | 785.5 | 810.5 | 823 | 835.5 | 860.5 | 873 | 885.5 | 898 | 923 | 935.5 | 948 | 960.5 | 985.5 | 985.5 | - |



- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7

VQC Series

S VQC2000 Series Kit (Serial transmission) EX245

IP65 compliant

VV5QC21 S kit (Serial transmission kit: EX245)

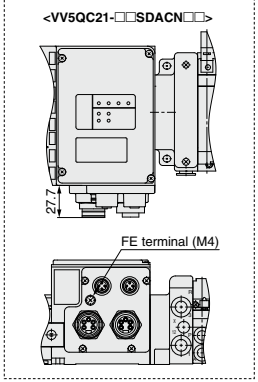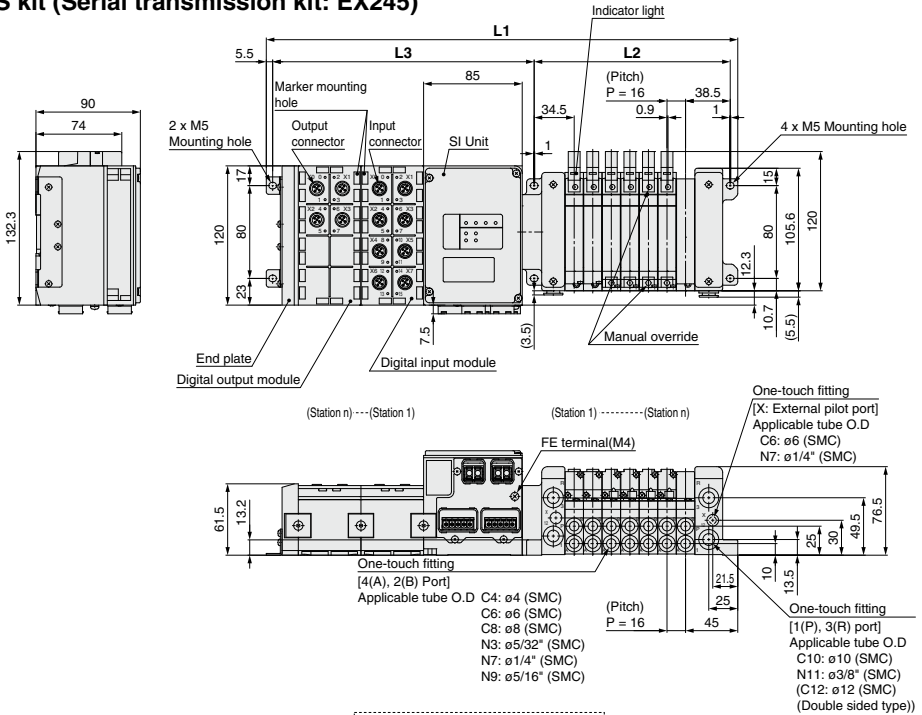

$L3 = 54n2 + 117.4$

L: Dimensions Formula: $L1 = 16n + 186.4$ $L2 = 16n 57$ * The L1 dimension is the dimension without an I/O module. Add 54 mm to this dimension for each I/O module. * n2 is the number of I/O module stations.

| L \ n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
|-----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 202.4 | 218.4 | 234.4 | 250.4 | 266.4 | 282.4 | 298.4 | 314.4 | 330.4 | 346.4 | 362.4 | 378.4 | 394.4 | 410.4 | 426.4 |
| L2 | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 |

| L \ n | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|-----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 442.4 | 458.4 | 474.4 | 490.4 | 506.4 | 522.4 | 538.4 | 554.4 | 570.4 |
| L2 | 313 | 329 | 345 | 361 | 377 | 393 | 409 | 425 | 441 |


VQC Series

S VQC1000/2000 Series


Kit (Serial transmission) For EX250 Integrated-type (I/O) Serial Transmission System IP67 compliant

VV5QC11

S kit (Serial transmission kit: EX250)

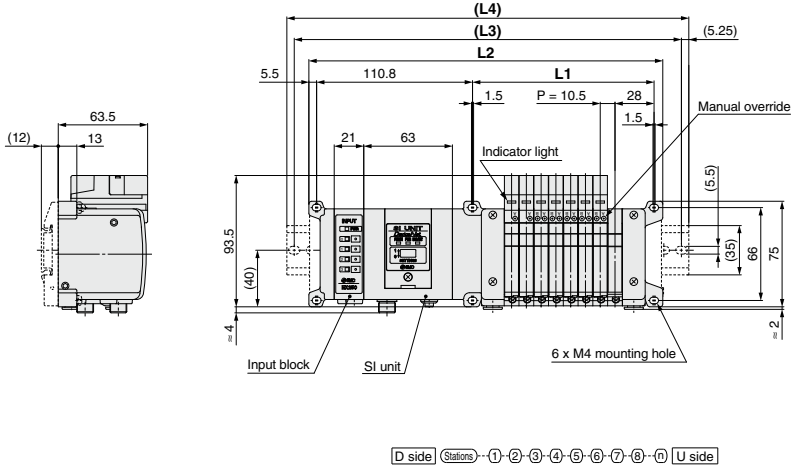

D side (Stations) ①-②-③-④-⑤-⑥-⑦-⑧-⑨ U side

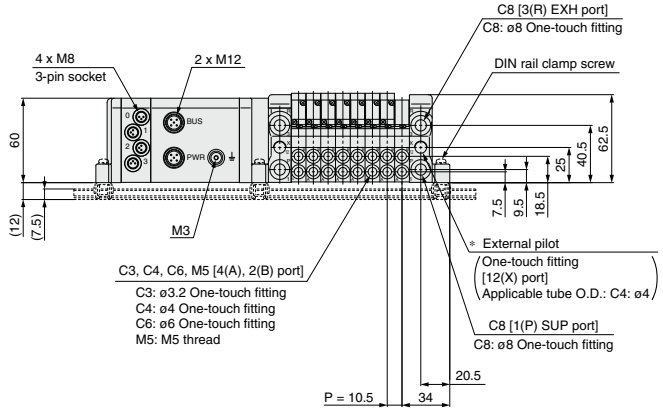

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).




Formula: $L1 = 10.5n + 45$, $L2 = 10.5n + 167.5$ (For one input block. Add 21 mm for each additional input block.) n: Stations (Maximum 24 stations)

| L \ n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|-----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 55.5 | 66 | 76.5 | 87 | 97.5 | 108 | 118.5 | 129 | 139.5 | 150 | 160.5 | 171 | 181.5 | 192 | 202.5 | 213 | 223.5 | 234 | 244.5 | 255 | 265.5 | 276 | 286.5 | 297 |
| L2 | 178 | 188.5 | 199 | 209.5 | 220 | 230.5 | 241 | 251.5 | 262 | 272.5 | 283 | 293.5 | 304 | 314.5 | 325 | 335.5 | 346 | 356.5 | 367 | 377.5 | 388 | 398.5 | 409 | 419.5 |
| L3 | 200 | 212.5 | 225 | 237.5 | 250 | 262.5 | 275 | 287.5 | 300 | 312.5 | 325 | 325 | 337.5 | 350 | 362.5 | 375 | 387.5 | 387.5 | 400 | 412.5 | 425 | 437.5 | 450 | |
| L4 | 210.5 | 223 | 235.5 | 248 | 260.5 | 260.5 | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 335.5 | 348 | 360.5 | 373 | 385.5 | 398 | 398 | 410.5 | 423 | 435.5 | 448 | 460.5 |

S VQC1000 Series

Kit (Serial transmission) For EX260 Integrated-type (For Output) Serial Transmission System **IP40 compliant** **IP67 compliant**

VV5QC11 S kit (Serial transmission kit: EX260)

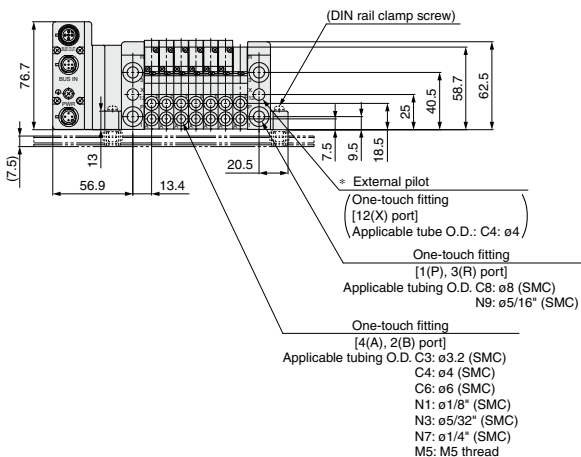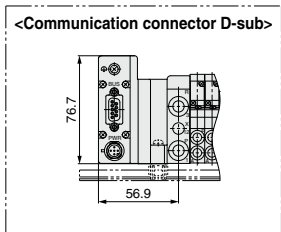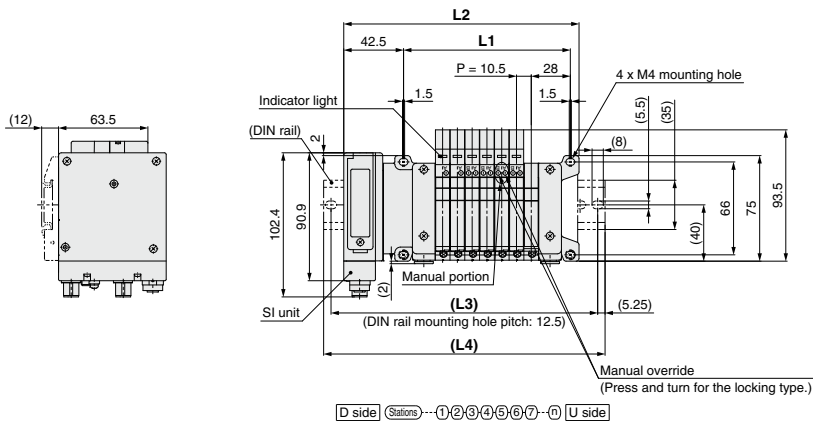

- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2**
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7

n: Stations (Maximum 24 stations)

| L \ n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|-----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 55.5 | 66 | 76.5 | 87 | 97.5 | 108 | 118.5 | 129 | 139.5 | 150 | 160.5 | 171 | 181.5 | 192 | 202.5 | 213 | 223.5 | 234 | 244.5 | 255 | 265.5 | 276 | 286.5 | 297 |
| L2 | 104.2 | 114.7 | 125.2 | 135.7 | 146.2 | 156.7 | 167.2 | 177.7 | 188.2 | 198.7 | 209.2 | 219.7 | 230.2 | 240.7 | 251.2 | 261.7 | 272.2 | 282.7 | 293.2 | 303.7 | 314.2 | 324.7 | 335.2 | 345.7 |
| L3 | 125 | 137.5 | 150 | 162.5 | 175 | 187.5 | 187.5 | 200 | 212.5 | 225 | 237.5 | 250 | 250 | 262.5 | 275 | 287.5 | 300 | 312.5 | 325 | 325 | 337.5 | 350 | 362.5 | 375 |
| L4 | 135.5 | 148 | 160.5 | 173 | 185.5 | 198 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 | 260.5 | 273 | 285.5 | 298 | 310.5 | 323 | 335.5 | 335.5 | 348 | 360.5 | 373 | 385.5 |

VQC Series

S VQC2000 Series




Kit (Serial transmission) For EX260 Integrated-type (For Output) Serial Transmission System

IP40 compliant

IP67 compliant

VV5QC21

S kit (Serial transmission kit: EX260)

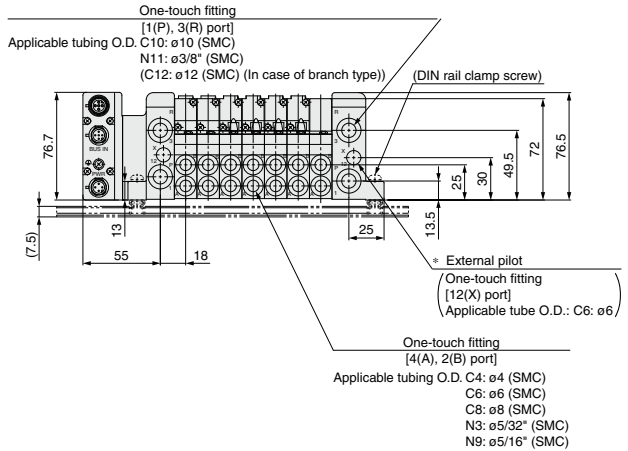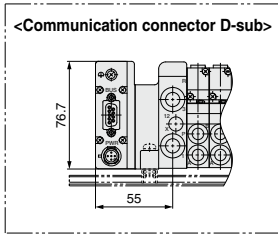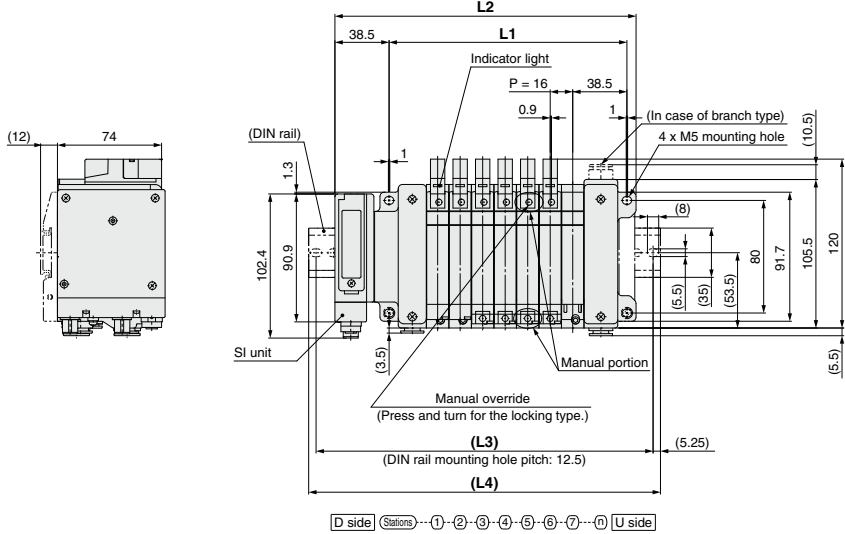

n: Stations (Maximum 24 stations)


| L \ n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 | 313 | 329 | 345 | 361 | 377 | 393 | 409 | 425 | 441 |
| L2 | 118 | 134 | 150 | 166 | 182 | 198 | 214 | 230 | 246 | 262 | 278 | 294 | 310 | 326 | 342 | 358 | 374 | 390 | 406 | 422 | 438 | 454 | 470 | 486 |
| L3 | 137.5 | 162.5 | 175 | 187.5 | 212.5 | 225 | 237.5 | 250 | 275 | 287.5 | 300 | 325 | 337.5 | 350 | 362.5 | 387.5 | 400 | 412.5 | 437.5 | 450 | 462.5 | 475 | 500 | 512.5 |
| L4 | 148 | 173 | 185.5 | 198 | 223 | 235.5 | 248 | 260.5 | 285.5 | 298 | 310.5 | 335.5 | 348 | 360.5 | 373 | 398 | 410.5 | 423 | 448 | 460.5 | 473 | 485.5 | 510.5 | 523 |

S VQC1000/2000 Series


Kit (Serial transmission) For EX250 Integrated-type (I/O) Serial Transmission System IP67 compliant

VV5QC21

S kit (Serial transmission kit: EX250)

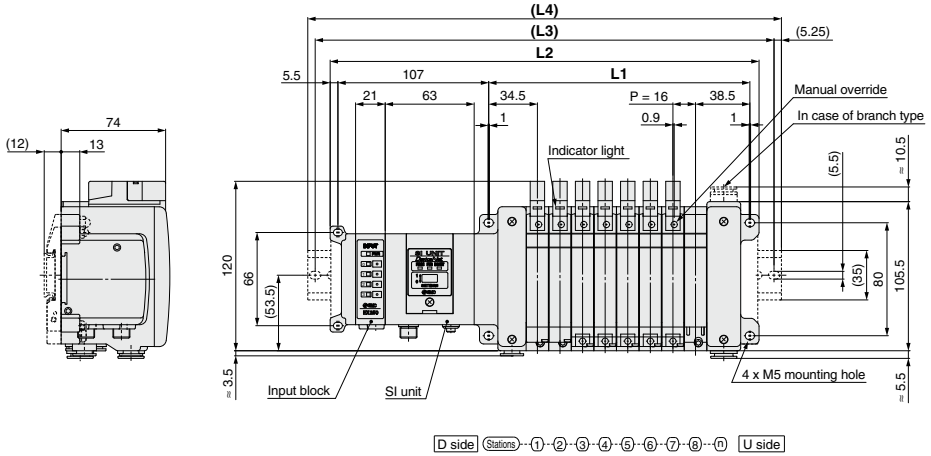

D side Stations ①-②-③-④-⑤-⑥-⑦-⑧-⑨ U side

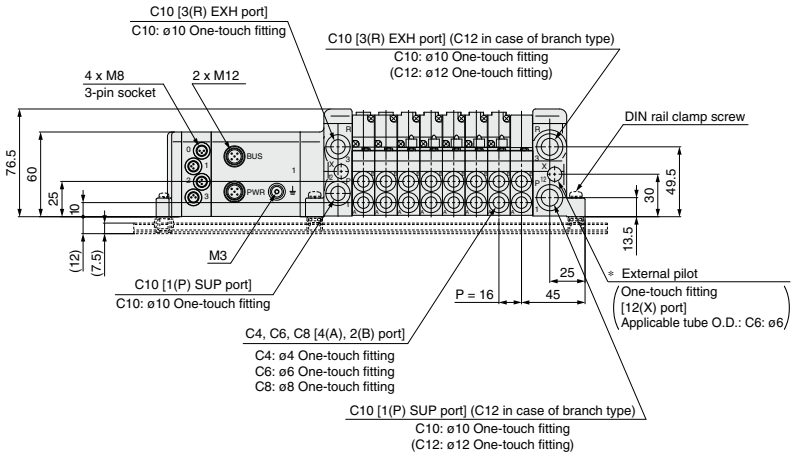

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).


Formula: L1 = 16n + 57, L2 = 16n + 176 (For one input block. Add 21 mm for each additional input block.) n: Stations (Maximum 24 stations)

| L \ n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 | 313 | 329 | 345 | 361 | 377 | 393 | 409 | 425 | 441 |
| L2 | 192 | 208 | 224 | 240 | 256 | 272 | 288 | 304 | 320 | 336 | 352 | 368 | 384 | 400 | 416 | 432 | 448 | 464 | 480 | 496 | 512 | 528 | 544 | 560 |
| L3 | 212.5 | 237.5 | 250 | 262.5 | 275 | 287.5 | 312.5 | 325 | 337.5 | 362.5 | 375 | 387.5 | 400 | 425 | 437.5 | 450 | 462.5 | 487.5 | 500 | 512.5 | 537.5 | 550 | 562.5 | 587.5 |
| L4 | 223 | 248 | 260.5 | 273 | 285.5 | 298 | 323 | 335.5 | 348 | 373 | 385.5 | 398 | 410.5 | 435.5 | 448 | 460.5 | 473 | 498 | 510.5 | 523 | 548 | 560.5 | 573 | 598 |


S VQC1000/2000 Series

Kit (Serial transmission) For EX126 Integrated-type (For Output) Serial Transmission System IP67 compliant

VV5QC11 S kit (Serial transmission kit: EX126)

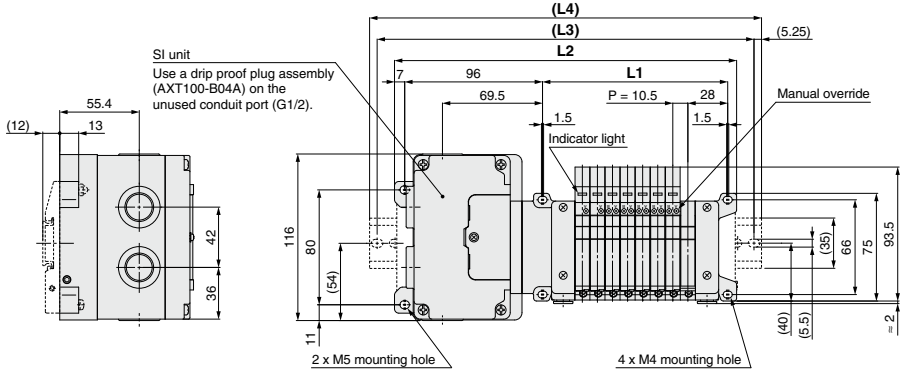

D side (Stations) ①-②-③-④-⑤-⑥-⑦-⑧-⑨-n U side

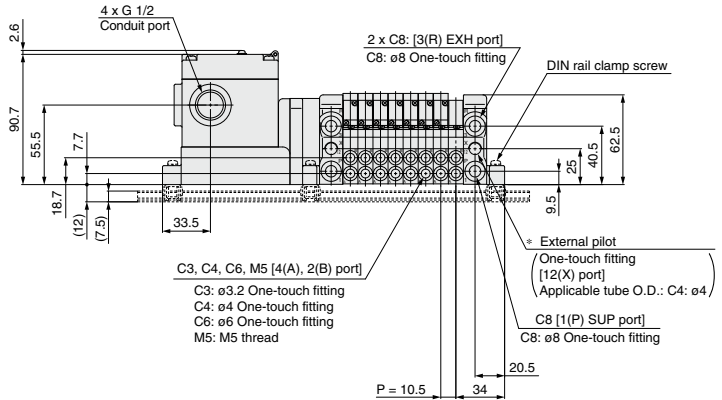

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).



Formula: L1 = 10.5n + 45, L2 = 10.5n + 154.5 n: Stations (Maximum 16 stations)

| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
|----|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 55.5 | 66 | 76.5 | 87 | 97.5 | 108 | 118.5 | 129 | 139.5 | 150 | 160.5 | 171 | 181.5 | 192 | 202.5 | 213 |
| L2 | | 165 | 175.5 | 186 | 196.5 | 207 | 217.5 | 228 | 238.5 | 249 | 259.5 | 270 | 280.5 | 291 | 301.5 | 312 | 322.5 |
| L3 | | 187.5 | 200 | 212.5 | 225 | 237.5 | 250 | 262.5 | 275 | 287.5 | 300 | 300 | 312.5 | 325 | 337.5 | 350 | |
| L4 | | 198 | 210.5 | 223 | 235.5 | 248 | 248 | 260.5 | 273 | 285.5 | 298 | 310.5 | 310.5 | 323 | 335.5 | 348 | 360.5 |

S VQC1000/2000 Series

Kit (Serial transmission) For EX126 Integrated-type (For Output) Serial Transmission System IP67 compliant

VV5QC21 S kit (Serial transmission kit: EX126)

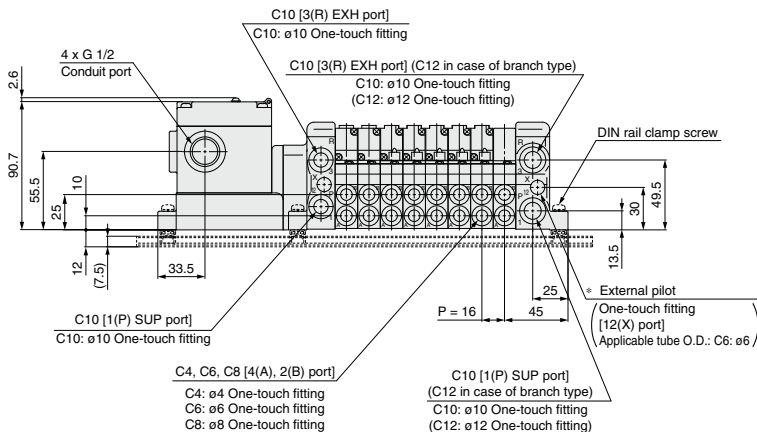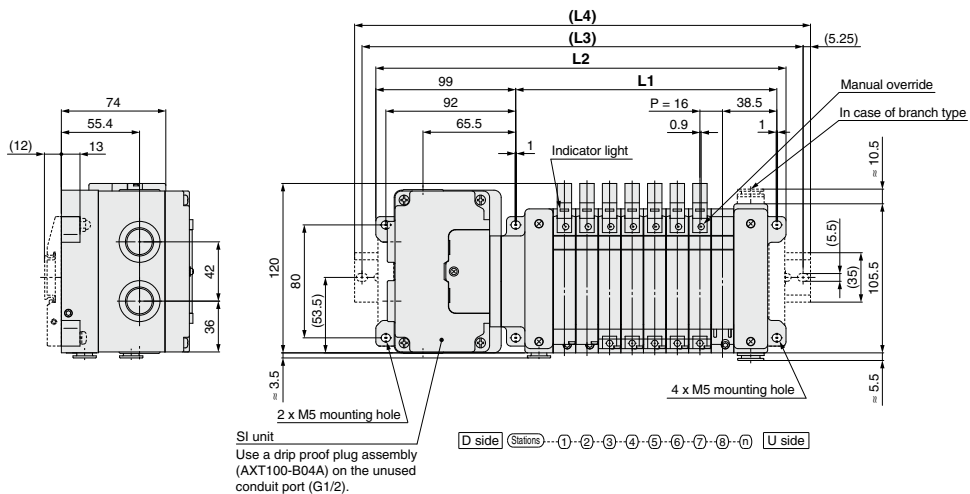

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: $L1 = 16n + 57$, $L2 = 16n + 163$ n: Stations (Maximum 16 stations)


| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
|-----------|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 | 313 |
| L2 | | 179 | 195 | 211 | 227 | 243 | 259 | 275 | 291 | 307 | 323 | 339 | 355 | 371 | 387 | 403 | 419 |
| L3 | | 200 | 225 | 237.5 | 250 | 262.5 | 287.5 | 300 | 312.5 | 337.5 | 371 | 362.5 | 375 | 400 | 412.5 | 425 | 450 |
| L4 | | 210.5 | 235.5 | 248 | 260.5 | 273 | 298 | 310.5 | 323 | 348 | 360.5 | 373 | 385.5 | 410.5 | 423 | 435.5 | 460.5 |

- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7

VQC Series


F VQC1000/2000 Series Kit (D-sub connector) IP40 compliant

- Using our D-sub connector for electrical connections greatly reduces labor, while it also minimizes wiring and saves space.
- We use a D-sub connector (25P) that conforms to MIL standards and is therefore widely compatible with many standard commercial models.
- Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.

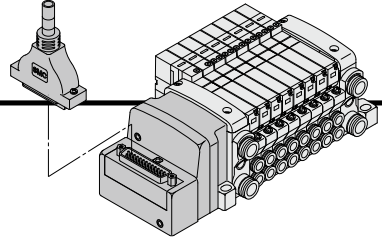

Electrical Wiring Specifications

 D-sub connector



As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.
Mixed single and double wiring are available as an option. Refer to the below special wiring specifications (option).


Lead wire colors for D-sub connector assembly (AXT100-DS25-015 to 050)

| Station | Terminal no. | Polarity | Lead wire color | Dot marking |
|------------|--------------|----------|-----------------|-------------|
| Station 1 | SOL.A 1 | (-) | (+) Black | None |
| | SOL.B 14 | (-) | (+) Yellow | Black |
| Station 2 | SOL.A 2 | (-) | (+) Brown | None |
| | SOL.B 15 | (-) | (+) Pink | Black |
| Station 3 | SOL.A 3 | (-) | (+) Red | None |
| | SOL.B 16 | (-) | (+) Blue | White |
| Station 4 | SOL.A 4 | (-) | (+) Orange | None |
| | SOL.B 17 | (-) | (+) Purple | None |
| Station 5 | SOL.A 5 | (-) | (+) Yellow | None |
| | SOL.B 18 | (-) | (+) Gray | None |
| Station 6 | SOL.A 6 | (-) | (+) Pink | None |
| | SOL.B 19 | (-) | (+) Orange | Black |
| Station 7 | SOL.A 7 | (-) | (+) Blue | None |
| | SOL.B 20 | (-) | (+) Red | White |
| Station 8 | SOL.A 8 | (-) | (+) Purple | White |
| | SOL.B 21 | (-) | (+) Brown | White |
| Station 9 | SOL.A 9 | (-) | (+) Gray | Black |
| | SOL.B 22 | (-) | (+) Pink | Red |
| Station 10 | SOL.A 10 | (-) | (+) White | Black |
| | SOL.B 23 | (-) | (+) Gray | Red |
| Station 11 | SOL.A 11 | (-) | (+) White | Red |
| | SOL.B 24 | (-) | (+) Black | White |
| Station 12 | SOL.A 12 | (-) | (+) Yellow | Red |
| | SOL.B 25 | (-) | (+) White | None |
| COM. | 13 | (+) | (-) Orange | Red |

Note) When using the negative COM specification, use valves for negative COM.

Special Wiring Specifications (Option)

 (25P)




Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

Cable Assembly

AXT100-DS25-015 to 050

(D-sub connector cable assembly can be ordered with manifolds.)
Refer to "How to Order Manifold."

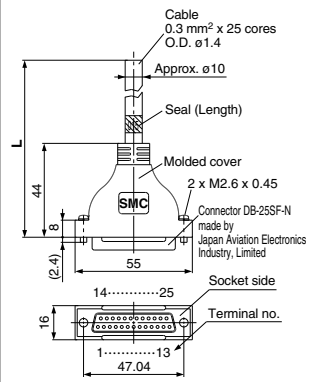

Lead wire colors for D-sub connector cable assembly terminal numbers

| Terminal no. | Lead wire color | Dot marking |
|--------------|-----------------|-------------|
| 1 | Black | None |
| 2 | Brown | None |
| 3 | Red | None |
| 4 | Orange | None |
| 5 | Yellow | None |
| 6 | Pink | None |
| 7 | Blue | None |
| 8 | Purple | White |
| 9 | Gray | Black |
| 10 | White | Black |
| 11 | White | Red |
| 12 | Yellow | Red |
| 13 | Orange | Red |
| 14 | Yellow | Black |
| 15 | Pink | Black |
| 16 | Blue | White |
| 17 | Purple | None |
| 18 | Gray | None |
| 19 | Orange | Black |
| 20 | Red | White |
| 21 | Brown | White |
| 22 | Pink | Red |
| 23 | Gray | Red |
| 24 | Black | White |
| 25 | White | None |

D-sub connector cable assembly

| Cable length (L) | Assembly part no. | Note |
|------------------|-------------------|--------------------------------------|
| 1.5 m | AXT100-DS25-015 | |
| 3 m | AXT100-DS25-030 | Cable 0.3 mm ² x 25 cores |
| 5 m | AXT100-DS25-050 | |

- * When using a standard commercial connector, use a type 25P female connector conforming to MIL-C-24308.
- * Cannot be used for transfer wiring.
- * Lengths other than the above is also available. Please contact SMC for details.

Connector Manufacturers' Example

- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- HIROSE ELECTRIC CO., LTD.

Electrical characteristics

| Item | Property |
|--|------------|
| Conductor resistance Ω /km, 20°C | 65 or less |
| Voltage limit V, 1 minute, AC | 1000 |
| Insulation resistance M Ω /km, 20°C | 5 or more |


Note) The minimum bending radius of the D-sub connector cable is 20 mm.



F VQC1000/2000 Series

Kit (D-sub connector) IP40 compliant


VV5QC11

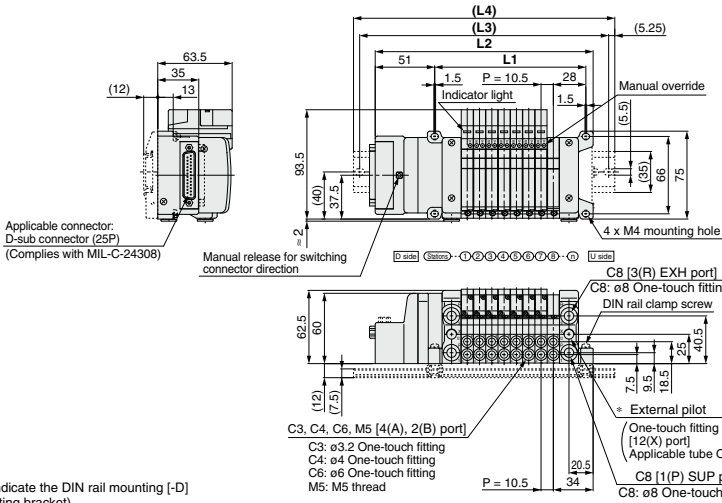

The dashed lines indicate the DIN rail mounting [-D] (with DIN rail mounting bracket).

| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|----|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 55.5 | 66 | 76.5 | 87 | 97.5 | 108 | 118.5 | 129 | 139.5 | 150 | 160.5 | 171 | 181.5 | 192 | 202.5 | 213 | 223.5 | 234 | 244.5 | 255 | 265.5 | 276 | 286.5 | 297 |
| L2 | | 112.5 | 123 | 133.5 | 144 | 154.5 | 165 | 175.5 | 186 | 196.5 | 207 | 217.5 | 228 | 238.5 | 249 | 259.5 | 270 | 280.5 | 291 | 301.5 | 312 | 322.5 | 333 | 343.5 | 354 |
| L3 | | 137.5 | 150 | 162.5 | 175 | 175 | 187.5 | 200 | 212.5 | 225 | 237.5 | 237.5 | 250 | 262.5 | 275 | 287.5 | 300 | 300 | 312.5 | 325 | 337.5 | 350 | 362.5 | 375 | 375 |
| L4 | | 148 | 160.5 | 173 | 185.5 | 185.5 | 198 | 210.5 | 223 | 235.5 | 248 | 248 | 260.5 | 273 | 285.5 | 298 | 310.5 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 385.5 |

VV5QC21

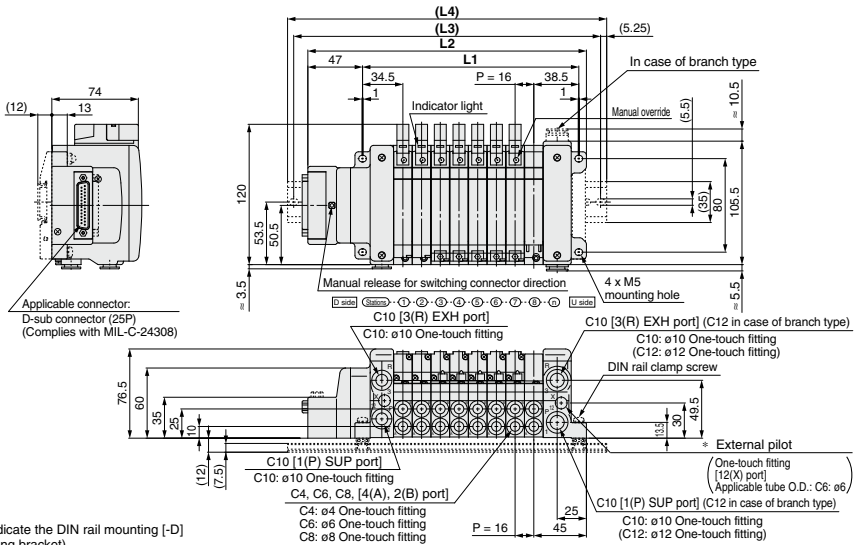


The dashed lines indicate the DIN rail mounting [-D] (with DIN rail mounting bracket).

| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|----|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 | 313 | 329 | 345 | 361 | 377 | 393 | 409 | 425 | 441 |
| L2 | | 126.5 | 142.5 | 158.5 | 174.5 | 190.5 | 206.5 | 222.5 | 238.5 | 254.5 | 270.5 | 286.5 | 302.5 | 318.5 | 334.5 | 350.5 | 366.5 | 382.5 | 398.5 | 414.5 | 430.5 | 446.5 | 462.5 | 478.5 | 494.5 |
| L3 | | 150 | 162.5 | 187.5 | 200 | 212.5 | 237.5 | 250 | 262.5 | 275 | 300 | 312.5 | 325 | 350 | 362.5 | 375 | 387.5 | 412.5 | 425 | 437.5 | 450 | 475 | 487.5 | 500 | 525 |
| L4 | | 160.5 | 173 | 198 | 210.5 | 223 | 248 | 260.5 | 273 | 285.5 | 310.5 | 323 | 335.5 | 360.5 | 373 | 385.5 | 398 | 423 | 435.5 | 448 | 460.5 | 485.5 | 498 | 510.5 | 535.5 |

- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7

VQC Series

P VQC1000/2000 Series Kit (Flat ribbon cable) IP40 compliant

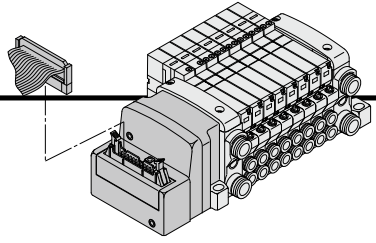

- Using our flat ribbon cable for electrical connections greatly reduces labor, while it also minimizes wiring and saves space.
- We use flat ribbon cables whose connectors (26P and 20P) conform to MIL standards, and are therefore widely compatible with many standard commercial models.
- Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.

Electrical Wiring Specifications

Flat ribbon cable connector

Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring are available as an option. Refer to the below special wiring specifications (option).

Connector terminal number

Triangle mark indicator position

| <26P> | | <20P> | |
|--------------|-----------------|--------------|------------------|
| Terminal no. | Polarity | Terminal no. | Polarity |
| Station 1 | SOL.A 1 (+) | Station 1 | SOL.A 1 (-) (+) |
| | SOL.B 2 (-) | | SOL.B 2 (-) (+) |
| Station 2 | SOL.A 3 (+) | Station 2 | SOL.A 3 (-) (+) |
| | SOL.B 4 (-) | | SOL.B 4 (-) (+) |
| Station 3 | SOL.A 5 (+) | Station 3 | SOL.A 5 (-) (+) |
| | SOL.B 6 (-) | | SOL.B 6 (-) (+) |
| Station 4 | SOL.A 7 (+) | Station 4 | SOL.A 7 (-) (+) |
| | SOL.B 8 (-) | | SOL.B 8 (-) (+) |
| Station 5 | SOL.A 9 (+) | Station 5 | SOL.A 9 (-) (+) |
| | SOL.B 10 (-) | | SOL.B 10 (-) (+) |
| Station 6 | SOL.A 11 (+) | Station 6 | SOL.A 11 (-) (+) |
| | SOL.B 12 (-) | | SOL.B 12 (-) (+) |
| Station 7 | SOL.A 13 (+) | Station 7 | SOL.A 13 (-) (+) |
| | SOL.B 14 (-) | | SOL.B 14 (-) (+) |
| Station 8 | SOL.A 15 (+) | Station 8 | SOL.A 15 (-) (+) |
| | SOL.B 16 (-) | | SOL.B 16 (-) (+) |
| Station 9 | SOL.A 17 (+) | Station 9 | SOL.A 17 (-) (+) |
| | SOL.B 18 (-) | | SOL.B 18 (-) (+) |
| Station 10 | SOL.A 19 (+) | | COM. 19 (+) (-) |
| | SOL.B 20 (-) | | COM. 20 (+) (-) |
| Station 11 | SOL.A 21 (+) | | |
| | SOL.B 22 (-) | | |
| Station 12 | SOL.A 23 (+) | | |
| | SOL.B 24 (-) | | |
| | COM. 25 (+) (-) | | |
| | COM. 26 (+) (-) | | |

Note) Positive Negative COM spec. COM spec.

Note) When using the negative COM specification, use valves for negative COM.

Cable Assembly

AXT100-FC $\begin{matrix} 20 \\ 26 \\ 3 \end{matrix}$

(Type 26P flat ribbon cable connector assembly can be ordered with manifolds. Refer to "How to Order Manifold.")

Terminal no. Red 28AWG

30 (20P) 37.5 (26P)

6

2

2

15.6

L

Flat ribbon cable connector assembly

| Cable length (L) | Assembly part no. | |
|------------------|-------------------|---------------|
| | 26P | 20P |
| 1.5 m | AXT100-FC26-1 | AXT100-FC20-1 |
| 3 m | AXT100-FC26-2 | AXT100-FC20-2 |
| 5 m | AXT100-FC26-3 | AXT100-FC20-3 |

- When using a standard commercial connector, use a type 26P connector conforming to MIL-C-83503 or a type 20P with strain relief.
- Cannot be used for transfer wiring.
- Lengths other than the above is also available. Please contact SMC for details.

Connector Manufacturers' Example

- HIROSE ELECTRIC CO., LTD.
- 3M Japan Limited
- Fujitsu Limited
- Japan Aviation Electronics Industry, Limited
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.

Special Wiring Specifications (Option)

COM

COM

COM

COM

26 □ 25

24 □ 23

22 □ 21

20 □ 19

18 □ 17

16 □ 15

14 □ 13

12 □ 11

10 □ 9

8 □ 7

6 □ 5

4 □ 3

2 □ 1

(26P)

20 □ 19

18 □ 17

16 □ 15

14 □ 13

12 □ 11

10 □ 9

8 □ 7

6 □ 5

4 □ 3

2 □ 1


(20P)

Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

P VQC1000/2000 Series

Kit (Flat ribbon cable) IP40 compliant

VV5QC11

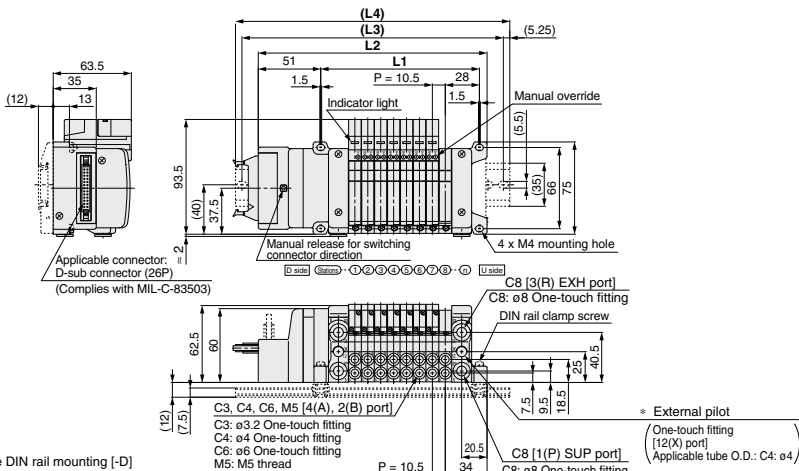


The dashed lines indicate the DIN rail mounting [-D] (with DIN rail mounting bracket).

Formula: $L1 = 10.5n + 45$, $L2 = 10.5n + 102$ n: Stations (Maximum 24 stations)

| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|-----------|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 55.5 | 66 | 76.5 | 87 | 97.5 | 108 | 118.5 | 129 | 139.5 | 150 | 160.5 | 171 | 181.5 | 192 | 202.5 | 213 | 223.5 | 234 | 244.5 | 255 | 265.5 | 276 | 286.5 | 297 |
| L2 | | 112.5 | 123 | 133.5 | 144 | 154.5 | 165 | 175.5 | 186 | 196.5 | 207 | 217.5 | 228 | 238.5 | 249 | 259.5 | 270 | 280.5 | 291 | 301.5 | 312 | 322.5 | 333 | 343.5 | 354 |
| L3 | | 137.5 | 150 | 162.5 | 175 | 175 | 187.5 | 200 | 212.5 | 225 | 237.5 | 237.5 | 250 | 262.5 | 275 | 287.5 | 300 | 300 | 312.5 | 325 | 337.5 | 350 | 362.5 | 375 | 375 |
| L4 | | 148 | 160.5 | 173 | 185.5 | 185.5 | 198 | 210.5 | 223 | 235.5 | 248 | 248 | 260.5 | 273 | 285.5 | 298 | 310.5 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 385.5 |

VV5QC21

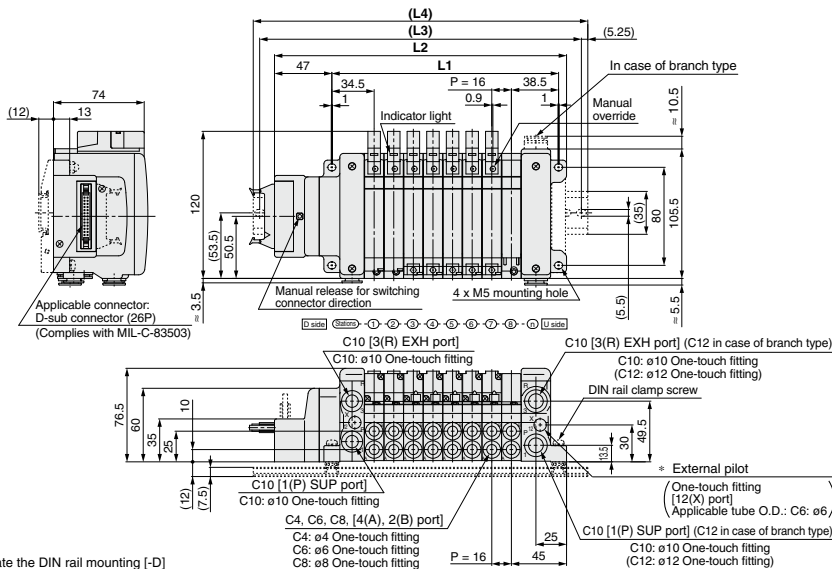

The dashed lines indicate the DIN rail mounting [-D] (with DIN rail mounting bracket).


Formula: $L1 = 16n + 57$, $L2 = 16n + 110.5$ n: Stations (Maximum 24 stations)

| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|-----------|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 | 313 | 329 | 345 | 361 | 377 | 393 | 409 | 425 | 441 |
| L2 | | 126.5 | 142.5 | 158.5 | 174.5 | 190.5 | 206.5 | 222.5 | 238.5 | 254.5 | 270.5 | 286.5 | 302.5 | 318.5 | 334.5 | 350.5 | 366.5 | 382.5 | 398.5 | 414.5 | 430.5 | 446.5 | 462.5 | 478.5 | 494.5 |
| L3 | | 150 | 162.5 | 187.5 | 200 | 212.5 | 237.5 | 250 | 262.5 | 275 | 300 | 312.5 | 325 | 350 | 362.5 | 375 | 387.5 | 412.5 | 425 | 437.5 | 450 | 475 | 487.5 | 500 | 525 |
| L4 | | 160.5 | 173 | 198 | 210.5 | 223 | 248 | 260.5 | 273 | 285.5 | 310.5 | 323 | 335.5 | 360.5 | 373 | 385.5 | 398 | 423 | 435.5 | 448 | 460.5 | 485.5 | 498 | 510.5 | 535.5 |

- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7

VQC Series

T VQC1000/2000 Series Kit (Terminal block box) IP67 compliant

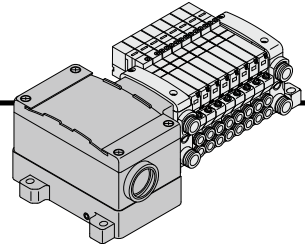


- This kit has a small terminal block inside a junction box. The electrical entry port of a G 3/4 permits connection of conduit fittings.

Terminal Block Connection

Step 1. Removing the terminal block cover

Loosen the 4 mounting screws (M4) and remove the terminal block cover.

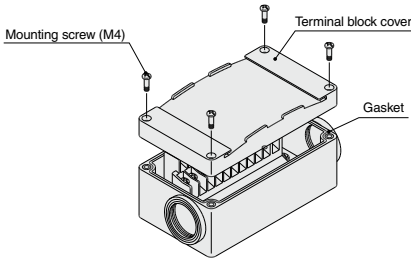

Step 3. Mounting the terminal block cover

Securely tighten the screws to the torque shown in the table below, after confirming that the gasket is installed correctly.


| |
|--------------------------------|
| Proper tightening torque (N·m) |
| 0.7 to 1.2 |

- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip-proof plug assembly (for G 3/4): AXT100-B06A


Step 2. The diagram below shows the terminal block wiring.

All stations are provided with double wiring regardless of the valves which are mounted.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

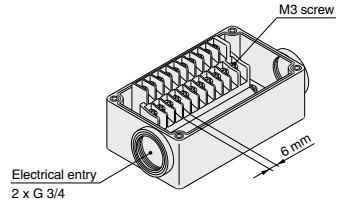

 Electrical Wiring Specifications (IP67 compatible)



Double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring are available as an option.

Note) When using the negative COM specification, use valves for negative COM.

Standard wiring

| | Terminal no. | Polarity |
|------------|--------------|---------------|
| Station 1 | SOL.A | 1A (-) (+) |
| | SOL.B | 1B (-) (+) |
| Station 2 | SOL.A | 2A (-) (+) |
| | SOL.B | 2B (-) (+) |
| Station 3 | SOL.A | 3A (-) (+) |
| | SOL.B | 3B (-) (+) |
| Station 4 | SOL.A | 4A (-) (+) |
| | SOL.B | 4B (-) (+) |
| Station 5 | SOL.A | 5A (-) (+) |
| | SOL.B | 5B (-) (+) |
| Station 6 | SOL.A | 6A (-) (+) |
| | SOL.B | 6B (-) (+) |
| Station 7 | SOL.A | 7A (-) (+) |
| | SOL.B | 7B (-) (+) |
| Station 8 | SOL.A | 8A (-) (+) |
| | SOL.B | 8B (-) (+) |
| Station 9 | SOL.A | 9A (-) (+) |
| | SOL.B | 9B (-) (+) |
| Station 10 | SOL.A | 10A (-) (+) |
| | SOL.B | 10B (-) (+) |
| | COM | (+) (-) Note) |

Positive COM spec. Negative COM spec.

Special Wiring Specifications (Option)

 
Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 20.

1. How to Order

Indicate option symbol "K" in the manifold part number and be sure to specify station positions for single or double wiring on the manifold specification sheet.

2. Wiring specifications


Connector terminal numbers are connected from solenoid station 1 on the A side in the order indicated by the arrows without skipping any terminal numbers.



T VQC1000/2000 Series

Kit (Terminal block box) IP67 compliant


VV5QC11

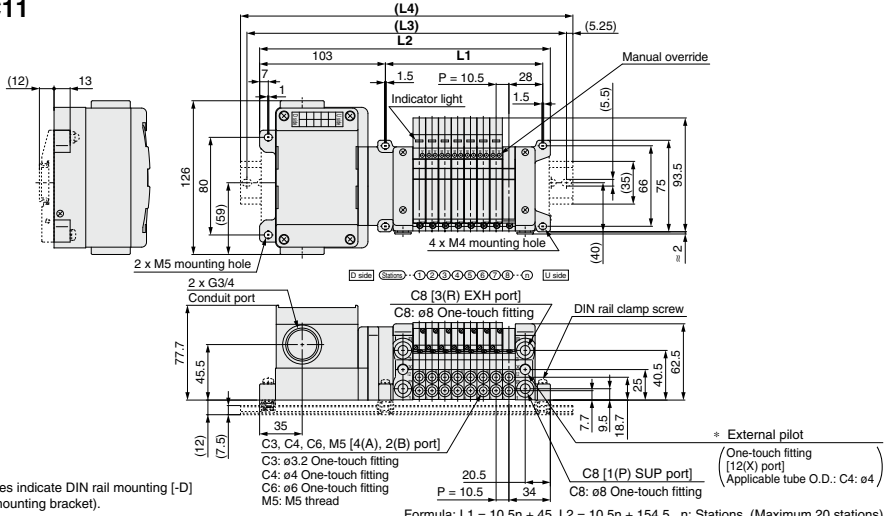

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

| L \ n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
|-----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 55.5 | 66 | 76.5 | 87 | 97.5 | 108 | 118.5 | 129 | 139.5 | 150 | 160.5 | 171 | 181.5 | 192 | 202.5 | 213 | 223.5 | 234 | 244.5 | 255 |
| L2 | 165 | 175.5 | 186 | 196.5 | 207 | 217.5 | 228 | 238.5 | 249 | 259.5 | 270 | 280.5 | 291 | 301.5 | 312 | 322.5 | 333 | 343.5 | 354 | 364.5 |
| L3 | 187.5 | 200 | 212.5 | 225 | 237.5 | 250 | 262.5 | 275 | 287.5 | 300 | 300 | 312.5 | 325 | 337.5 | 350 | 362.5 | 375 | 375 | 387.5 | |
| L4 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 | 273 | 285.5 | 298 | 310.5 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 385.5 | 398 | |

VV5QC21

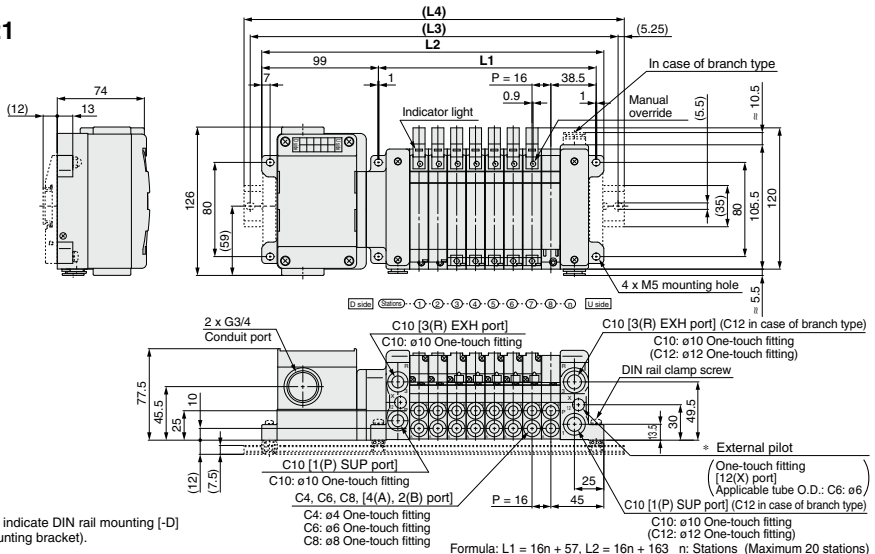


The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

| L \ n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 |
|-----------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 | 313 | 329 | 345 | 361 | 377 |
| L2 | 179 | 195 | 211 | 227 | 243 | 259 | 275 | 291 | 307 | 323 | 339 | 355 | 371 | 387 | 403 | 419 | 435 | 451 | 467 | 483 |
| L3 | 200 | 225 | 237.5 | 250 | 262.5 | 287.5 | 300 | 312.5 | 337.5 | 371 | 362.5 | 375 | 400 | 412.5 | 425 | 450 | 462.5 | 496 | 487.5 | 512.5 |
| L4 | 210.5 | 235.5 | 248 | 260.5 | 273 | 298 | 310.5 | 323 | 348 | 360.5 | 373 | 385.5 | 410.5 | 423 | 435.5 | 460.5 | 473 | 485.5 | 498 | 523 |

- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2**
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7

VQC Series

VQC1000/2000 Series Kit (Lead wire) IP67 compliant

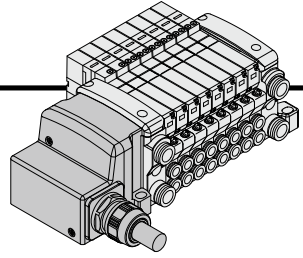


- Direct electrical entry type
- IP67 enclosure is available with use of cables with sheath and waterproof connectors.

Electrical Wiring Specifications

Lead wire specifications

Lead wire

0.3 mm² x 25 cores

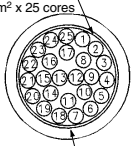

As the standard electrical wiring specifications, double wiring (connected to SOL. A and SOL. B) is adopted for the internal wiring of each station for 12 stations or less, regardless of valve and option types.

Mixed single and double wiring are available as an option. Refer to the below special wiring specifications (option).

Lead wire length

VV5QC11-08 C6 LD 0

Lead wire length

| | |
|---|-------|
| 0 | 0.6 m |
| 1 | 1.5 m |
| 2 | 3.0 m |

Electrical characteristics

| Item | Property |
|--------------------------------------|------------|
| Conductor resistance Ω/km, 20°C | 65 or less |
| Voltage limit V, 1 minute, AC | 1000 |
| Insulation resistance MΩ/km, 20°C | 5 or more |

Note) Cannot be used for transfer wiring.
The minimum bending radius of the cable is 20 mm.

| | Terminal no. | Polarity | Lead wire color | Dot marking |
|------------|--------------|----------|-----------------|--------------|
| Station 1 | SOL.A 1 | (-) | (+) | Black None |
| | SOL.B 14 | (-) | (+) | Yellow Black |
| Station 2 | SOL.A 2 | (-) | (+) | Brown None |
| | SOL.B 15 | (-) | (+) | Pink Black |
| Station 3 | SOL.A 3 | (-) | (+) | Red None |
| | SOL.B 16 | (-) | (+) | Blue White |
| Station 4 | SOL.A 4 | (-) | (+) | Orange None |
| | SOL.B 17 | (-) | (+) | Purple None |
| Station 5 | SOL.A 5 | (-) | (+) | Yellow None |
| | SOL.B 18 | (-) | (+) | Gray None |
| Station 6 | SOL.A 6 | (-) | (+) | Pink None |
| | SOL.B 19 | (-) | (+) | Orange Black |
| Station 7 | SOL.A 7 | (-) | (+) | Blue None |
| | SOL.B 20 | (-) | (+) | Red White |
| Station 8 | SOL.A 8 | (-) | (+) | Purple White |
| | SOL.B 21 | (-) | (+) | Brown White |
| Station 9 | SOL.A 9 | (-) | (+) | Gray Black |
| | SOL.B 22 | (-) | (+) | Pink Red |
| Station 10 | SOL.A 10 | (-) | (+) | White Black |
| | SOL.B 23 | (-) | (+) | Gray Red |
| Station 11 | SOL.A 11 | (-) | (+) | White Red |
| | SOL.B 24 | (-) | (+) | Black White |
| Station 12 | SOL.A 12 | (-) | (+) | Yellow Red |
| | SOL.B 25 | (-) | (+) | White None |
| | COM. 13 | (+) | (-) | Orange Red |

Note)
Positive COM spec.
Negative COM spec.

Note) When using the negative COM specification, use valves for negative COM.


Special Wiring Specifications (Option)

Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

VQC1000/2000 Series

Kit (Lead wire) IP67 compliant


VV5QC11

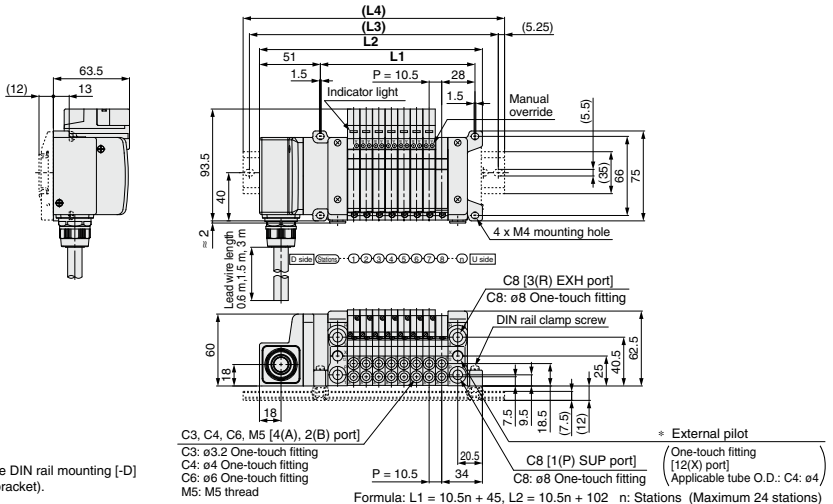

The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|----|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-----|-------|-----|-------|-----|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 55.5 | 66 | 76.5 | 87 | 97.5 | 108 | 118.5 | 129 | 139.5 | 150 | 160.5 | 171 | 181.5 | 192 | 202.5 | 213 | 223.5 | 234 | 244.5 | 255 | 265.5 | 276 | 286.5 | 297 |
| L2 | | 112.5 | 123 | 133.5 | 144 | 154.5 | 165 | 175.5 | 186 | 196.5 | 207 | 217.5 | 228 | 238.5 | 249 | 259.5 | 270 | 280.5 | 291 | 301.5 | 312 | 322.5 | 333 | 343.5 | 354 |
| L3 | | 137.5 | 150 | 162.5 | 175 | 187.5 | 200 | 212.5 | 225 | 237.5 | 250 | 262.5 | 275 | 287.5 | 300 | 300 | 312.5 | 325 | 337.5 | 350 | 362.5 | 375 | 375 | 375 | 375 |
| L4 | | 148 | 160.5 | 173 | 185.5 | 198 | 210.5 | 223 | 235.5 | 248 | 248 | 260.5 | 273 | 285.5 | 298 | 310.5 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 385.5 | 385.5 |

VV5QC21

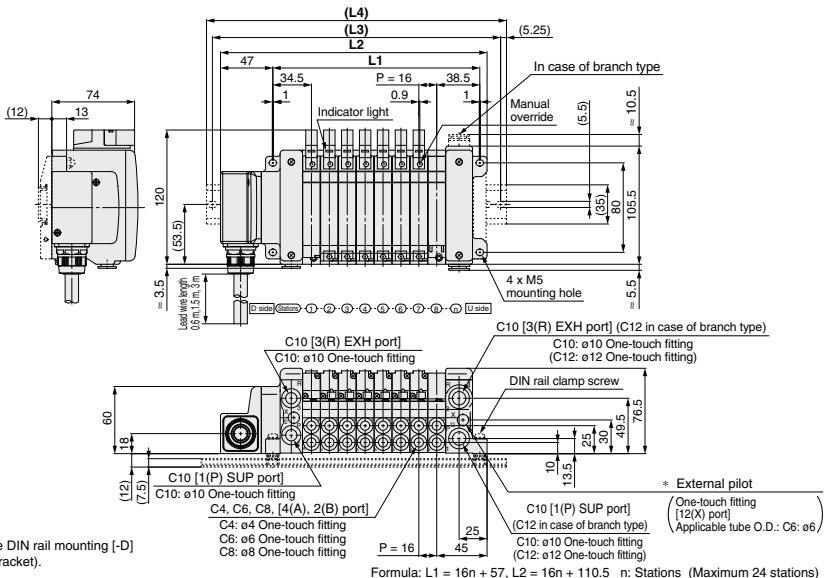


The dashed lines indicate DIN rail mounting [-D] (with DIN rail mounting bracket).

| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|----|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 | 313 | 329 | 345 | 361 | 377 | 393 | 409 | 425 | 441 |
| L2 | | 126.5 | 142.5 | 158.5 | 174.5 | 190.5 | 206.5 | 222.5 | 238.5 | 254.5 | 270.5 | 286.5 | 302.5 | 318.5 | 334.5 | 350.5 | 366.5 | 382.5 | 398.5 | 414.5 | 430.5 | 446.5 | 462.5 | 478.5 | 494.5 |
| L3 | | 150 | 162.5 | 187.5 | 200 | 212.5 | 237.5 | 250 | 262.5 | 275 | 300 | 312.5 | 325 | 350 | 362.5 | 375 | 387.5 | 412.5 | 425 | 437.5 | 450 | 475 | 487.5 | 500 | 525 |
| L4 | | 160.5 | 173 | 198 | 210.5 | 223 | 248 | 260.5 | 273 | 285.5 | 310.5 | 323 | 335.5 | 360.5 | 373 | 385.5 | 398 | 423 | 435.5 | 448 | 460.5 | 485.5 | 498 | 510.5 | 535.5 |

- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7

M VQC1000/2000 Series Kit (Circular connector) IP67 compliant

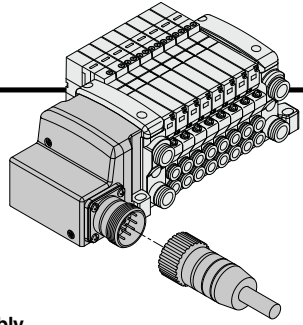

- Use of circular connectors helps streamline wiring procedure to save labor.
- IP67 enclosure is available with use of waterproof circular connectors.

Electrical Wiring Specifications

Circular connector

Double wiring (connected to SOL.A and SOL.B) is used for the internal wiring of each station, regardless of valve and option types. Mixed single and double wiring are available as an option. Refer to the below special wiring specifications (option).

| Station | Terminal no. | Polarity | Terminal no. | Polarity |
|------------|--------------|----------|--------------|----------|
| Station 1 | SOL.A 1 | (-) | (+) | |
| | SOL.B 2 | (-) | (+) | |
| Station 2 | SOL.A 3 | (-) | (+) | |
| | SOL.B 4 | (-) | (+) | |
| Station 3 | SOL.A 5 | (-) | (+) | |
| | SOL.B 6 | (-) | (+) | |
| Station 4 | SOL.A 7 | (-) | (+) | |
| | SOL.B 8 | (-) | (+) | |
| Station 5 | SOL.A 9 | (-) | (+) | |
| | SOL.B 10 | (-) | (+) | |
| Station 6 | SOL.A 11 | (-) | (+) | |
| | SOL.B 12 | (-) | (+) | |
| Station 7 | SOL.A 13 | (-) | (+) | |
| | SOL.B 14 | (-) | (+) | |
| Station 8 | SOL.A 15 | (-) | (+) | |
| | SOL.B 16 | (-) | (+) | |
| Station 9 | SOL.A 17 | (-) | (+) | |
| | SOL.B 18 | (-) | (+) | |
| Station 10 | SOL.A 19 | (-) | (+) | |
| | SOL.B 20 | (-) | (+) | |
| Station 11 | SOL.A 21 | (-) | (+) | |
| | SOL.B 22 | (-) | (+) | |
| Station 12 | SOL.A 23 | (-) | (+) | |
| | SOL.B 24 | (-) | (+) | |
| COM. | 25 | (+) | (-) | |
| | 26 | (+) | (-) | |

Note) Positive COM spec. Negative COM spec.

Note) When using the negative COM specification, use valves for negative COM.


Special Wiring Specifications (Option)

Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

Cable Assembly

AXT100-MC26-030
015
050

(Type 26P circular connector cable assembly can be ordered with manifolds. Refer to "How to Order Manifold.")

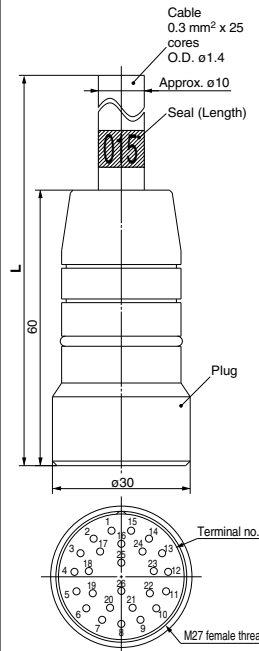

Lead wire colors for circular connector cable assembly terminal numbers

| Terminal no. | Lead wire color | Dot marking |
|--------------|-----------------|-------------|
| 1 | Black | None |
| 2 | Brown | None |
| 3 | Red | None |
| 4 | Orange | None |
| 5 | Yellow | None |
| 6 | Pink | None |
| 7 | Blue | None |
| 8 | Purple | White |
| 9 | Gray | Black |
| 10 | White | Black |
| 11 | White | Red |
| 12 | Yellow | Red |
| 13 | Orange | Red |
| 14 | Yellow | Black |
| 15 | Pink | Black |
| 16 | Blue | White |
| 17 | Purple | None |
| 18 | Gray | None |
| 19 | Orange | Black |
| 20 | Red | White |
| 21 | Brown | White |
| 22 | Pink | Red |
| 23 | Gray | Red |
| 24 | Black | White |
| 25 | White | None |
| 26 | White | None |

Electrical characteristics

| Item | Property |
|--------------------------------------|------------|
| Conductor resistance Ω/km, 20°C | 65 or less |
| Voltage limit V, 1 minute, AC | 1000 |
| Insulation resistance MΩ/km, 20°C | 5 or more |

Note) The minimum bending radius of the circular connector cable is 20 mm.

Circular connector cable assembly


| Cable length (L) | Assembly part no. |
|------------------|-------------------|
| | |
| 1.5 m | AXT100-MC26-015 |
| 3 m | AXT100-MC26-030 |
| 5 m | AXT100-MC26-050 |

- * Cannot be used for transfer wiring.
- * Lengths other than the above is also available. Please contact SMC for details.

M VQC1000/2000 Series


Kit (Circular connector) IP67 compliant

VV5QC11

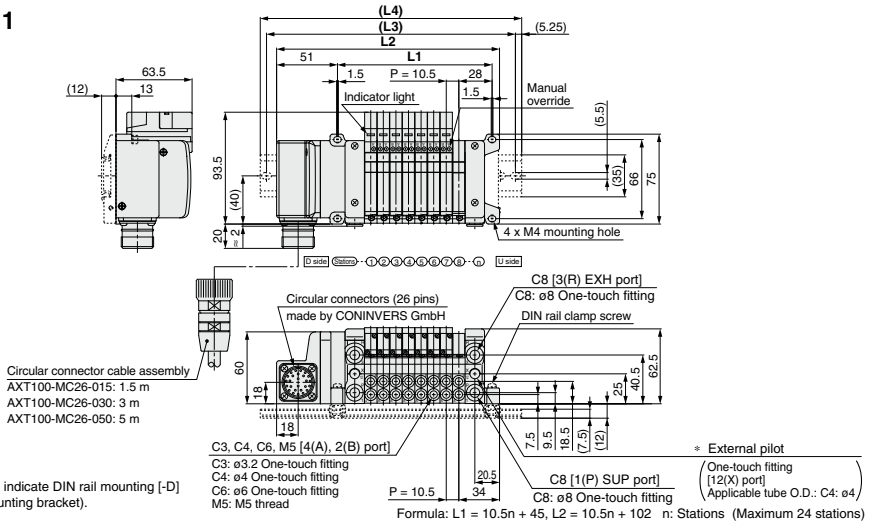

| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|----|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 55.5 | 66 | 76.5 | 87 | 97.5 | 108 | 118.5 | 129 | 139.5 | 150 | 160.5 | 171 | 181.5 | 192 | 202.5 | 213 | 223.5 | 234 | 244.5 | 255 | 265.5 | 276 | 286.5 | 297 |
| L2 | | 112.5 | 123 | 133.5 | 144 | 154.5 | 165 | 175.5 | 186 | 196.5 | 207 | 217.5 | 228 | 238.5 | 249 | 259.5 | 270 | 280.5 | 291 | 301.5 | 312 | 322.5 | 333 | 343.5 | 354 |
| L3 | | 137.5 | 150 | 162.5 | 175 | 175 | 187.5 | 200 | 212.5 | 225 | 237.5 | 237.5 | 250 | 262.5 | 275 | 287.5 | 300 | 300 | 312.5 | 325 | 337.5 | 350 | 362.5 | 375 | 375 |
| L4 | | 148 | 160.5 | 173 | 185.5 | 185.5 | 198 | 210.5 | 223 | 235.5 | 248 | 248 | 260.5 | 273 | 285.5 | 298 | 310.5 | 310.5 | 323 | 335.5 | 348 | 360.5 | 373 | 385.5 | 385.5 |

VV5QC21

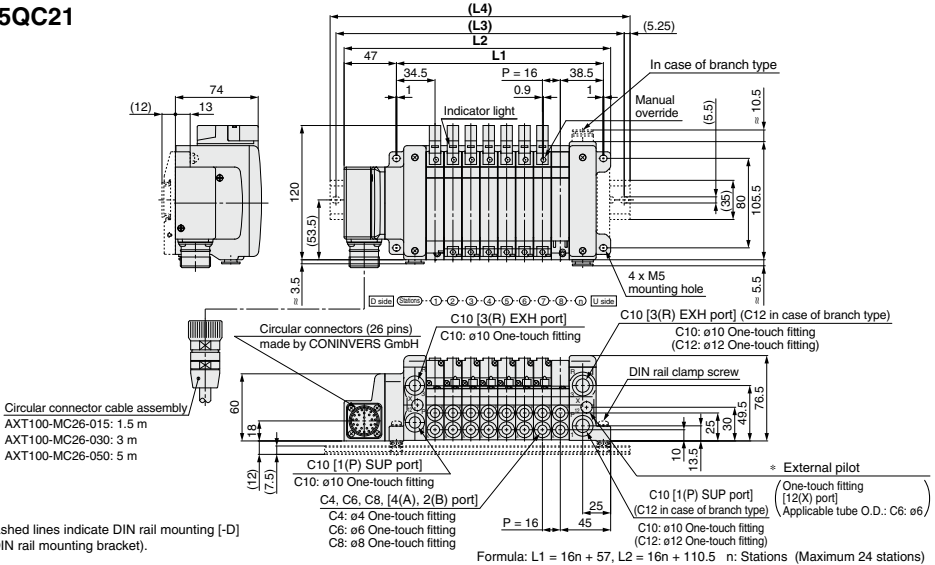


| L | n | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
|----|---|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | | 73 | 89 | 105 | 121 | 137 | 153 | 169 | 185 | 201 | 217 | 233 | 249 | 265 | 281 | 297 | 313 | 329 | 345 | 361 | 377 | 393 | 409 | 425 | 441 |
| L2 | | 126.5 | 142.5 | 158.5 | 174.5 | 190.5 | 206.5 | 222.5 | 238.5 | 254.5 | 270.5 | 286.5 | 302.5 | 318.5 | 334.5 | 350.5 | 366.5 | 382.5 | 398.5 | 414.5 | 430.5 | 446.5 | 462.5 | 478.5 | 494.5 |
| L3 | | 150 | 162.5 | 187.5 | 200 | 212.5 | 237.5 | 250 | 262.5 | 275 | 300 | 312.5 | 325 | 350 | 362.5 | 375 | 387.5 | 412.5 | 425 | 437.5 | 450 | 475 | 487.5 | 500 | 525 |
| L4 | | 160.5 | 173 | 198 | 210.5 | 223 | 248 | 260.5 | 273 | 285.5 | 310.5 | 323 | 335.5 | 360.5 | 373 | 385.5 | 398 | 423 | 435.5 | 448 | 460.5 | 485.5 | 498 | 510.5 | 535.5 |

- SV
- SYJ
- SZ
- VF
- VP4
- VQ 1/2
- VQ 4/5
- VQC 1/2
- VQC 4/5
- VQZ
- SQ
- VFS
- VFR
- VQ7


VQC1000/2000 Series Construction

VQC1000 Plug-in Unit: Main Parts/Replacement Parts

Metal seal

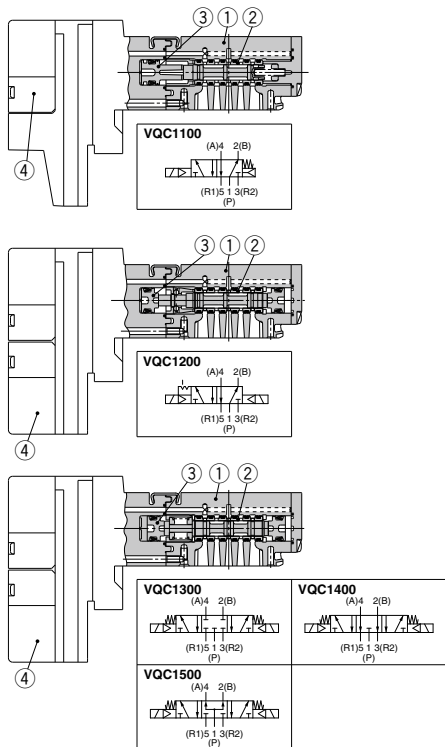

Rubber seal

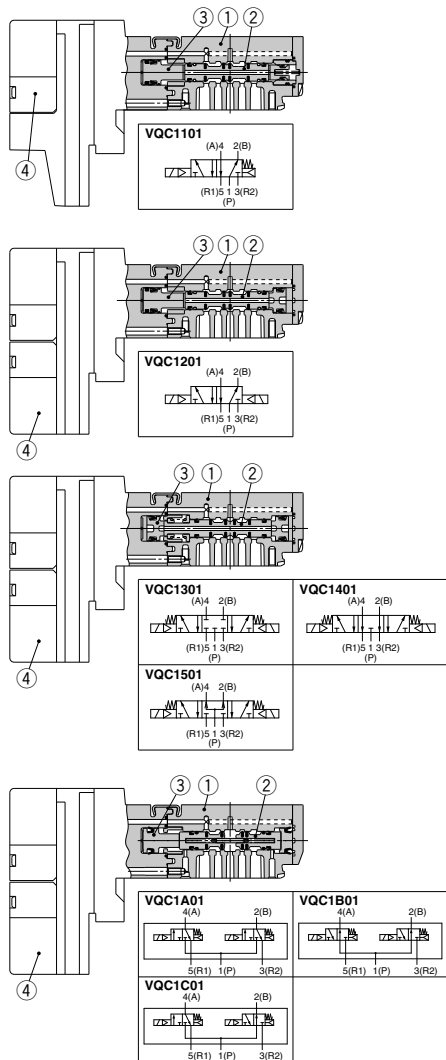

Component Parts

| No. | Description | Material | Note |
|-----|----------------------|-----------------|------|
| 1 | Body | Zinc die-casted | |
| 2 | Spool/Sleeve | Stainless steel | |
| 3 | Piston | Resin | |
| 4 | Pilot valve assembly | — | |

Note) Refer to page 587 for "How to Order Pilot Valve Assembly."


Component Parts

| No. | Description | Material | Note |
|-----|----------------------|-----------------|------|
| 1 | Body | Zinc die-casted | |
| 2 | Spool valve | Aluminum, HNBR | |
| 3 | Piston | Resin | |
| 4 | Pilot valve assembly | — | |


Note) Refer to page 587 for "How to Order Pilot Valve Assembly."

VQC2000 Plug-in Unit: Main Parts/Replacement Parts

Metal seal

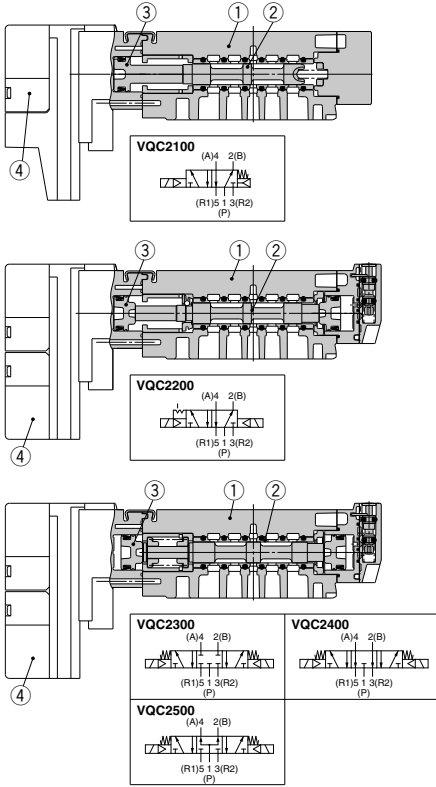

Rubber seal

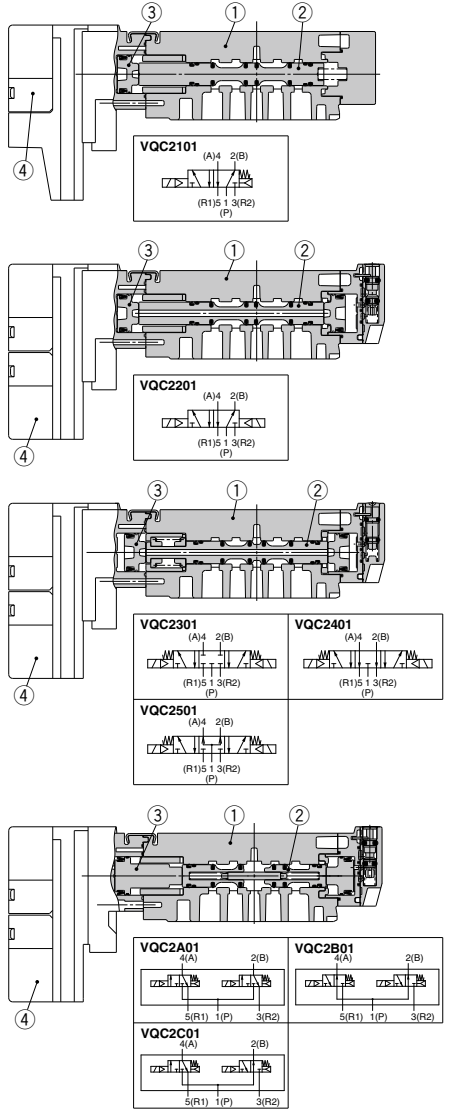

Component Parts

| No. | Description | Material | Note |
|-----|----------------------|-----------------|------|
| 1 | Body | Zinc die-casted | |
| 2 | Spool/Sleeve | Stainless steel | |
| 3 | Piston | Resin | |
| 4 | Pilot valve assembly | — | |

Note) Refer to page 587 for "How to Order Pilot Valve Assembly."

Component Parts


| No. | Description | Material | Note |
|-----|----------------------|-----------------|------|
| 1 | Body | Zinc die-casted | |
| 2 | Spool valve | Aluminum, HNBR | |
| 3 | Piston | Resin | |
| 4 | Pilot valve assembly | — | |

Note) Refer to page 587 for "How to Order Pilot Valve Assembly."

| |
|---------|
| SV |
| SYJ |
| SZ |
| VF |
| VP4 |
| VQ 1/2 |
| VQ 4/5 |
| VQC 1/2 |
| VQC 4/5 |
| VQZ |
| SQ |
| VFS |
| VFR |
| VQ7 |

VQC1000/2000 Series

Exploded View of Manifold

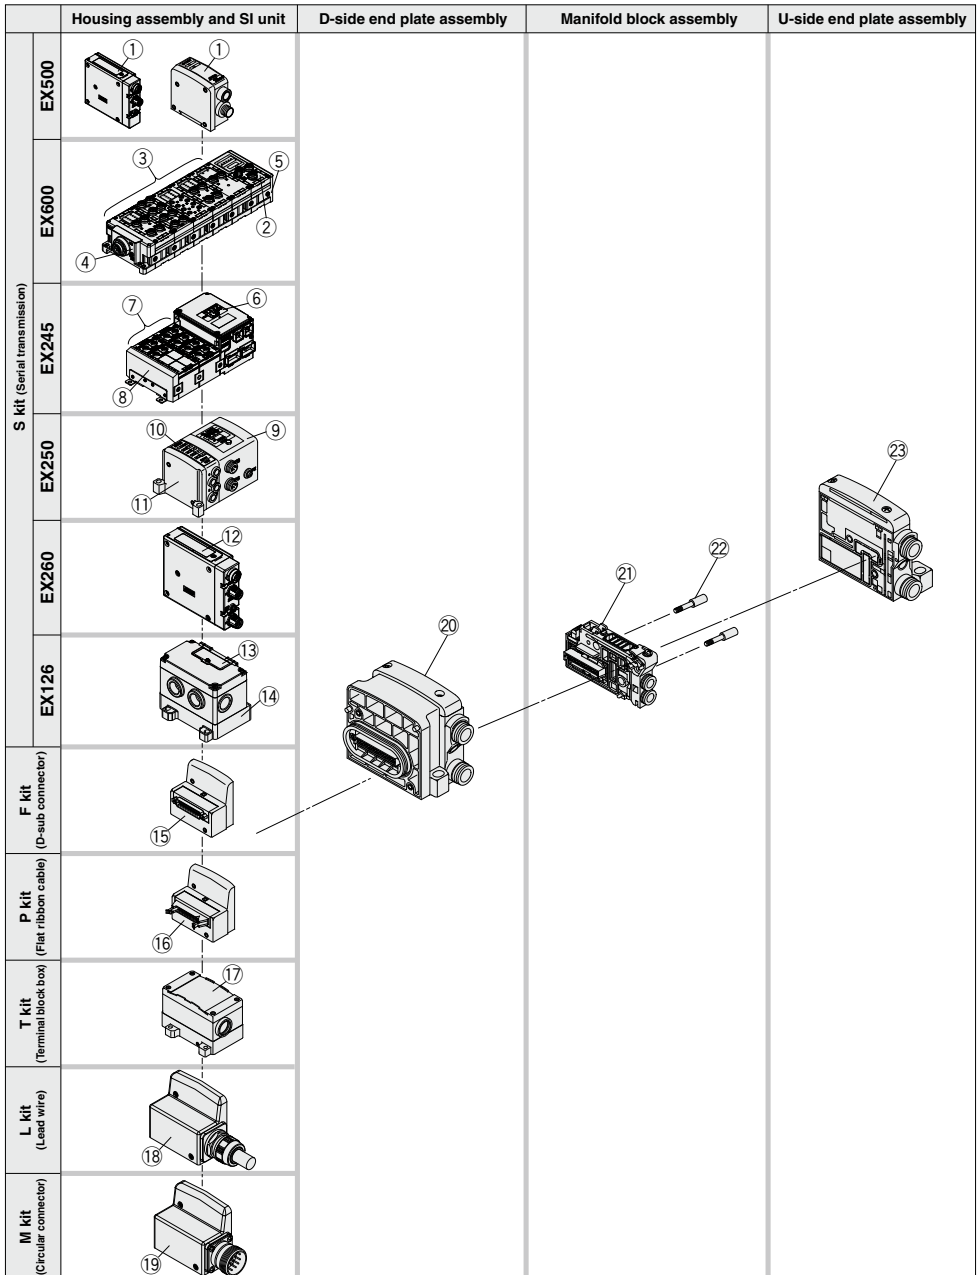

Manifold Assembly Part No.

Note that EX600 series EtherCAT compatible SI units (EX600-SEC1 and EX600-SEC2) are to be discontinued as of October 2022.

Housing Assembly and SI Unit/Input Block

| No. | Description | Part no. | Note | | |
|---------------------------|---|---|---|-------------|---|
| ① | SI unit | EX500-S103 | Gateway decentralized system 2 (128 points), PNP (Negative common) | | |
| | | EX500-Q001 | Gateway decentralized system (64 points), NPN (Positive common) | | |
| | | EX500-Q101 | Gateway decentralized system (64 points), PNP (Negative common) | | |
| ② | SI unit | EX600-SDN1A | DeviceNet [®] PNP (Negative common) | | |
| | | EX600-SDN2A | DeviceNet [®] NPN (Positive common) | | |
| | | EX600-SMJ1 | CC-Link PNP (Negative common) | | |
| | | EX600-SMJ2 | CC-Link NPN (Positive common) | | |
| | | EX600-SPR1A | PROFIBUS DP PNP (Negative common) | | |
| | | EX600-SPR2A | PROFIBUS DP NPN (Positive common) | | |
| | | EX600-SEN1 | EtherNet/IP™ (1 port) PNP (Negative common) | | |
| | | EX600-SEN2 | EtherNet/IP™ (1 port) NPN (Positive common) | | |
| | | EX600-SEN3 | EtherNet/IP™ (2 port) PNP (Negative common) | | |
| | | EX600-SEN4 | EtherNet/IP™ (2 port) NPN (Positive common) | | |
| | | EX600-SPN1 | PROFINET PNP (Negative common) | | |
| | | EX600-SPN2 | PROFINET NPN (Positive common) | | |
| | | EX600-SPN3 | PROFINET (IO-Link unit) PNP (Negative common) | | |
| | | EX600-SPN4 | PROFINET (IO-Link unit) NPN (Positive common) | | |
| | | EX600-SEC1 | EtherCAT PNP (Negative common) | | |
| | | EX600-SEC2 | EtherCAT NPN (Positive common) | | |
| | | EX600-WEN1 ^{Note 1)} | Wireless base module EtherNet/IP™ PNP (Negative common) | | |
| | | EX600-WEN2 ^{Note 1)} | Wireless base module EtherNet/IP™ NPN (Positive common) | | |
| | | EX600-WPN1 ^{Note 1)} | Wireless base module PROFINET PNP (Negative common) | | |
| | | EX600-WPN2 ^{Note 1)} | Wireless base module PROFINET NPN (Positive common) | | |
| | | EX600-WSV1 ^{Note 1)} | Wireless remote module PNP (Negative common) | | |
| | | EX600-WSV2 ^{Note 1)} | Wireless remote module NPN (Positive common) | | |
| | | ③ | Digital input unit | EX600-DXNB | NPN input, M12 connector, 5 pins (4 pcs.), 8 inputs |
| | | | | EX600-DXPB | PNP input, M12 connector, 5 pins (4 pcs.), 8 inputs |
| | | | | EX600-DXNC | NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs |
| | | | | EX600-DXNC1 | NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection |
| EX600-DXPC | PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs | | | | |
| EX600-DXPC1 | PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection | | | | |
| EX600-DXND | NPN input, M12 connector, 5 pins (8 pcs.), 16 inputs | | | | |
| EX600-DXPD | PNP input, M12 connector, 5 pins (8 pcs.), 16 inputs | | | | |
| EX600-DXNE | NPN input, D-sub connector, 25 pins, 16 inputs | | | | |
| EX600-DXPE | PNP input, D-sub connector, 25 pins, 16 inputs | | | | |
| EX600-DXNF | NPN input, Spring type terminal box, 32 pins, 16 inputs | | | | |
| EX600-DXPF | PNP input, Spring type terminal box, 32 pins, 16 inputs | | | | |
| EX600-DYNB | NPN output, M12 connector, 5 pins (4 pcs.), 8 outputs | | | | |
| EX600-DYPB | PNP output, M12 connector, 5 pins (4 pcs.), 8 outputs | | | | |
| EX600-DYNE | NPN output, D-sub connector, 25 pins, 16 outputs | | | | |
| EX600-DYPE | PNP output, D-sub connector, 25 pins, 16 outputs | | | | |
| EX600-DYNF | NPN output, Spring type terminal box, 32 pins, 16 outputs | | | | |
| EX600-DYPF | NPN output, Spring type terminal box, 32 pins, 16 outputs | | | | |
| Digital input/output unit | EX600-DMNE | | NPN input/output, D-sub connector, 25 pins, 8 inputs/outputs | | |
| | EX600-DMPE | | PNP input/output, D-sub connector, 25 pins, 8 inputs/outputs | | |
| | EX600-DMNF | NPN input/output, Spring type terminal box, 32 pins, 8 inputs/outputs | | | |
| | EX600-DMPF | PNP input/output, Spring type terminal box, 32 pins, 8 inputs/outputs | | | |
| | EX600-AXA | M12 connector, 5 pins (2 pcs.), 2-channel input | | | |
| | EX600-AYA | M12 connector, 5 pins (2 pcs.), 2-channel output | | | |
| Analog input unit | EX600-AMB | M12 connector, 5 pins (4 pcs.), 2-channel inputs/outputs | | | |
| Analog output unit | EX600-LAB1 | Port class A, M12 connector, 5 pins (4 pcs.) | | | |
| | EX600-LBB1 | Port class B, M12 connector, 5 pins (4 pcs.) | | | |
| ④ | End plate | EX600-ED2 | M12 power supply connector, B-coded | | |
| | | EX600-ED2-2 | M12 power supply connector, B-coded, with DIN rail mounting bracket | | |
| | | EX600-ED3 | 7/8 inch power supply connector | | |
| | | EX600-ED3-2 | 7/8 inch power supply connector, with DIN rail mounting bracket | | |
| | | EX600-ED4 | M12 power supply connector IN/OUT, A-coded, Pin arrangement 1 | | |
| | | EX600-ED4-2 | M12 power supply connector IN/OUT, A-coded, Pin arrangement 1, with DIN rail mounting bracket | | |
| | | EX600-ED5 | M12 power supply connector IN/OUT, A-coded, Pin arrangement 2 | | |
| | | EX600-ED5-2 | M12 power supply connector IN/OUT, A-coded, Pin arrangement 2, with DIN rail mounting bracket | | |
| | | EX600-ZMV1 | Enclosed parts: round head screws (M4 x 6) 2 pcs., round head screws (M3 x 8) 4 pcs. | | |
| ⑤ | Valve plate | EX600-ZMV1 | Enclosed parts: round head screws (M4 x 6) 2 pcs., round head screws (M3 x 8) 4 pcs. | | |

Note 1) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

Note 2) The applicable SI unit models are the PROFINET compatible EX600-SPN3 and EX600-SPN4. While there is also an EtherNet/IP™ compatible made-to-order specification, the EX600-SEN3-X80, the manifold will also need to be made to order in this case.

VQC1000/2000 Series

Note that the EX250-SPR1 PROFIBUS DP compatible SI unit is to be discontinued as of November 2022.

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

| No. | Description | Part no. | Note |
|------------|--|------------------|--|
| ⑥ | SI unit | EX245-SPN1A | Communication connector: Push Pull connector (SCRJ); 2 pcs./Power supply connector: Push Pull connector (24 V); 2 pcs. |
| | | EX245-SPN2A | Communication connector: Push Pull connector (RJ45); 2 pcs./Power supply connector: Push Pull connector (24 V); 2 pcs. |
| | | EX245-SPN3A | Communication connector: M12 connector (4-pin, Socket, D-coded); 2 pcs./Power supply connector: 7/8 inch connector (5-pin, Plug); 1 pc. 7/8 inch connector (5-pin, Socket); 1 pc. |
| ⑦ | Digital input module | EX245-DX1 | Digital input (16 inputs) |
| | Digital output module | EX245-DY1 | Digital output (8 outputs) |
| | IO-Link module <small>Note 1)</small> | EX245-LA1 | Port class A |
| EX245-LB1 | | Port class B | |
| ⑧ | End plate | EX245-EA2-5 | |
| ⑨ | SI unit | EX250-SPR1 | PROFIBUS DP PNP (Negative common) |
| | | EX250-SAS3 | AS-Interface, 8 in/8 out, 31 slave modes, 2 power supply systems PNP (Negative common) |
| | | EX250-SAS5 | AS-Interface, 4 in/4 out, 31 slave modes, 2 power supply systems PNP (Negative common) |
| | | EX250-SAS7 | AS-Interface, 8 in/8 out, 31 slave modes, 1 power supply system PNP (Negative common) |
| | | EX250-SAS9 | AS-Interface, 4 in/4 out, 31 slave modes, 1 power supply system PNP (Negative common) |
| | | EX250-SCA1A | CANopen PNP (Negative common) |
| | | EX250-SDN1 | DeviceNet® PNP (Negative common) |
| | | EX250-SEN1 | EtherNet/IP™ PNP (Negative common) |
| ⑩ | Input block | EX250-IE1 | M12, 2 inputs |
| | | EX250-IE2 | M12, 4 inputs |
| | | EX250-IE3 | M8, 4 inputs |
| ⑪ | End plate assembly | EX250-EA1 | Standard |
| | | EX250-EA2 | For DIN rail mounting |
| ⑫ | SI unit | EX260-SDN1 | DeviceNet®, M12 connector, 32 outputs PNP (Negative common) |
| | | EX260-SDN2 | DeviceNet®, M12 connector, 32 outputs NPN (Positive common) |
| | | EX260-SDN3 | DeviceNet®, M12 connector, 16 outputs PNP (Negative common) |
| | | EX260-SDN4 | DeviceNet®, M12 connector, 16 outputs NPN (Positive common) |
| | | EX260-SPR1 | PROFIBUS DP, M12 connector, 32 outputs PNP (Negative common) |
| | | EX260-SPR2 | PROFIBUS DP, M12 connector, 32 outputs NPN (Positive common) |
| | | EX260-SPR3 | PROFIBUS DP, M12 connector, 16 outputs PNP (Negative common) |
| | | EX260-SPR4 | PROFIBUS DP, M12 connector, 16 outputs NPN (Positive common) |
| | | EX260-SPR5 | PROFIBUS DP, D-sub connector, 32 outputs PNP (Negative common) |
| | | EX260-SPR6 | PROFIBUS DP, D-sub connector, 32 outputs NPN (Positive common) |
| | | EX260-SPR7 | PROFIBUS DP, D-sub connector, 16 outputs PNP (Negative common) |
| | | EX260-SPR8 | PROFIBUS DP, D-sub connector, 16 outputs NPN (Positive common) |
| | | EX260-SMJ1 | CC-Link, M12 connector, 32 outputs PNP (Negative common) |
| | | EX260-SMJ2 | CC-Link, M12 connector, 32 outputs NPN (Positive common) |
| | | EX260-SMJ3 | CC-Link, M12 connector, 16 outputs PNP (Negative common) |
| | | EX260-SMJ4 | CC-Link, M12 connector, 16 outputs NPN (Positive common) |
| | | EX260-SEC1 | EtherCAT, M12 connector, 32 outputs PNP (Negative common) |
| | | EX260-SEC2 | EtherCAT, M12 connector, 32 outputs NPN (Positive common) |
| | | EX260-SEC3 | EtherCAT, M12 connector, 16 outputs PNP (Negative common) |
| | | EX260-SEC4 | EtherCAT, M12 connector, 16 outputs NPN (Positive common) |
| | | EX260-SPN1 | PROFINET, M12 connector, 32 outputs PNP (Negative common) |
| | | EX260-SPN2 | PROFINET, M12 connector, 32 outputs NPN (Positive common) |
| | | EX260-SPN3 | PROFINET, M12 connector, 16 outputs PNP (Negative common) |
| | | EX260-SPN4 | PROFINET, M12 connector, 16 outputs NPN (Positive common) |
| | | EX260-SEN1 | EtherNet/IP™, M12 connector, 32 outputs PNP (Negative common) |
| | | EX260-SEN2 | EtherNet/IP™, M12 connector, 32 outputs NPN (Positive common) |
| | | EX260-SEN3 | EtherNet/IP™, M12 connector, 16 outputs PNP (Negative common) |
| | | EX260-SEN4 | EtherNet/IP™, M12 connector, 16 outputs NPN (Positive common) |
| | | EX260-SPL1 | Ethernet POWERLINK, M12 connector, 32 outputs PNP (Negative common) |
| | | EX260-SPL3 | Ethernet POWERLINK, M12 connector, 16 outputs PNP (Negative common) |
| EX260-SIL1 | IO-Link M12 connector, 32 outputs PNP (Negative common) | | |
| EX260-FPS1 | PROFIsafe, M12 connector, 32 outputs PNP (Negative common) | | |
| ⑬ | SI unit | EX126D-SMJ1 | CC-Link NPN (Positive common) |
| ⑭ | Terminal block plate | VVQC1000-74A-2 | For EX126 SI unit mounting |
| ⑮ | D-sub connector housing assembly | VVQC1000-F25-1 | F kit, 25 pins |
| | | VVQC1000-P26-1 | P kit, 26 pins |
| ⑯ | Flat ribbon cable housing assembly | VVQC1000-P20-1 | P kit, 20 pins |
| | | VVQC1000-T0-1 | T kit |
| ⑰ | Terminal block box housing assembly | VVQC1000-L25-0-1 | L kit with 0.6 m lead wire |
| | | VVQC1000-L25-1-1 | L kit with 1.5 m lead wire |
| | | VVQC1000-L25-2-1 | L kit with 3.0 m lead wire |
| ⑱ | Circular connector housing assembly | VVQC1000-M26-1 | M kit, 26 pins |

Note 1) The only available SI unit part number is "EX245-SPN□A" (PROFINET compatible).

Manifold Assembly Part No.

<D-Side End Plate Assembly>

⑳ D-side end plate assembly part no.

VVQC 1 000-3A-1-□-□

Series

| | |
|---|---------|
| 1 | VQC1000 |
| 2 | VQC2000 |

Port size

| Symbol | VQC1000 | VQC2000 |
|--------|---------|---------|
| C8 | ● | |
| C10 | | ● |
| N9 | ● | |
| N11 | | ● |

Option

| | |
|-----|--|
| Nil | Common EXH |
| R | External pilot |
| S | Direct EXH outlet with built-in silencer |

<U-Side End Plate Assembly>

㉓ U-side end plate assembly part no.

VVQC 1 000-2A-1-C8-□

Series

| | |
|---|---------|
| 1 | VQC1000 |
| 2 | VQC2000 |

Supply/Exhaust port entry direction

| | |
|--------------------|--------------------|
| 1 | Cylinder port side |
| 2 ^{Note1} | Branch type |

Note) VQC2000 only

Port size

| Symbol | VQC1000 | VQC2000 |
|--------|---------|---------|
| C8 | ● | |
| C10 | | ● |
| C12 | | ● |
| N9 | ● | |
| N11 | | ● |
| N13 | | ● |

Option

| | |
|-----|--|
| Nil | Common EXH |
| R | External pilot |
| S | Direct EXH outlet with built-in silencer |

<Manifold Block Assembly>

㉑ Manifold block assembly part no.

VVQC 1 000-1A-D-C6-□

Series

| | |
|---|---------|
| 1 | VQC1000 |
| 2 | VQC2000 |

Note) Tie-rods (2 pcs.) for additional stations included.

Wiring specifications

| | |
|---|---------------|
| D | Double wiring |
| S | Single wiring |

Port size

| Symbol | Port size | VQC1000 | VQC2000 |
|--------|----------------------------|---------|---------|
| C3 | For ø3.2 One-touch fitting | ● | |
| C4 | For ø4 One-touch fitting | ● | ● |
| C6 | For ø6 | ● | ● |
| C8 | For ø8 | | ● |
| N1 | For ø1/8" | ● | |
| N3 | For ø5/32" | ● | ● |
| N7 | For ø1/4" | ● | ● |
| N9 | For ø5/16" | | ● |
| M5 | For M5 thread | ● | |

Option

| | |
|-----|--------------------------------|
| Nil | None |
| B | With back pressure check valve |

<Replacement Parts>

Pilot valve assembly

V112 □ - 5 A

Coil voltage

| | |
|---|--------|
| 5 | 24 VDC |
| 6 | 12 VDC |

Function

| | |
|-----|--------------------------------------|
| Nil | Standard (0.4 W) |
| B | High-speed response type (0.95 W) |
| K | High-pressure type (1.0 MPa, 0.95 W) |

Note 1) Common to single solenoid and double solenoid

Note 2) The voltage (including light/surge voltage suppressor), positive common and negative common cannot be changed by changing the pilot valve assembly.

㉒ Tie-rod assembly part no. (2 pcs.)

| | |
|---------|---------------|
| VQC1000 | VVQC1000-TR-□ |
| VQC2000 | VVQC2000-TR-□ |

Note 1) Please order when reducing the number of manifold stations. When increasing the number of stations, additional orders are not required since they are included in the manifold block assembly.

Note 2) □: Stations 02 to 24

SV

SYJ

SZ

VF

VP4

VQ 1/2

VQ 4/5

VQC 1/2

VQC 4/5

VQZ

SQ

VFS

VFR

VQ7

VQC1000 Series



VQC1000: Manifold Optional Parts

Blanking plate assembly VVQ1000-10A-1

Symbol



 It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

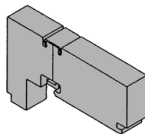

Individual SUP spacer VVQ1000-P-1-C₆ N₇

When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.)




Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)

* Specify the spacer mounting position and SUP block plate position by means of the manifold specification sheet.

The block plate is used in one or two places for one set. (Two SUP block plates for blocking SUP passage are attached to the individual SUP spacer.)

* As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.

* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

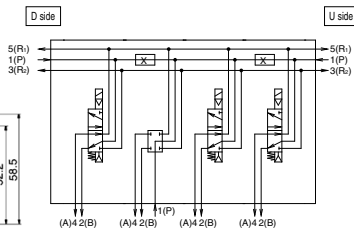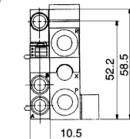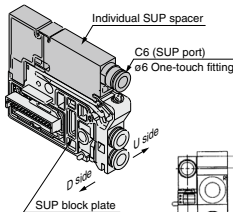

Individual EXH spacer VVQ1000-R-1-C₆ N₇

When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.)

Block both sides of the individual valve EXH station. (Refer to the application example.)

* Specify the spacer mounting position, as well as the EXH passage blocking position by means of the manifold specification sheet. The block plate is used in one or two places for one set.

 

* An EXH block base assembly is used in the blocking position when ordering an EXH spacer incorporated with a manifold. However, do not order an EXH block base assembly because it is attached to the spacer.

When separately ordering an individual EXH spacer, separately order an EXH block base assembly because it is not attached to the spacer.

* As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.


* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

* Do not install any back pressure check valve on the manifold station, on which the spacer is to be mounted. When installing the back pressure check valve on other manifold station, be sure to specify the manifold station position on the manifold specification sheet instead of ordering by specifying the manifold option symbol "B".

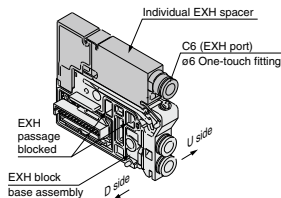

| Description/Model | | Stations | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
|-------------------|--|----------|---|---|---|---|---|---|---|
| Value | Single | | ● | ● | ● | | | | |
| Option | Individual EXH spacer VVQ1000-R-1-C6 | | ● | | | | | | |
| | EXH blocking position: Specify 2 places. | | ● | ● | | | | | |

Individual EXH spacer + Valve + EXH block base assembly

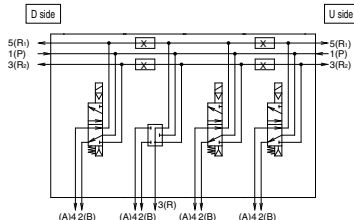

SUP block plate VVQ1000-16A

 

When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.

* Specify the mounting position by means of the manifold specification sheet.

<Block indication label>

Indication labels to confirm the blocking position are attached (Each for SUP passage and SUP/EXH passage blocking positions).

* When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

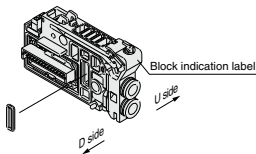

SUP passage blocked



SUP/EXH passage blocked

Blanking plate with connector


VVQ1000-1C

| Connector | Without connector |
|-------------------------|-------------------|
| 1 With connector/2-wire | |
| 2 With connector/4-wire | |

Symbol


Connector lead wire length (mm)

| | | | |
|-----|------|----|------|
| Nil | 300 | 20 | 2000 |
| 6 | 600 | 25 | 2500 |
| 10 | 1000 | 30 | 3000 |
| 15 | 1500 | | |

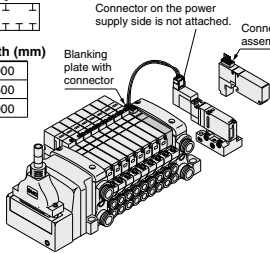

Connector assembly part no.

AXT661-43 A-6

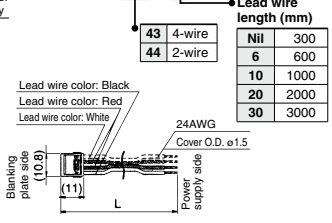

Blanking plate with a connector for individually outputting electrically to drive a single valve or equipment that are not on the manifold base.



* When "N" is suffixed to the end of the name plate, the plate will be different from a standard shape.
(Note) Electric current should be 1A or less (including the mounted valves).

EXH block base assembly

VVQC1000-19A-(C3/C4/C6/M5/N1/N3/N7)

Wiring specifications

| | |
|---|---------------|
| S | Single wiring |
| D | Double wiring |

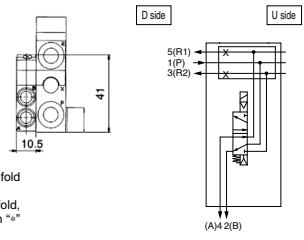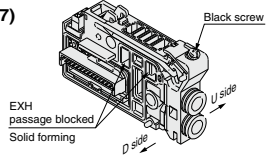

The manifold block assembly is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations due to the circuit configuration. The EXH passage on the D-side is blocked in the EXH block base assembly. It is also used in combination with an individual EXH spacer for individual exhaust.

* Specify the mounting position by means of the manifold specification sheet.
* When ordering this option incorporated with a manifold, specify the EXH block base assembly part number with "-" in front of it beneath the manifold part number.



EXH passage blocked



SUP/EXH passage blocked

<Block indication label>


Indication labels to confirm the blocking position are attached (Each for EXH passage and SUP/EXH passage blocking positions).
* When ordering this option incorporated with a manifold, a block indication label is attached to the manifold.

Back pressure check valve assembly [-B]

VVQ1000-18A

It prevents cylinder from malfunctioning by other valve's exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

* When ordering it being mounted on all manifold stations, suffix "-B" to the end of the manifold part number.
(Note) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting station by means of the manifold specification sheet.

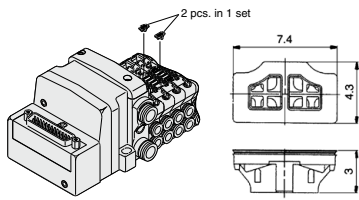

(Precautions)



- The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air.
- When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.

Name plate [-N]

VVQ1000-NC -Station (1 to Max. stations) (-X4)

N: Standard
NC: For mounting blanking plate with connector
-X4: For mounting slide locking type manual valve



It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.
* When the blanking plate with connector is mounted, it automatically will be "VVQ1000-NC-n"
* When the slide locking type manual valve is mounted, it automatically will be "VVQ1000-N-n-X4"
* When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part number.

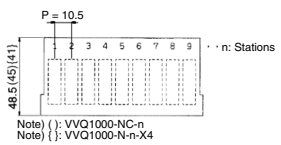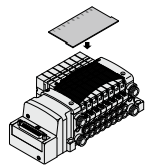

Blanking plug (For One-touch fittings)

KQ2P-□

 It is inserted into an unused cylinder port and SUP/EXH ports. Purchasing order is available in units of 10 pieces.

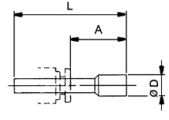

Dimensions

| Applicable fitting size | Model | A | L | D | Applicable fitting size | Model | A | L | D |
|-------------------------|---------|------|------|----|-------------------------|---------|------|------|-----|
| 3.2 | KQ2P-23 | 16 | 31.5 | 5 | 1/8" | KQ2P-01 | 16 | 31.5 | 5 |
| 4 | KQ2P-04 | 16 | 32 | 6 | 5/32" | KQ2P-03 | 16 | 32 | 6 |
| 6 | KQ2P-06 | 18 | 35 | 8 | 1/4" | KQ2P-07 | 18 | 35 | 8.5 |
| 8 | KQ2P-08 | 20.5 | 39 | 10 | 5/16" | KQ2P-09 | 20.5 | 39 | 10 |

SV

SYJ

SZ

VF

VP4

VQ 1/2

VQ 4/5

VQC 1/2

VQC 4/5

VQZ

SQ

VFS

VFR

VQ7

VQC1000 Series


VQC1000: Manifold Optional Parts

Port plug

VVQ0000-58A

The plug is used to block the cylinder port.

- * When ordering this option incorporated with a manifold, indicate "CM" for the port size of the manifold part number, as well as, the mounting position and number of stations and cylinder port mounting positions, 4(A) and 2(B) by means of the manifold specification sheet.
- * Gently screw an M3 screw in the port plug hole and pull it for removal.

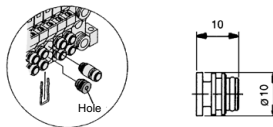

Elbow fitting assembly


VVQ1000-F-L(C3/C4/C6/M5/N1/N3/N7)

It is used for piping that extends upward or downward from the manifold.

- * When ordering this option incorporated with a manifold, indicate "L□" or "B□" for the manifold port size (when installed in all stations.)

When installing it in part of the manifold stations, specify the elbow fitting assembly part number and the mounting position and number of stations by means of the manifold specification sheet.

- * When mounting elbow fitting assembly on the edge of manifold station and a silencer on EXH port, select a silencer, AN15-C08.
- A silencer (AN200-KM8) is interfered with fittings.

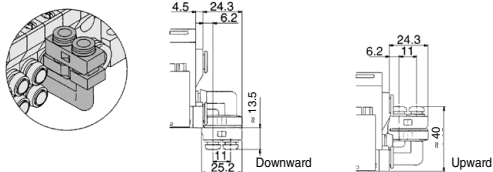

DIN rail mounting bracket [-D]

VVQ1000-57A

{For F/L/M/P/S (EX500) kit}

VVQC1000-57A-S


{For S (EX250) kit}

VVQC1000-57A-T (For T kit)

It is used for mounting a manifold on a DIN rail.

- * When ordering this option incorporated with a manifold, suffix "-D" to the end of the manifold part number.

1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

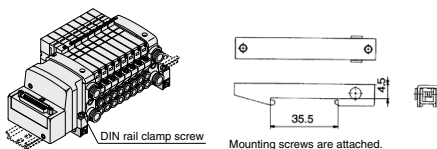


Direct EXH outlet with built-in silencer [-S]

This is a type with an exhaust outlet atop the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Noise reduction: 30 dB)

- * When ordering this option incorporated with a manifold, suffix "-S" to the end of the manifold part number.

Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.

- Refer to page 597 for maintenance.

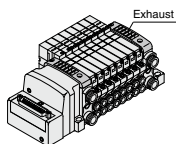


Dual flow fitting assembly

VVQ1000-52A-C₈_{N3}

This is a fitting to multiply the flow rate by combining the outputs of 2-valve stations. It is used for driving a large bore cylinder. This is a One-touch fitting for a port size of ø8 or ø5/16".

- * The port size of the manifold part number is "MM".
- Clearly indicate the dual flow fitting assembly part number and specify the mounting positions by means of the manifold specification sheet.


- * In dual flow fitting assembly, a special clip which is combined in one-piece of 2 stations is attached as a holding clip.

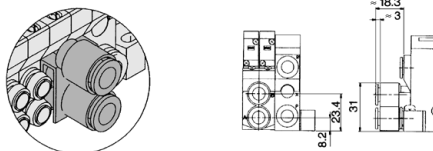

Silencer (For EXH port)

This silencer is to be inserted into the EXH port (One-touch fittings) of the common exhaust type.

 - * When mounting elbow fitting assembly (VVQ1000-F-L□) on the edge of manifold station, select a silencer, AN15-C08. A silencer (AN200-KM8) is interfered with fittings.



Dimensions

| Series | Applicable fitting size øD | Model | A | L | D | Effective area (mm ²) | Noise reduction (dB) |
|---------|----------------------------|----------|------|----|----|-----------------------------------|----------------------|
| VQC1000 | 8 | AN15-C08 | 26.5 | 45 | 13 | 20 | 30 |



Double check block (Separated) for VQC1000
VQ1000-FPG-□□□□□

It is used on the outlet side piping to keep the cylinder in the intermediate position for long periods of time. Combining the double check block with a built-in pilot type double check valve and a 3-position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time. The combination with a 2-position single/double solenoid valve will permit this block to be used for preventing the dropping at the cylinder stroke end when the SUP residual pressure is released.

Specifications


| | |
|------------------------------|-------------------------------|
| Max. operating pressure | 0.8 MPa |
| Min. operating pressure | 0.15 MPa |
| Ambient and fluid temp. | -5 to 50°C |
| Flow rate characteristics: C | 0.60 dm ³ /(s·bar) |
| Max. operating frequency | 180 c.p.m |

(Note) Based on JIS B 8375-1981
 (Supply pressure: 0.5 MPa)

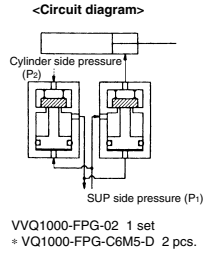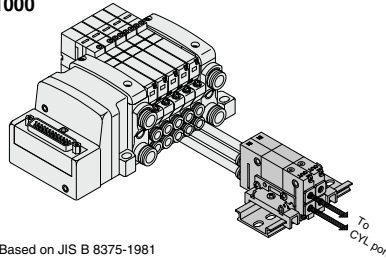


Dimensions

Single unit

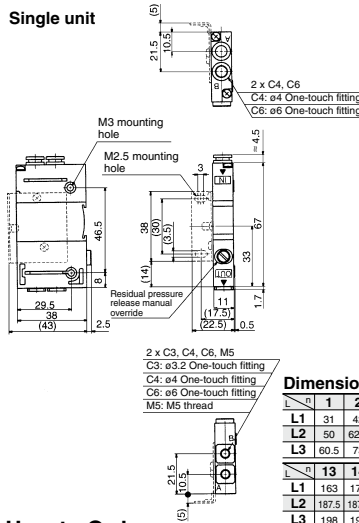

Manifold

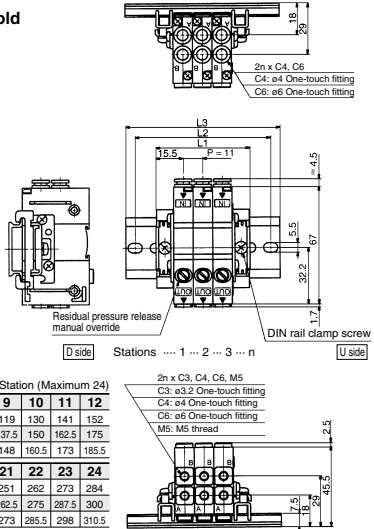

Dimensions

Formula L1 = 11n + 20 n: Station (Maximum 24)

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 |
|----|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 31 | 42 | 53 | 64 | 75 | 86 | 97 | 108 | 119 | 130 | 141 | 152 |
| L2 | 50 | 62.5 | 75 | 87.5 | 100 | 112.5 | 125 | 137.5 | 150 | 162.5 | 175 | 187.5 |
| L3 | 60.5 | 73 | 85.5 | 98 | 110.5 | 123 | 135.5 | 148 | 160.5 | 173 | 185.5 | |
| | 13 | 14 | 15 | 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 | 24 |
| L1 | 163 | 174 | 185 | 196 | 207 | 218 | 229 | 240 | 251 | 262 | 273 | 284 |
| L2 | 187.5 | 187.5 | 200 | 212.5 | 225 | 237.5 | 250 | 250 | 262.5 | 275 | 287.5 | 300 |
| L3 | 198 | 198 | 210.5 | 223 | 235.5 | 248 | 260.5 | 260.5 | 273 | 285.5 | 298 | 310.5 |

How to Order

Double check block

VQ1000-FPG- **C4** **M5** - **F**

IN side port size

| | |
|----|--------------------------|
| M5 | M5 thread |
| C3 | ø3.2 One-touch fitting |
| C4 | ø4 One-touch fitting |
| C6 | ø6 One-touch fitting |
| N3 | ø5/32" One-touch fitting |
| N7 | ø1/4" One-touch fitting |

OUT side port size

| | |
|----|--------------------------|
| M5 | M5 thread |
| C3 | ø3.2 One-touch fitting |
| C4 | ø4 One-touch fitting |
| C6 | ø6 One-touch fitting |
| N3 | ø5/32" One-touch fitting |
| N7 | ø1/4" One-touch fitting |

Option

| | |
|-----|----------------------------------|
| Nil | None |
| F | With bracket |
| D | DIN rail mounting (For manifold) |
| N | Name plate |

(Note) When two or more symbols are specified, indicate them alphabetically. Example) -DN

Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for long periods of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping (with M5 thread) is recommended when stopping the cylinder in the middle for long periods of time.
- Combining double check block with 3-position closed center or pressure center solenoid valve will not work.
- M5 fitting assembly is attached, not incorporated into the double check block. After screwing in the M5 fittings, mount the assembly on the double check block. (Tightening torque: 0.8 to 1.2 N·m)
- If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

Manifold (DIN rail mounting)

VVQ1000-FPG- **06**

When ordering a double check block, order the DIN rail mounting [-D].

Stations

| | |
|----|-------------|
| 01 | 1 station |
| ⋮ | ⋮ |
| 16 | 16 stations |


<Ordering example>

VVQ1000-FPG-06-6-station manifold
 *VQ1000-FPG-C4M5-D, 3 sets
 *VQ1000-FPG-C6M5-D, 3 sets

Bracket Assembly

| | |
|---------------|-------------------|
| Part no. | Tightening torque |
| VQ1000-FPG-FB | 0.22 to 0.25 N·m |

<Example>


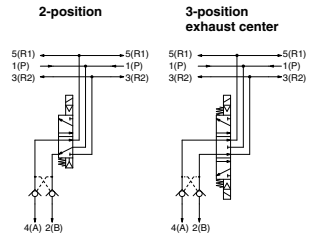


SV
 SYJ
 SZ
 VF
 VP4
 VQ 1/2
 VQ 4/5
 VQC 1/2
 VQC 4/5
 VQZ
 SQ
 VFS
 VFR
 VQ7

VQC2000 Series

VQC2000: Manifold Optional Parts

 Blanking plate assembly VVQ2000-10A-1

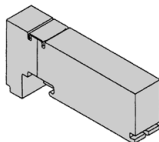

It is used by attaching on the manifold block for being prepared for removing a valve for maintenance reasons or planning to mount a spare valve, etc.

Individual SUP spacer VVQ2000-P-1- $\overline{C8}$



When the same manifold is to be used for different pressures, individual SUP spacers are used as SUP ports for different pressures. (One station space is occupied.) Block both sides of the station, for which the supply pressure from the individual SUP spacer is used, with SUP block plates. (Refer to the application example.)

* Specify the spacer mounting position and SUP passage blocking position by means of the manifold specification sheet.

The block plate is used in one or two places for one set. (Two SUP block plates for blocking SUP passage are attached to the individual SUP spacer.)

* As a standard, electric wiring is connected to the position of the manifold station where the individual SUP spacer is mounted.

* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.

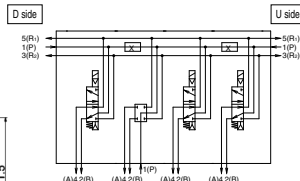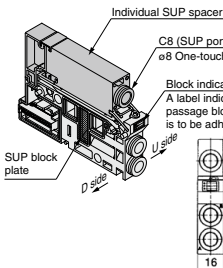

Individual EXH spacer VVQ2000-R-1- $\overline{C8}$



When valve exhaust affects other stations due to the circuit configuration, this spacer is used for individual valve exhaust. (One station space is occupied.) Block both sides of the individual valve EXH station. (Refer to the application example.)

* Specify the spacer mounting position, as well as the EXH passage blocking position by means of the manifold specification sheet. The block plate is used in one or two places for one set. (Four EXH block plates (2 sets) for blocking EXH passage are attached to the individual EXH spacer.)

* As a standard, electric wiring is connected to the position of the manifold station where the individual EXH spacer is mounted.

* If wiring is not required for stations equipped with spacers, enter "X" in the special wiring specifications column in the manifold specification sheet.


* Do not install any back pressure check valve on the manifold station, on which the spacer is to be mounted. When installing the back pressure check valve on other manifold station, be sure to specify the manifold station position on the manifold specification sheet instead of ordering by specifying the manifold option symbol "B".

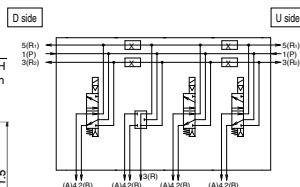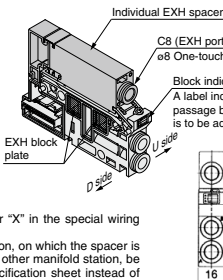

SUP block plate VVQ2000-16A

When different pressures are supplied to a manifold, a SUP block plate is used to block the stations under different pressures.

* Specify the mounting position by means of the manifold specification sheet.

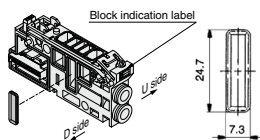

<Block indication label>

Indication labels to confirm the blocking position are attached. (Each for SUP passage and SUP/EXH passage blocking positions)




SUP passage blocked SUP/EXH passage blocked

* When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

EXH block plate VVQ2000-19A

The EXH block plate is used between stations for which exhaust is desired to be divided when valve exhaust affects other stations configuration. It is also used in combination with an individual EXH spacer for individual exhaust.

* Specify the mounting position by means of the manifold specification sheet.

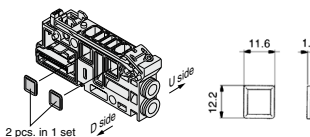

<Block indication label>

Indication labels to confirm the blocking position are attached. (Each for EXH passage and SUP/EXH passage blocking positions)



EXH passage blocked SUP/EXH passage blocked


* When ordering a block plate incorporated with a manifold, a block indication label is attached to the manifold.

Back pressure check valve assembly [-B] VVQ2000-18A

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into R (EXH) port on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used or an exhaust center type solenoid valve is used.

* When ordering this option incorporated with a manifold, suffix "-B" to the end of the manifold part number.

Note) When a back pressure check valve is desired, and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position by means of the manifold specification sheet.

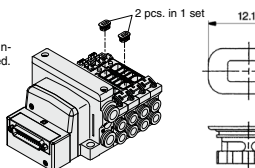



<Precautions>

1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air.
2. When a back pressure check valve is mounted, the effective area of the valve will decrease by about 20%.

Name plate [-N]

VVQ2000-N-Station (1 to Max. stations) (-X4)

-X4: For mounting slide locking type manual valve

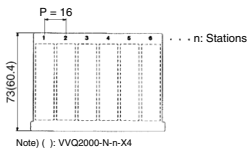
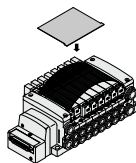


It is a transparent resin plate for placing a label that indicates solenoid valve function, etc. Insert it into the groove on the side of the end plate and bend it as shown in the figure.
 * When the slide locking type manual valve is mounted, it automatically will be "VVQ2000-N-n-X4"
 * When ordering this option incorporated with a manifold, suffix "-N" to the end of the manifold part number.

Blanking plug (For One-touch fittings)

KQ2P-□

 It is inserted into an unused cylinder port and SUP/EXH ports.
 Purchasing order is available in units of 10 pieces.

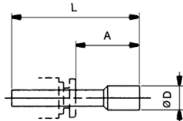



Dimensions

| Applicable fitting size ϕd | Model | A | L | D |
|----------------------------------|---------|------|----|------|
| 4 | KQ2P-04 | 16 | 32 | 6 |
| 6 | KQ2P-06 | 18 | 35 | 8 |
| 8 | KQ2P-08 | 20.5 | 39 | 10 |
| 10 | KQ2P-10 | 22 | 43 | 12 |
| 5/32" | KQ2P-03 | 16 | 32 | 6 |
| 1/4" | KQ2P-07 | 18 | 35 | 8.5 |
| 5/16" | KQ2P-09 | 20.5 | 39 | 10 |
| 3/8" | KQ2P-11 | 22 | 43 | 11.5 |

Port plug

VVQ1000-58A

  The plug is used to block the cylinder port.
 * When ordering this option incorporated with a manifold, indicate "CM" for the port size of the manifold part number, as well as, the mounting station and cylinder port mounting positions, A and B, by means of the manifold specification sheet.



DIN rail mounting bracket [-D]

VVQ2000-57A



{For F/L/M/P/S (EX500) kit}

VVQ2000-57A-S

{For S (EX250) kit}

VVQ2000-57A-T (For T kit)

 It is used for mounting a manifold on a DIN rail.
 * When ordering this option incorporated with a manifold, suffix "-D" to the end of the manifold part number.
 1 set of DIN rail mounting bracket is used for 1 manifold (2 DIN rail mounting brackets).

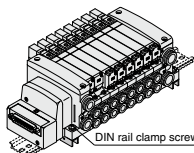


Direct EXH outlet with built-in silencer [-S]

This is a type with an exhaust outlet atop the manifold end plate. The built-in silencer exhibits an excellent noise suppression effect. (Noise reduction: 30 dB)
 * When ordering this option incorporated with a manifold, suffix "-S" to the end of the manifold part number.


Note) A large quantity of drainage generated in the air source results in exhaust of air together with drainage.

● Refer to page 597 for maintenance.

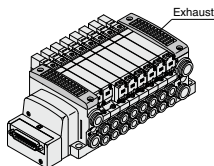

Silencer (For EXH port)

 This silencer is to be inserted into the EXH port (One-touch fittings).



Dimensions


| Series | Applicable fitting size ϕd | Model | A | L | D | Effective area (mm ²) (Cv factor) | Noise reduction (dB) |
|---------|----------------------------------|----------|------|------|------|---|----------------------|
| VQC2000 | 10 | AN20-C10 | 36.5 | 57.5 | 16.5 | 30 | 30 |

Elbow fitting assembly

VVQ2000-F-L(C4/C6/C8/N3/N7/N9)

It is used for piping that extends upward or downward from the manifold.

When installing it only in some manifold stations, specify the elbow fitting assembly part number and the mounting position by means of the manifold specification sheet.

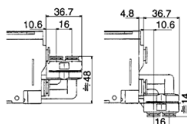


Dual flow fitting assembly

VVQ2000-52A-C10

This is a fitting to multiply the flow rate by combining the outputs of 2-valve stations. It is used for driving a large bore cylinder. This is a One-touch fitting for a port size of $\phi 10$ or $\phi 3/8$ ".

 * The port size of the manifold part number is "MM".
 Clearly indicate the dual flow fitting assembly part number and specify the mounting position by means of the manifold specifications.



SV
 SYJ
 SZ
 VF
 VP4
 VQ
 1/2
 VQ
 4/5
 VQC
 1/2
 VQC
 4/5
 VQZ
 SQ
 VFS
 VFR
 VQ7

VQC2000 Series

VQC2000: Manifold Optional Parts

Double check block (Separated) for VQC2000


VQ2000-FPG-□□-□

It is mounted on the outlet side piping to keep the cylinder in the intermediate position for long periods of time. Combining with a 3-position exhaust center solenoid valve will enable the cylinder to stop in the middle or maintain its position for a long time. Combining with a 2-position single/double solenoid valve will prevent a cylinder from dropping at the stroke end when the residual pressure of SUP is released.

Specifications


| | |
|------------------------------|------------------------------|
| Max. operating pressure | 0.8 MPa |
| Min. operating pressure | 0.15 MPa |
| Ambient and fluid temp. | -5 to 50°C |
| Flow rate characteristics: C | 3.0 dm ³ /(s-bar) |
| Max. operating frequency | 180 c.p.m |

(Note) Based on JIS B 8375-1981
(Supply pressure: 0.5 MPa)

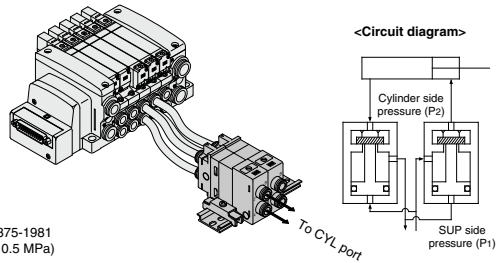


Dimensions

Single unit

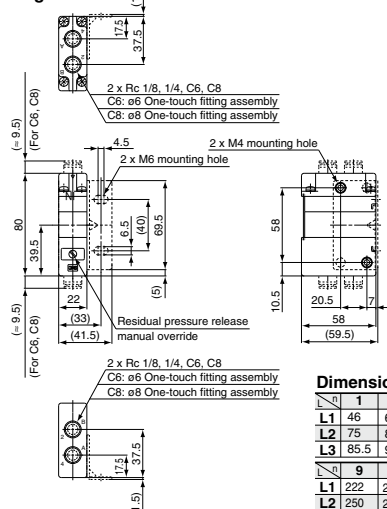

Manifold

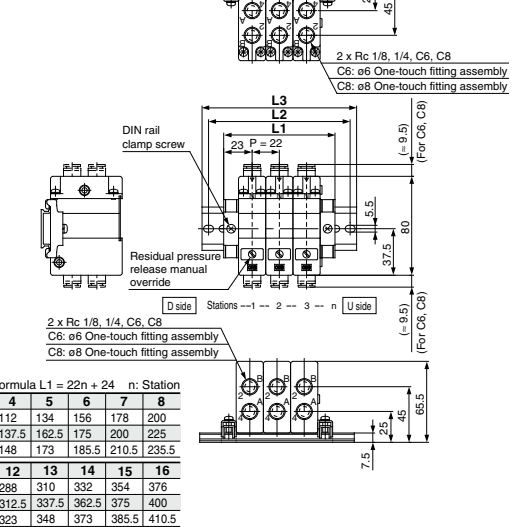

Dimensions

Formula L1 = 22n + 24 n: Station

| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|----|-------|-------|-------|-------|-------|-------|-------|-------|
| L1 | 46 | 68 | 90 | 112 | 134 | 156 | 178 | 200 |
| L2 | 75 | 87.5 | 112.5 | 137.5 | 162.5 | 175 | 200 | 225 |
| L3 | 85.5 | 98 | 123 | 148 | 173 | 185.5 | 210.5 | 235.5 |
| | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 |
| L1 | 222 | 244 | 266 | 288 | 310 | 332 | 354 | 376 |
| L2 | 250 | 262.5 | 287.5 | 312.5 | 337.5 | 362.5 | 375 | 400 |
| L3 | 260.5 | 273 | 298 | 323 | 348 | 373 | 385.5 | 410.5 |

How to Order

Double check block

VQ2000-FPG-01 01 - F

IN side port size

| | |
|----|--------------------------|
| 01 | Rc 1/8 |
| 02 | Rc 1/4 |
| C6 | ø6 One-touch fitting |
| C8 | ø8 One-touch fitting |
| N7 | ø1/4" One-touch fitting |
| N9 | ø5/16" One-touch fitting |

OUT side port size


| | |
|----|--------------------------|
| 01 | Rc 1/8 |
| 02 | Rc 1/4 |
| C6 | ø6 One-touch fitting |
| C8 | ø8 One-touch fitting |
| N7 | ø1/4" One-touch fitting |
| N9 | ø5/16" One-touch fitting |

Option

| | |
|-----|----------------------------------|
| Nil | None |
| D | DIN rail mounting (For manifold) |
| F | With bracket |
| N | Name plate |

(Note) When two or more symbols are specified, indicate them alphabetically.
Example) -DN

<Example>

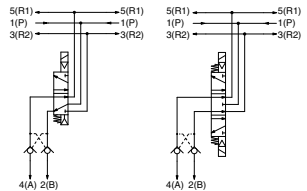

Manifold (DIN rail mounting)

VVQ2000-FPG-06

When ordering a double check block, order the DIN rail mounting [-D].

| Stations | |
|----------|-------------|
| 01 | 1 station |
| ⋮ | ⋮ |
| 16 | 16 stations |

<Ordering example>

VVQ2000-FPG-06-6-station manifold

*VQ2000-FPG-C6C6-D, 3set
*VQ2000-FPG-C8C8-D, 3set

Bracket Assembly

| Part no. | Tightening torque |
|---------------|-------------------|
| VQ2000-FPG-FB | 0.8 to 1.0 N·m |

⚠ Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for long periods of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Since One-touch fittings allow slight air leakage, screw piping is recommended when stopping the cylinder in the middle for long periods of time.
- Combining double check block with 3-position closed center or pressure center solenoid valve will not work.
- When fittings, etc. are being screwed to the double check block, tighten them with the torque below.

| Connection thread | Proper tightening torque (N·m) |
|-------------------|--------------------------------|
| Rc 1/8 | 7 to 9 |
| Rc 1/4 | 12 to 14 |

- If the exhaust of the double check block is restricted too much, the cylinder may not operate properly and may not stop immediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.



VQC1000/2000 Series Specific Product Precautions 1


Be sure to read this before handling the products.
Refer to back page 50 for Safety Instructions and pages 3 to 9 for
3/4/5 Port Solenoid Valve Precautions.

Manual Override

Warning


Connected actuator is started by manual operation.
Use the manual override after confirming that there is
no danger. Push type is standard. (Tool required)
Locking type is semi-standard. (Tool required)

Non-locking push type (Tool required)

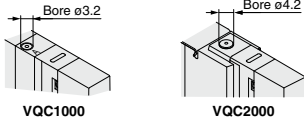


Push down on the manual override with a small screwdriver until it stops.
Release the screwdriver and the manual override will return.

Locking type (Tool required) <Semi-standard>

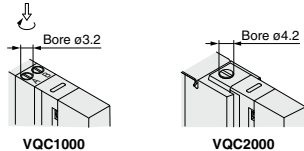

Push down on the manual override with a small flat head screwdriver until
it stops. Turn it clockwise by 90° to lock it. Turn it counterclockwise to
release it.

Locking type (Manual) <Semi-standard>

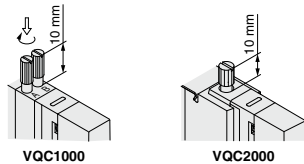


Push down on the manual override with a small screwdriver or with your
fingers until it stops. Turn it clockwise by 90° to lock it. Turn it
counterclockwise to release it.

Caution


Do not apply excessive torque when turning the lock-
ing type manual override. (0.1 N·m or less)

Warning

Slide locking type (Manual) <Semi-standard>

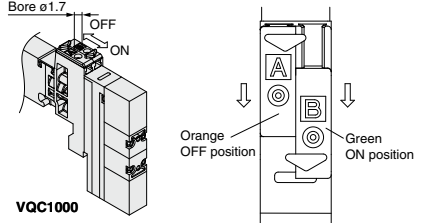

VQC1000

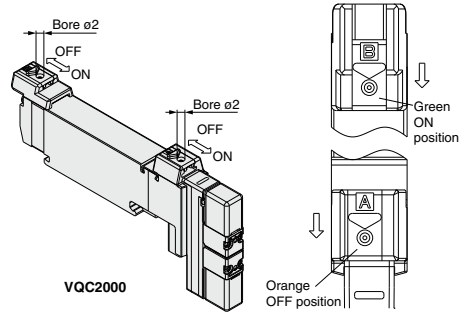


VQC2000

The manual override is locked by sliding it all the way to the pilot valve
side (ON side) with a small flat head screwdriver or with your fingers.
Slide it to the fitting side (OFF side) to release it. In addition, it can also be
used as a push type by using a screwdriver, etc., of ø1.7 or less. (ø2 or
less for VQC2000)

How to Mount/Remove Solenoid Valves

Caution

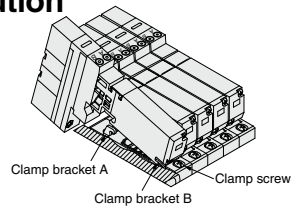

Removing

1. Loosen the clamp screw until it turns freely. (The screw is captive.)
2. Lift the coil side of the valve body while pressing down slightly on the
screw head and remove it from the clamp bracket B. When the screw
head cannot be pressed easily, gently press the area near the manual
override of the valve.

Mounting

1. Press down on the clamp screw. Clamp bracket A opens. Diagonally in-
sert the hook on the valve end plate side into clamp B.
2. Press the valve body downward. (When the screw is released, it will be
locked by clamp bracket A.)
3. Tighten the clamp screw. (Proper tightening torque: VQC1000, 0.25 to
0.35 N·m; VQC2000, 0.5 to 0.7 N·m)

Caution

Dust on the sealing surface of the gasket or solenoid valve can cause
air leakage.

| |
|------------|
| SV |
| SYJ |
| SZ |
| VF |
| VP4 |
| VQ 1/2 |
| VQ 4/5 |
| VQC 1/2 |
| VQC 4/5 |
| VQZ |
| SQ |
| VFS |
| VFR |
| VQ7 |



VQC1000/2000 Series Specific Product Precautions 2


Be sure to read this before handling the products.
Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

Cylinder Port Fittings Replacement

⚠ Caution

One-touch fittings on the cylinder port are a cassette for easy replacement. The fittings are blocked by a clip. After removing the corresponding valve and take out the clip with a flat head screwdriver, etc., then replace the fittings.

For mounting, insert the fitting until it strikes against the inside wall and then insert the clip to the specified position.

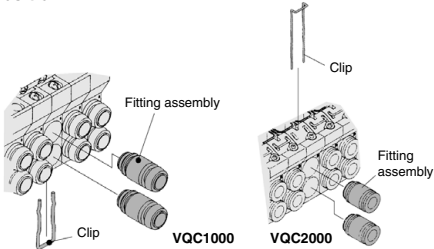

| Applicable tubing O.D. | Fitting assembly part no. | |
|--------------------------|---------------------------|----------------|
| | VQC1000 | VQC2000 |
| Applicable tubing ø3.2 | VVQ1000-50A-C3 | — |
| Applicable tubing ø4 | VVQ1000-50A-C4 | VVQ1000-51A-C4 |
| Applicable tubing ø6 | VVQ1000-50A-C6 | VVQ1000-51A-C6 |
| Applicable tubing ø8 | — | VVQ1000-51A-C8 |
| M5 | VVQ1000-50A-M5 | — |
| Applicable tubing ø1/8" | VVQ1000-50A-N1 | — |
| Applicable tubing ø5/32" | VVQ1000-50A-N3 | VVQ1000-51A-N3 |
| Applicable tubing ø1/4" | VVQ1000-50A-N7 | VVQ1000-51A-N7 |
| Applicable tubing ø5/16" | — | VVQ1000-51A-N9 |

* Refer to "Manifold Optional Parts" on pages 590 and 593 for other types of fittings.


⚠ Caution

- 1) Use caution that O-rings must be free from scratches and dust. Otherwise, air leakage may result.
- 2) After screwing in the fittings, mount the M5 fitting assembly on the manifold base. (Tightening torque: 0.8 to 1.2 N·m)
- 3) Purchasing order is available in units of 10 pieces.

Light/Surge Voltage Suppressor

⚠ Caution


The lighting positions are concentrated on one side for both single solenoid type and double solenoid type. In the double solenoid type, A side and B side energization are indicated by two colors which match the colors of the manual overrides.

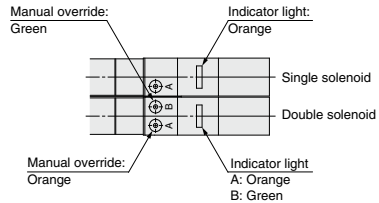


(Drawing shows a VQC1000 case.)

DC circuit diagram

Single solenoid

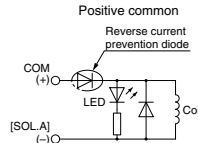

Double solenoid

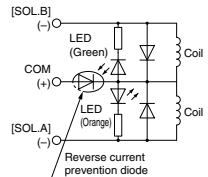

Note) A-side energization:

A light (Orange) illuminates.

B-side energization:

B light (Green) illuminates.

With wrong wiring prevention (stop diode) mechanism

With a surge absorption (surge absorption diode) mechanism



VQC1000/2000 Series

Specific Product Precautions 3


Be sure to read this before handling the products.
Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

How to Mount/Remove DIN Rail

⚠ Caution


Removing

- Loosen the clamp screw on side (a) of the end plate on both sides.
- Lift side (a) of the manifold base and slide the end plate in the direction of (2) shown in the figure to remove.

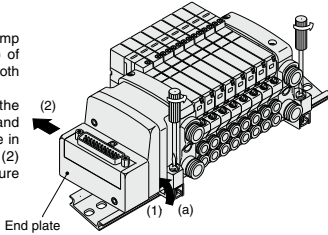

Mounting

- Hook side (b) of the manifold base on the DIN rail.
- Press down side (a) and mount the end plate on the DIN rail. Tighten the clamp screw on side (a) of the end plate. (Proper tightening torque: VQC1000, 1.1 to 1.3 N·m; VQC2000, 1.4 to 1.6 N·m.)

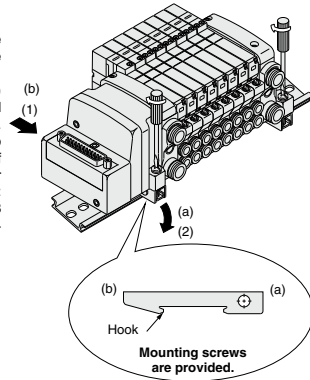

IP67 Enclosure

⚠ Caution

Wiring connection for models conforming to IP67 should also have enclosures equivalent to or of stricter than IP67.

Built-in Silencer Element

⚠ Caution


A filter element is incorporated in the end plate on both sides of the manifold base. A dirty and choked element may reduce cylinder speed or cause malfunction. Clean or replace the dirty element.

Element Part No.

| Type | Element part no. | |
|--|------------------|---|
| | VQC1000 | VQC2000 |
| Direct EXH outlet with built-in silencer | VVQ1000-82A-1 | VVQ2000-82A-1 (D-side end plate) VVQC2000-82A-1 (U-side end plate) |

The minimum order quantity is 10 pcs.

Remove the cover from the top of the end plate and remove the old element with a flat head screwdriver, etc.

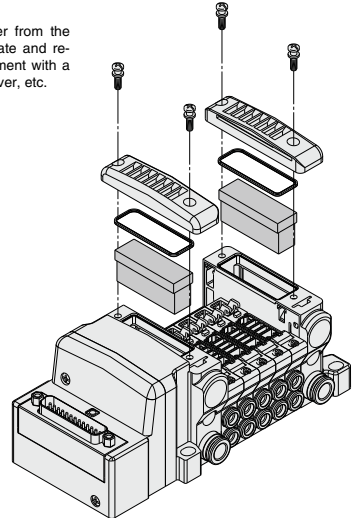

How to Calculate Flow Rate

Refer to front matters for obtaining the flow rate.

SV

SYJ

SZ

VF

VP4

VQ

1/2

VQ

4/5

VQC

1/2

VQC

4/5

VQZ

SQ

VFS

VFR

VQ7



VQC1000/2000 Series

Specific Product Precautions 4

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

EX500/EX260/EX250/EX126 Precautions

Warning

1. These products are intended for use in general factory automation equipment.
Avoid using these products in machinery/equipment which affects human safety, and in cases where malfunction or failure can result in extensive damage.
2. Do not use in explosive environments, in the presence of inflammable gases, or in corrosive environments. This can cause injury or fire.
3. Work such as transporting, installing, piping, wiring, operation, control and maintenance should be performed by knowledgeable and qualified personnel only. As handling involves the risk of a danger of electrocution, injury or fire.
4. Install an external emergency stop circuit that can promptly stop operation and shut off the power supply.
5. Do not modify these products. Modifications done to these products carry the risk of injury and damage.

Caution

1. Read the Operation Manual carefully, strictly observe the precautions and operate within the range of the specifications.
2. Do not drop these products or submit them to strong impacts. This can cause damage, failure or malfunction.
3. In locations with poor electrical conditions, take steps to ensure a steady flow of the rated power supply. Use of a voltage outside of the specifications can cause malfunction, damage to the unit, electrocution or fire.
4. Do not touch connector terminals or internal circuit elements when current is being supplied. There is a danger of malfunction, damage to the unit or electrocution if connector terminals or internal circuit elements are touched when current is being supplied.

Be sure that the power supply is OFF when adding or removing manifold valves or input blocks or when connecting or disconnecting connectors.

5. Operate at an ambient temperature that is within the specifications. Even when the ambient temperature range is within the specifications, do not use in locations where there are rapid temperature changes.
6. Keep wire scraps and other extraneous materials from getting inside these products. This can cause fire, failure or malfunction.
7. Give consideration to the operating environment depending on the type of enclosure being used.

To achieve IP65 and IP67 protection class, provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors. Also, provide waterproof caps when there are unused ports, and perform proper mounting of input units, input blocks, SI units and manifold valves. Provide a cover or other protection for applications in which there is constant exposure to water.

8. Use the proper tightening torques.
There is a possibility of damaging threads if tightening exceeds the tightening torque range.
9. Provide adequate protection when operating in locations such as follows:
 - Where noise is generated by static electricity
 - Where there is a strong electric field
 - Where there is a danger of exposure to radiation
 - When in close proximity to power supply lines

Caution

10. When these products are installed in equipment, provide adequate protection against noise by using noise filters.
11. Since these products are components whose end usage is obtained after installation in other equipment, the customer should confirm conformity to EMC directives for the finished product.
12. Do not remove the name plate.
13. Perform periodic inspections and confirm normal operation, otherwise it may be impossible to guarantee safety due to unexpected malfunction or erroneous operation.
14. Do not use in places where there are cyclic temperature changes.
In case that the cyclic temperature is beyond normal temperature changes, the inside product is likely to be adversely affected.
15. Do not use in direct sunlight.
Do not use in direct sunlight. It may cause malfunction or damage.
16. Do not use in places where there is radiated heat around it.
Such a place is likely to cause malfunction.

Safety Instructions on Power Supply

Caution

1. Operation is possible with a single power supply or a separate power supply. However, be sure to provide two wiring systems (one for solenoid valves, and one for input and control units).
2. When it is UL compliant, use a class 2 power supply unit in accordance with UL1310 for a combined direct current power supply.

Safety Instructions on Cable

Caution

1. Avoid miswiring, as this can cause malfunction, damage and fire in the unit.
2. To prevent noise and surge in signal lines, keep all wiring separate from power lines and high-voltage lines. Otherwise, this can cause malfunction.
3. Check wiring insulation, as defective insulation can cause damage to the unit when excessive voltage or current is applied.
4. Do not bend or pull cables repeatedly, and do not place heavy objects on them or allow them to be pinched. This can cause broken lines.



VQC1000/2000 Series

Specific Product Precautions 5

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

EX600 Precautions

Design/Selection

 
⚠ Warning

- Use this product within the specification range.**
Using beyond the specified specifications range can cause fire, malfunction, or damage to the system.
Confirm the specifications when operating.
- When using for an interlock circuit:**
 - Provide a multiple interlock system which is operated by another system (such as mechanical protection function).
 - Perform an inspection to check that it is working properly.

This may cause possible injury due to malfunction.

⚠ Caution

- When it is UL compliant, use a class 2 power supply unit in accordance with UL1310 for a combined direct current power supply.**
- Use this product within the specified voltage range.**
Using beyond the specified voltage range is likely to cause the units and connecting devices to be damaged or to malfunction.
- The power supply for the unit should be 0 V as the standard for both power supply for output as well as power supply for control/input.**



- Do not install a unit in a place where it can be used as a foothold.**
Applying any excessive load such as stepping on the unit by mistake or placing a foot on it, will cause it to break.
- Keep the surrounding space free for maintenance.**
When designing a system, take into consideration the amount of free space needed for performing maintenance.
- Do not remove the name plate.**
Improper maintenance or incorrect use of the Operation Manual can cause failure and malfunction. Also, there is a risk of losing conformity with safety standards.
- Beware of inrush current when the power supply is turned on.**
Some connected loads can apply an initial charge current which will trigger the over current protection function, causing the unit to malfunction.

Mounting

⚠ Caution

- When handling and assembling units:**
 - Do not touch the sharp metal parts of the connector or plug.
 - Do not apply excessive force to the unit.
The connecting portions of the unit are firmly joined with seals.
 - When joining units, take care not to get fingers caught between units.
Injury can result.
- Do not drop, bump, or apply excessive impact.**
Otherwise, the unit can become damaged, malfunction, or fail to function.
- Observe the tightening torque range.**
Tightening outside of the allowable torque range will likely damage the product.
IP67 protection class cannot be guaranteed if the screws are not tightened to the specified torque.
- When lifting a large size manifold solenoid valve unit, take care to avoid causing stress to the valve connection joint.**
The connection parts of the unit may be damaged.
Because the unit may be heavy, carrying and installation should be performed by more than one operator to avoid strain or injury.
- When placing a manifold, mount it on a flat surface.**
Torsion in the whole manifold can lead to trouble such as air leakage or defective insulation.

Wiring

⚠ Caution

- Confirm grounding to maintain the safety of the reduced wiring system and for anti-noise performance.**
Provide a specific grounding as close to the unit as possible to minimize the distance to grounding.
- Avoid repeatedly bending or stretching the cable and applying a heavy object or force to it.**
Wiring applying repeated bending and tensile stress to the cable can break the circuit.
- Avoid miswiring.**
If miswired, there is a danger of malfunction or damage to the reduced wiring system.
- Do not wire while energizing the product.**
There is a danger of malfunction or damage to the reduced wiring system or input/output equipment.

■ Trademark

DeviceNet® is a registered trademark of ODVA, Inc.
EtherNet/IP® is a registered trademark of ODVA, Inc.
EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

| |
|---------|
| SV |
| SYJ |
| SZ |
| VF |
| VP4 |
| VQ 1/2 |
| VQ 4/5 |
| VQC 1/2 |
| VQC 4/5 |
| VQZ |
| SQ |
| VFS |
| VFR |
| VQ7 |



VQC1000/2000 Series

Specific Product Precautions 6

Be sure to read this before handling the products.

Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

EX600 Precautions

Wiring

Caution

5. Avoid wiring the power line and high-pressure line in parallel.

Noise or surge produced by signal line resulting from the power line or high pressure line could cause malfunction.

Wiring of the reduced wiring system or input/output device and the power line or high-pressure line should be separated from each other.

6. Confirm the wiring insulation.

Defective insulation (contact with other circuits, improper insulation between terminals, etc.) may cause damage to the reduced wiring system or input/output device due to excessive voltage or current.

7. When a reduced wiring system is installed in machinery/equipment, provide adequate protection against noise by using noise filters, etc.

Noise in signal lines may cause malfunction.

8. When connecting wires of input/output device or handheld terminal, prevent water, solvent or oil from entering inside from the connector section.

This can cause damage, equipment failure, or malfunction.

9. Avoid wiring patterns in which excessive stress is applied to the connector.

This may cause malfunction or damage to the unit due to contact failure.

Operating Environment

Warning

1. Do not use in an atmosphere containing an inflammable gas or explosive gas.

Use in such an atmosphere is likely to cause a fire or explosion. This system is not explosion-proof.

Caution

1. Select the proper type of enclosure according to the environment of operation.

IP65/67 protection class is achieved when the following conditions are met.

- 1) The units are connected properly with wiring cable for power supply, communication connector, and cable with M12 connector.
- 2) Suitable mounting of each unit and manifold valve.

- 3) Be sure to mount a seal cap on any unused connectors.

If using in an environment that is exposed to water splashes, please take measures such as using a cover.

For IP40 protection class, do not use in atmospheres with corrosive gas, chemicals, sea water, water, steam, or where there is direct contact with any of these.

When EX600-D□□E or EX600-D□□F are connected, the enclosure of the manifold should be IP40.

Also, the Handheld Terminal confirms to IP20, so prevent foreign matter from entering inside, and water, solvent or oil from coming in direct contact with it.

Operating Environment

Caution

2. Provide adequate protection when operating in locations such as the following.

Failure to do so may cause damage or malfunction.

The effect of countermeasures should be checked in individual equipment and machine.

- 1) Where noise is generated by static electricity, etc.
- 2) Where there is a strong electric field
- 3) Where there is a danger of exposure to radiation
- 4) When in close proximity to power supply lines

3. Do not use in an environment where oil and chemicals are used.

Operating in environments with coolants, cleaning solvents, various oils or chemicals may cause adverse effects (damage, malfunction) to the unit even in a short period of time.

4. Do not use in an environment where the product could be exposed to corrosive gas or liquid.

This may damage the unit and cause it to malfunction.

5. Do not use in locations with sources of surge generation.

Installation of the unit in an area around the equipment (electromagnetic lifters, high frequency induction furnaces, welding machine, motors etc.), which generates the large surge voltage could cause to deteriorate an internal circuitry element of the unit or result in damage. Implement countermeasures against the surge from the generating source, and avoid touching the lines with each other.

6. Use the product type that has an integrated surge absorption element when directly driving a load which generates surge voltage by relay, solenoid valves or lamp.

When a surge generating load is directly driven, the unit may be damaged.

7. The product is CE/UKCA marked, but not immune to lightning strikes. Take measures against lightning strikes in your system.

8. Keep dust, wire scraps and other extraneous material from getting inside the product.

This may cause malfunction or damage.

9. Mount the unit in such locations, where no vibration or shock is affected.

This may cause malfunction or damage.

10. Do not use in places where there are cyclic temperature changes.

In case that the cyclic temperature is beyond normal temperature changes, the internal unit is likely to be adversely effected.

11. Do not use in direct sunlight.

Do not use in direct sunlight. It may cause malfunction or damage.

12. Use this product within the specified ambient temperature range.

This may cause malfunction.

13. Do not use in places where there is radiated heat around it.

Such a place is likely to cause malfunction.



VQC1000/2000 Series Specific Product Precautions 7

Be sure to read this before handling the products.
Refer to back page 50 for Safety Instructions and pages 3 to 9 for 3/4/5 Port Solenoid Valve Precautions.

EX600 Precautions

Adjustment/Operation

⚠ Warning

1. Do not perform operation or setting with wet hands.
There is a risk of electrical shock.


<Handheld Terminal>

2. Do not apply pressure to the LCD display.
There is a possibility of the crack of LCD display and injuring.
3. The forced input/output function is used to change the signal status forcibly. When operating this function, be sure to check the safety of the surroundings and installation.
Otherwise, injury or equipment damage could result.
4. Incorrect setting of parameters can cause malfunction. Be sure to check the settings before use.
This may cause injury or equipment damage.

⚠ Caution

1. Use a watchmaker's screwdriver with thin blade for the setting of each switch of the SI unit.
When setting the switch, do not touch other unrelated parts.
This may cause parts damage or malfunction due to a short circuit.
 2. Provide adequate setting for the operating conditions.
Failure to do so could result in malfunction.
Refer to the Operation Manual for setting of the switches.
 3. For the details of programming and address setting, refer to the manual from the PLC manufacturer.
The content of programming related to protocol is designed by the manufacturer of the PLC used.
- #### <Handheld Terminal>
4. Do not press the setting buttons with a sharp pointed object.
This may cause damage or malfunction.
 5. Do not apply excessive load and impact to the setting buttons.
This may cause damage, equipment failure or malfunction.

When the order does not include the SI unit, the valve plate to connect the manifold and SI unit is not mounted. Use attached valve fixing screws and mount the valve plate.
(Tightening torque: 0.6 to 0.7 N-m)

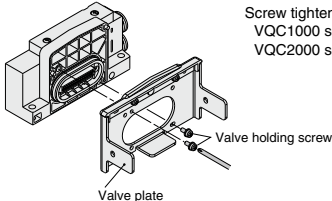

Screw tightened parts
VQC1000 series: 2 places
VQC2000 series: 3 places

Maintenance

⚠ Warning

1. Do not disassemble, modify (including circuit board replacement) or repair this product.
Such actions are likely to cause injuries or breakage.
2. When an inspection is performed,
 - Turn off the power supply.
 - Stop the air supply, exhaust the residual pressure in piping and verify that the air is released before performing maintenance work.
Unexpected malfunction of system components and injury can result.

⚠ Caution

1. When handling and replacing the unit:
 - Do not touch the sharp metal parts of the connector or plug.
 - Do not apply excessive force to the unit.
The connecting portions of the unit are firmly joined with seals.
 - When joining units, take care not to get fingers caught between units.
Injury can result.
2. Perform periodic inspection.
Unexpected malfunction in the system composition devices is likely to occur due to malfunction of machinery or equipment.
3. After maintenance, make sure to perform an appropriate functionality inspection.
In cases of abnormality such as faulty operation, stop operation. Unexpected malfunction in the system composition devices is likely to occur.
4. Do not use benzene and thinner for cleaning units.
Damage to the surface or erasure of the display can result. Wipe off any stains with a soft cloth.
If the stain is persistent, wipe off with a cloth soaked in a dilute solution of neutral detergent and wrung out tightly, and then finish with a dry cloth.

| |
|------------|
| SV |
| SYJ |
| SZ |
| VF |
| VP4 |
| VQ 1/2 |
| VQ 4/5 |
| VQC 1/2 |
| VQC 4/5 |
| VQZ |
| SQ |
| VFS |
| VFR |
| VQ7 |

■ Trademark

DeviceNet® is a registered trademark of ODVA, Inc.
EtherNet/IP® is a registered trademark of ODVA, Inc.
EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

