

Space Saving Vacuum Ejector/Vacuum Pump System

ZQ Series

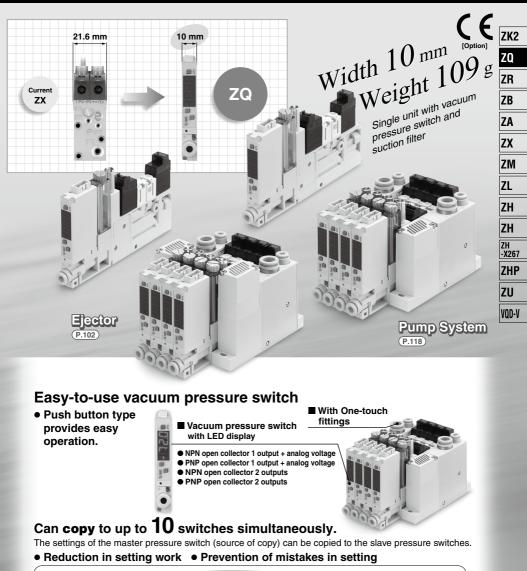

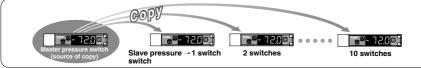

∕∕∂SMC


Space Saving Vacuum Ejector Note) CE-compliant ZQ Series

How to Order

| Ejector I | Unit |
|-----------|------|
| | |

ZQ1 05 1U

1 2

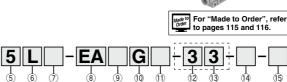

1 Nozzle nominal size

2 Exhaust type

K1

| 05 | ø0.5 | |
|----|------|--|
| 07 | ø0.7 | |
| 10 | ø1.0 | |

1U With silencer for single unit 3M With silencer for manifold

3 Solenoid valve combination (Refer to Table (1).)

| Symbol | Supply valve | Vacuum release valve |
|------------|--------------------------|----------------------|
| K1 | Normally closed | Normally closed |
| K2 Note 1) | Normally open | Normally closed |
| J1 | Normally closed | None |
| J2 Note 1) | Normally open | None |
| Q1 | Latching positive common | Normally closed |
| Q2 | Latching positive common | None |
| N1 | Latching negative common | Normally closed |
| N2 | Latching negative common | None |

Note 1) When using K2 or J2 (supply valve normally open), ensure that the energizing time does not become longer than the non-energizing time. If the energizing time becomes longer or if the valve is energized for 10 minutes or longer, select the DC low wattage type in "Made to Order". (Refer to page 116.)

(4) Pilot valve (Refer to Table (1).)

| Nil | Standard (DC: 1 W) Note 2) |
|--------|--|
| Y | DC low wattage type (0.5 W) Note 2) |
| Noto 2 | Avoid operatizing the colonoid value for |

long periods of time. (Refer to Design and Selection on Specific Product Precautions.)

5 Solenoid valve rated voltage (Refer to Table (1).)

For DC only.

15

| | | CE-compliant |
|-----------|--------------------|--------------|
| 1 Note 3) | 100 VAC (50/60 Hz) | - |
| 2 Note 3) | 200 VAC (50/60 Hz) | — |
| 3 Note 3) | 110 VAC (50/60 Hz) | — |
| 4 Note 3) | 220 VAC (50/60 Hz) | - |
| 5 | 24 VDC | • |
| 6 | 12 VDC | • |

Note 3) CE-compliant products are not available for "1", "2", "3" and "4".

Table (1) Combination of Solenoid Valve, Pilot Valve and Power Supply Voltage

| Combination | Solenoid valve combination | Pilot valve | | Applicat | ble power | supply vol | tage (V) | |
|-------------|-------------------------------|-------------|--------|----------|-----------|------------|----------|-------|
| no. | symbol | symbol | 100 AC | 200 AC | 110 AC | 220 AC | 24 DC | 12 DC |
| 1 | K1 | Nil | _ | _ | _ | _ | • | • |
| 2 | K1 | Y | — | — | — | _ | • | • |
| 3 | K2 | Nil | — | — | — | _ | • | • |
| (4) | J1 | Nil | • | • | • | • | • | • |
| (5) | J1 | Y | — | _ | _ | — | • | • |
| 6 | J2 | Nil | — | — | — | _ | • | • |
| 7 | Q1 | Nil | - | _ | _ | _ | • | • |
| 8 | Q2 | Nil | • | ٠ | ٠ | ۲ | • | • |
| 9 | N1 | Nil | — | — | — | _ | • | • |
| 10 | N2 | Nil | — | — | — | _ | • | • |

* Combinations (1) to (10 in the above table are the only possible options.

Space Saving Vacuum Ejector ZQ Series

6 Electrical entry

| L | L-type plug connector, with 0.3 m lead wire, with light/surge voltage suppressor | |
|----|---|--|
| LO | L-type plug connector, without connector, with light/surge voltage suppressor | |
| G | Grommet, with 0.3 m lead wire (Latching/AC type: Not applicable) | |

⑦ Manual override Note 4)

| Nil | Non-locking push type Latching type: Push-locking type |
|-----|--|
| в | Locking type (Q1/Q2/N1/N2: Not applicable) |
| i | atching type supply valve: Available in "Nil" only. n this case, the supply valve and release valve come with a push-locking type. |

(8) Vacuum pressure switch suction filter Note 5)

| EA | 0 to -101 kPa/NPN open collector 2 outputs, with suction filter |
|----|---|
| EB | 0 to -101 kPa/PNP open collector 2 outputs, with suction filter |
| EC | 0 to -101 kPa/NPN open collector 1 output + analog voltage, with suction filter |
| EE | 0 to -101 kPa/PNP open collector 1 output + analog voltage, with suction filter |
| FA | 100 to -100 kPa/NPN open collector 2 outputs, with suction filter |
| FB | 100 to -100 kPa/PNP open collector 2 outputs, with suction filter |
| FC | 100 to -100 kPa/NPN open collector 1 output + analog voltage, with suction filter |
| FE | 100 to -100 kPa/PNP open collector 1 output + analog voltage, with suction filter |
| F | Suction filter only |

Note 5) The filter included in this product is of an simple type, and will become clogged quickly in environments with high quantities of dust or particulates. Please make additional use of an air suction filter of the ZFA, ZFB or ZFC series.

∆Warning

The filter case of this suction filter is made of nylon. Contact with alcohol or similar chemicals may cause it to be damaged. Also, do not use the filter when these chemicals are present in the atmosphere.

11 Check valve Note 8) Note 9)

| Nil | None |
|-----|------------------|
| Κ | With check valve |

Note 8) The check valve has a function to prevent the exhaust air from the silencer overflowing to the vacuum port side when a manifold is used, but it cannot prevent overflow of the exhaust air completely. During usage please inspect thoroughly with actual machine. Also, in order to completely prevent the overflow of exhaust air, leave plenty of

space between the check valve unit and adjacent ejector to avoid interference from the ejector's exhaust unit.

Note 9) Only applicable to the exhaust type 3M and cannot be selected for solenoid valve combinations of J1, J2, Q2 and N2.

∆Warning

- 1) Cannot be used for vacuum retention
- 2 Use a release valve. (Without a release valve, a workpiece may not be released.)

12 Fitting (V port) Note 10)

| Symbol | Applicable tubing O.D. |
|--------|----------------------------|
| 0 | Without fitting (M5 x 0.8) |
| 1 | ø3.2 (Straight) |
| 2 | ø4 (Straight) |
| 3 | ø6 (Straight) |
| 4 | ø3.2 (Elbow) |
| 5 | ø4 (Elbow) |

13 Fitting (P port) Note 10)

| Symbol | Applicable tubing O.D. | Object spec. | | |
|--------|----------------------------|------------------|--|--|
| Nil | Without port | Manifold | | |
| 0 | Without fitting (M5 x 0.8) | | | |
| 2 | ø4 (Straight) | Oire et a surait | | |
| 3 | ø6 (Straight) | Single unit | | |
| 5 | ø4 (Elbow) | | | |

14 Bracket A

| Nil | With bracket A | |
|-----|-------------------|----------|
| Ν | Without bracket A | Note 11) |

15 CE-compliant

| Nil — Q CE-compl | | _ |
|---------------------|--|--------------|
| | | CE-compliant |

Note) CE-compliant: For DC only.

Note 10) For filter only (Without vacuum pressure switch)

Single unit: When neither V port fitting nor P port fitting are needed, enter

nothing or -00 in the dotted line "How to Order"

Manifold specifications: When the V port fitting is not needed, enter nothing or -0 in the dotted line "How to Order".

Note 11) Only applicable to the exhaust type 1U.

(9) Vacuum pressure switch unit specifications

ZK2

ZQ ZR ZB ZA ZX


ZM ZL ZH ZH ZH -X267

ZHP

| М | Fixed SI unit Note 7) | | | | |
|---|---|--|--|--|--|
| | | | | | |
| Р | With unit switching function Note 6) (Initial value psi) | | | | |
| Note 6) Under the New Measurement Law, sales of switches with the unit switching function are not allowed for use in Japan. | | | | | |
| Note 7) Fixed unit: kPa | | | | | |


(10) Vacuum pressure switch lead wire specifications

| Nil | Without connector | |
|-----|--|-------|
| G | Lead wire with connector (Lead wire length 2 m) | ZU |
| G | With connector cover | VQD-V |

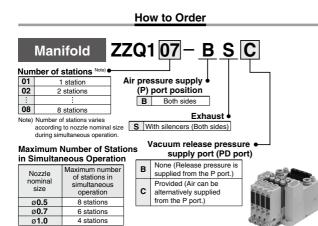


Flow/Exhaust Characteristics


ZQ105 / Exhaust Characteristics

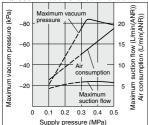



ZQ107 / Exhaust Characteristics

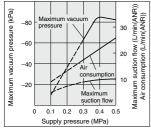


ZQ110 / Exhaust Characteristics

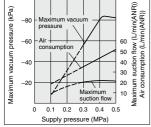

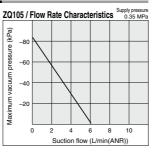


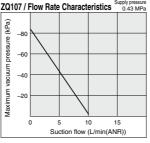

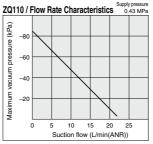


SMC

Manifold Ordering Example

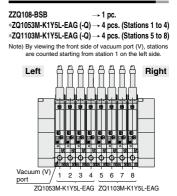

How to Read Flow Rate Characteristics

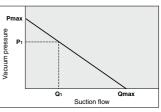

Flow rate characteristics are expressed in ejector vacuum pressure and suction flow. If suction flow rate changes, a change in vacuum pressure will also be expressed. Normally this relationship is expressed in ejector standard use.

In the graph, **Pmax** is max. vacuum pressure and **Qmax** is max. suction flow. The valves are specified according to catalog use. Changes in vacuum pressure are expressed in the below order.

- When ejector suction port is covered and made airtight, suction flow becomes 0 and vacuum pressure is at maximum value (Pmax).
- When suction port is opened gradually, air can flow through, (air leakage), suction flow increases, but vacuum pressure decreases. (condition P1 and Q1)
- When suction port is opened further, suction flow moves to maximum value (Qmax), but vacuum pressure is near 0. (atmospheric pressure).

When vacuum port (vacuum piping) has no leakage, vacuum pressure becomes maximum, and vacuum pressure becomes maximum, and vacuum pressure as a leakage increases. When leakage value is the same as max. suction flow, vacuum pressure is near 0.

When ventirative or leaky work must be adsorbed, please note that vacuum pressure will not be high.



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 49 to 51 for Vacuum Equipment Precautions.

∆Caution

Refer to the vacuum equipment model selection on pages 25 to 48 for the selecting and sizing of ZQ series.

Specifications

Ejector

| Model | | ZQ105 | ZQ107 | ZQ110 |
|------------------------------------|--|---|---------|-------|
| Nozzle nominal diameter (mm) | | 0.5 | 0.7 | 1.0 |
| Maximum suction flow (L/min (ANR)) | | 5 | 10 | 22 |
| Air consumption (L/min (ANR)) | | 14 | 23 | 46 |
| Maximum vacuum pressure | | | -80 kPa | |
| | Air pressure supply port (P) | 0.3 to 0.5 MPa (Normally open: 0.3 to 0.45 MPa) | | |
| Supply pressure range | Supply pressure port for vacuum release (PD) | 0.3 to 0.5 MPa (Normally open: 0.3 to 0.45 MPa), and also PD pressure ≤P pressure | | |
| Supply pressure Note) | | 0.35 MPa 0.43 MPa | | |
| Operating temperature range | | 5 to 50°C | | |
| Fluid | | Air | | |

Note) Maximum suction flow can be obtained by standard supply pressure.

Weight

| Single | With suction filter Note 1) | 95 g |
|--------|--|-------|
| unit | With vacuum pressure switch and suction filter Note 2) | 109 g |
| | 122 g | |

Note 1) Including a 0.3 m connector for supply valve and vacuum release valve. Note 2) Including a 0.3 m connector for supply valve and vacuum release valve and a 2 m connector for vacuum pressure switch.

○ Calculation of weight for the manifold type

(Single unit weight) x (Number of stations) + (Weight of end plate assembly for manifold)

Example) Vacuum pressure switch + 8 stations with suction filter

109 g x 8 + 122 g = 994 g

Supply Valve / Vacuum Release Valve

| Turne | | Normally | / closed | Latabian tara | Namally and |
|--|---------|--|--------------------------|--|---|
| Туре | Туре | | Low wattage type (0.5 W) | Latching type | Normally open |
| Model (Refer to "How to Order" for solenoid valves on page 107.) | | VQ110-□ | VQ110Y-□ | VQ110 <mark>⊾</mark> -□ | ZQ1-VQ120-□ |
| Manual override | | Non-locking push type / Locking type (Tool type) | | Push-locking type | Non-locking push type / Locking type (Tool type) |
| Rated coil voltage | | 12, 24 VDC, 100, 110, 200, 220 VAC | 12, 24 VDC | 12, 24 VDC, 100, 110, 200, 220 VAC | 12, 24 VDC |
| | DC | 1 W | 0.5 W | 1 W | |
| | 100 VAC | 0.5 VA (5 mA) | _ | 0.6 VA (6 mA) | — |
| Power consumption (current value) | 110 VAC | 0.55 VA (5 mA) | _ | 0.65 VA (5.9 mA) | _ |
| (ourroin ruido) | 200 VAC | 1.0 VA (5 mA) | _ | 1.2 VA (6 mA) | _ |
| | 220 VAC | 1.1 VA (5 mA) | _ | 1.3 VA (5.9 mA) | _ |
| Electrical entry | | Gron L-type plug (with light/surge vo | connector | L-type plug connector (with light/surge (voltage suppressor) | Grommet L-type plug connector (with light/surge voltage suppressor) |

| ZK2 |
|-------------|
| ZQ |
| ZR |
| ZB |
| ZA |
| ZX |
| ZM |
| ZL |
| ZH |
| ZH |
| ZH -X267 |
| ZHP |
| ZU |
| VQD-V |
| |


Specifications

Vacuum Pressure Switch

| Model | | lodel | ZQ1-ZSE (ZSE10) | ZQ1-ZSF (ZSE10F) | |
|--------------------------|---|---------------------|---|---|--|
| Rated pressure range | | | 0 to -101 kPa | -100 to 100 kPa | |
| Set pressure | e range/Dis | play pressure range | 10 to –105 kPa | -105 to 105 kPa | |
| Withstand p | ressure | | 500 | kPa | |
| Minimum se | tting unit | | 0.1 | kPa | |
| Power supply voltage | | | 12 to 24 VDC ±10%, Ripple (p-p) 10% or I | ess (with power supply polarity protection) | |
| Current con | sumption | | 40 mA | or less | |
| Switch outp | ut | | NPN or PNP open collect | or: 2 outputs (selectable) | |
| | Maximum | load current | 80 | mA | |
| | Maximum | applied voltage | 28 V (with M | IPN output) | |
| | Residual | voltage | 2 V or less (with loa | d current of 80 mA) | |
| | Response | e time | 2.5 ms or less (Response time selections with anti-chattering function: 20, 100, 500, 1000 and 2000 ms | | |
| Short circuit protection | | cuit protection | With short-circuit protection | | |
| Repeatability | | | ±0.2% F.S. ±1 digit | | |
| Hysteresis | Hysteresis mode | | Variable (0 or above) Note 1) | | |
| | Window comparator mode | | | | |
| Analog | Voltage Output voltage (rated pressure range) | | | | |
| output | output | Linearity | ±1% F.S | | |
| • | | Output impedance | Approx. 1 kΩ | | |
| Display syst | | | 3 1/2-digit, 7 segment LED 1-color display (Red) | | |
| Display accu | | | $\pm 2\%$ F.S. ± 1 digit (at ambient temperature of 25 $\pm 3^{\circ}$ C) | | |
| Operation in | | | Lights when ON, OUT1: Green, OUT2: Red | | |
| | Enclosure | | IP | 40 | |
| Environ- | Ambient humidity range | | Operating/Stored: 35 to 85% | | |
| mental | Withstand | v | 1000 VAC for 1 min. betwe | • | |
| resistance | Insulation resistance | | $50\ \text{M}\Omega$ or more (500 VDC measured via megohmmeter) between terminals and housing | | |
| | Vibration resistance | | 10 to 150 Hz at the smaller of amplitude 1.5 mm or acceleration | | |
| | Impact resistance | | 100 m/s ² in X, Y, Z directions 3 times each (De-energized) | | |
| Temperature | e characteri | istics | $\pm 2\%$ F.S. (at 25°C of ambient temperature range between –5 and 50°C) | | |
| Lead wires | | | Oil-resistant cabtire cord Cross section: 0.15 mm ² (AWG26), 5 cores, 2 m, Conductor O.D.: 1.0 mm | | |
| | | | | | |


Note 1) If the applied voltage fluctuates around the set-value, the hysteresis must be set to a value more than the fluctuating width, otherwise chattering will occur. Note 2) For others, refer to ejector specifications on page 105.

Construction

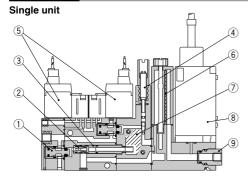

Component Parts


| No. | Description | Material | | | | |
|-----|---------------------------------------|-----------------|--|--|--|--|
| 1 | Poppet valve assembly | - | | | | |
| 2 | Nozzle | Resin | | | | |
| 3 | Diffuser | Resin | | | | |
| 4 | Vacuum release flow adjustment needle | Stainless steel | | | | |

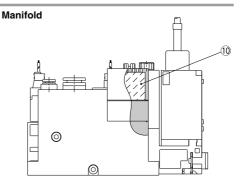

Replacement Parts


| nop | | | | | | |
|-----|--|------------|--------------------|--|--|--|
| No. | Description | Material | Part no. | | | |
| 5 | Solenoid valve | — | Refer to page 107. | | | |
| 6 | Filter element | PVA sponge | XT534-5-001-AS | | | |
| 7 | Sound absorbing material 1 (single unit) | PVA sponge | ZQ-SAE | | | |
| 8 | Vacuum pressure switch | — | Refer to page 107. | | | |
| 9 | Fitting | - | - | | | |
| 10 | Sound absorbing material 2 (manifold) | PVA sponge | ZZQ-SAE | | | |

Space Saving Vacuum Ejector ZQ Series

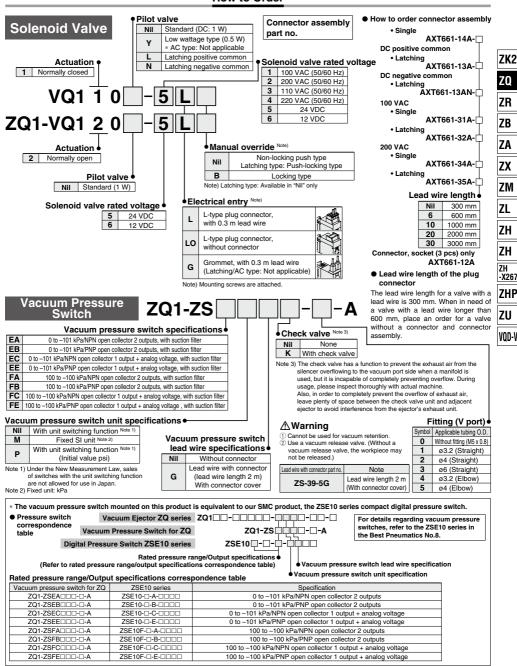


How to Order




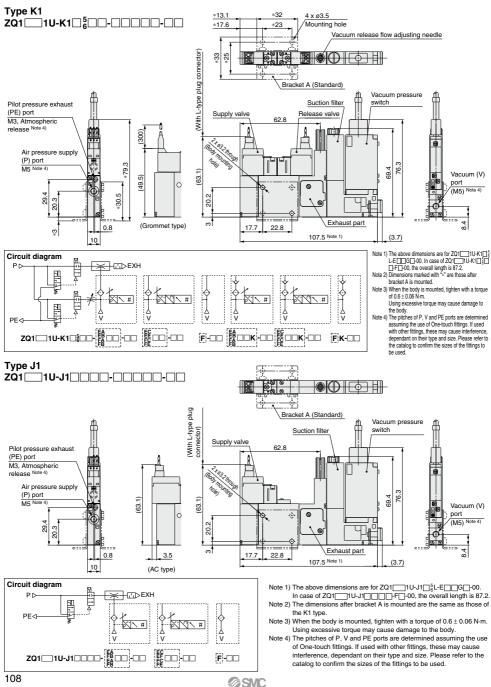



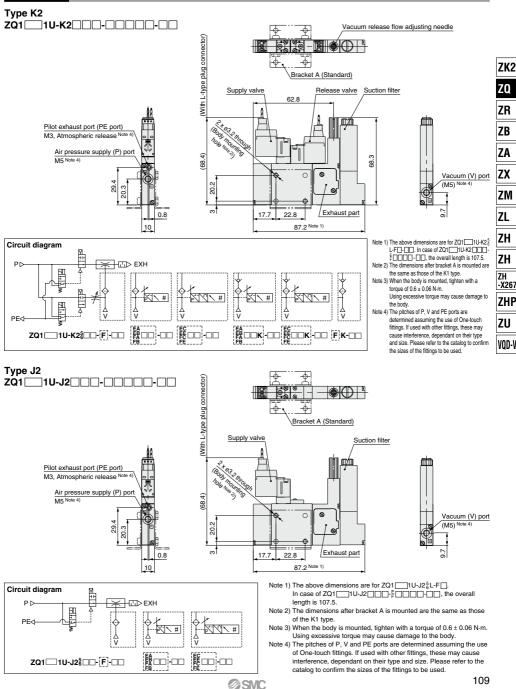


Dimensions

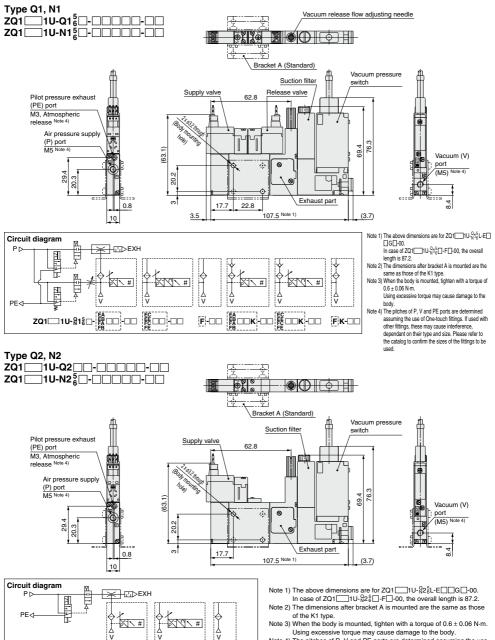


Note 4) The pitches of P, V and PE ports are determined assuming the use of One-touch fittings. If used with other fittings, these may cause interference, dependant on their type and size. Please refer to the catalog to confirm the sizes of the fittings to be used.

ZQ1 1U-920- E

F-00

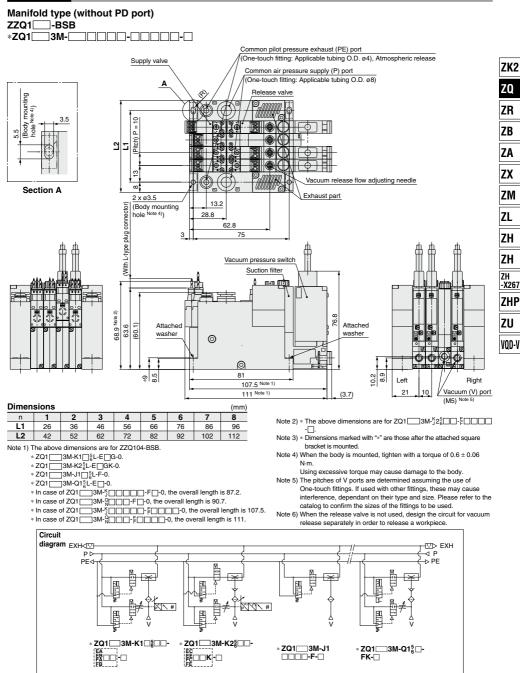


⊘SMC

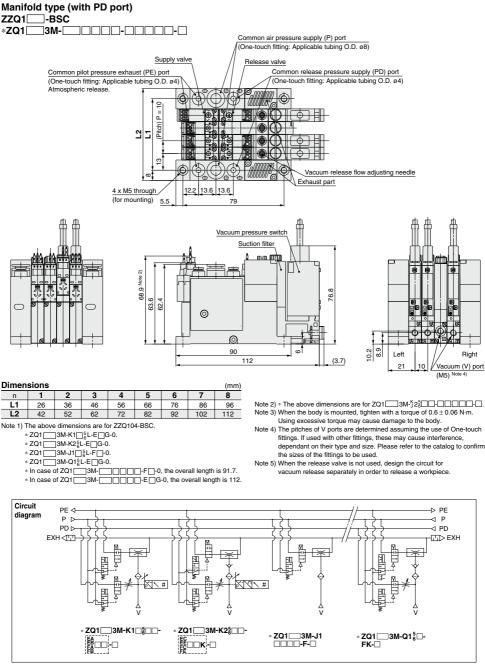

Fittings / Fitting type filter dimensions after installation

V port

<With vacuum pressure switch>

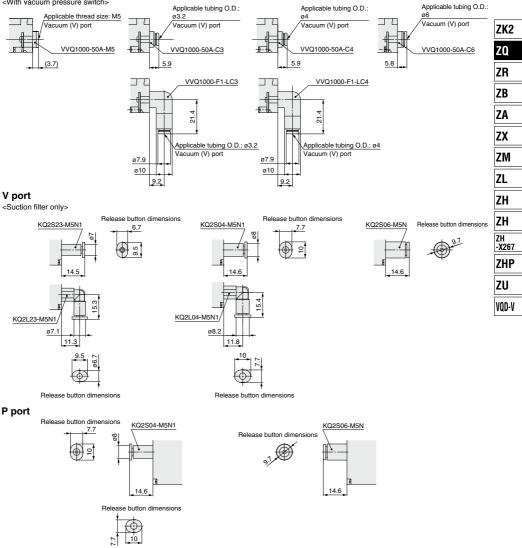


ø<u>8.2</u>

54

KQ2L04-M5N1

Manifold Exploded View

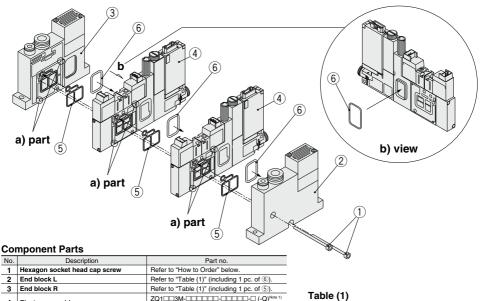

(1 pc. each in (5) and (6) is included.)

5 Ejector body gasket for manifold ZQ-3-005-10AS Note 2) ZQ-3-009-10AS Note 2 6 Exhaust block gasket Note 1) Refer to pages 102 and 103 for detailed description of "How to Order".

Table (1)

| Description | With PD port | Without PD port | |
|-------------|---------------|-----------------|--|
| End block L | ZQ1L-2-BSB-AS | ZQ1L-1-BSB-AS | |
| End block R | ZQ1R-2-BSB-AS | ZQ1R-1-BSB-AS | |

Note 2) 10 pcs. are included in one set

Working Procedure

Ejector assembly

Disassembly

Loosen and remove the clamp rod 1.

Assembly

4

- 1. Install the ejector body gasket for manifold (5) into the gasket groove of each ejector assembly ④. Install the exhaust block gasket 6 around the projected part.
- 2. Install the exhaust block gasket (6) around the projected part of the end block L 2
- 3. Install the ejector body gasket for manifold (5) into the gasket groove of the end block R ③.
- 4. Align the ejector assemblies (4), end block (L) (2), and end block (R) ③ using positioning pins (at the two "a" positions) and fasten with clamp rods (1) (2 pcs.) (with a tightening torque of 0.6 N·m ± 0.06 N·m).

How to Order Hexagon Socket Head Cap Screw




Note) 2 pcs. are included in one set.

Replacement of V Port Fittings (With vacuum pressure switch)

V port fittings are cassette style for easy replacement.

The fittings are blocked by a clip. Remove the clip with a flat blade screwdriver, etc. to replace the fittings.

When mounting the fittings, after inserting the fitting assembly until it stops, then put the clip into the prescribed position completely.

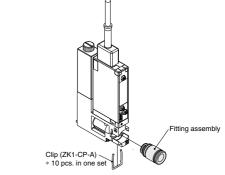


| Applicable tubing O.D. | Straight | Elbow |
|-----------------------------|----------------|----------------|
| Applicable tubing O.D. ø3.2 | VVQ1000-50A-C3 | VVQ1000-F1-LC3 |
| Applicable tubing O.D. ø4 | VVQ1000-50A-C4 | VVQ1000-F1-LC4 |
| Applicable tubing O.D. ø6 | VVQ1000-50A-C6 | - |
| M5 female thread | VVQ1000-50A-M5 | — |




ZQ Series Made to Order Specifications

Please contact SMC for detailed dimensions, specifications and lead times.



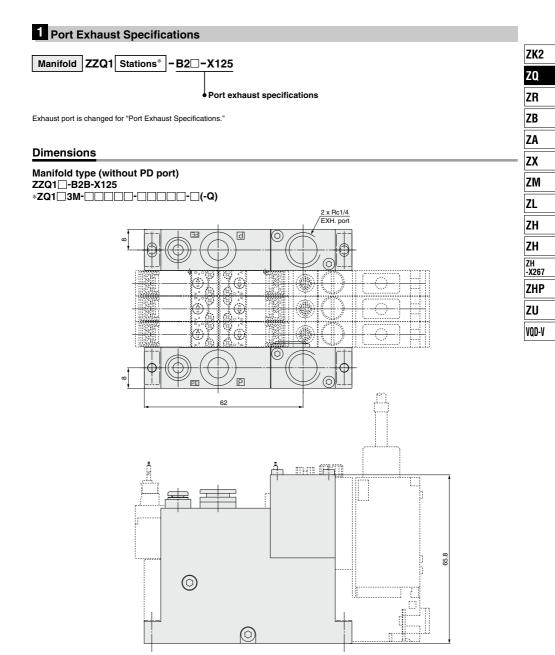

ZQ Series Made to Order Specifications Please contact SMC for detailed dimensions, specifications and lead times.

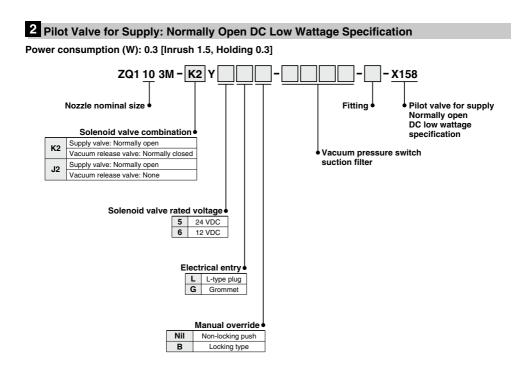

· Normally open supply valve with low wattage type pilot valve mounted

When the normally open specification is selected as a countermeasure for power failure, the temperature increase of the solenoid valve can be suppressed in the operation cycle where the vacuum suspension state (supply valve energizing) is longer than the vacuum generation state.

Dimensions: Same as standard type.

Space Saving Vacuum Pump System

How to Order



Vacuum Pump Unit

 $ZQ1000 \bigcup - \underbrace{K1}_{2} \underbrace{5}_{3} \underbrace{L}_{4} - \underbrace{EA}_{5} \underbrace{G}_{6} \underbrace{-33}_{7} \underbrace{-3}_{1} \underbrace{-1}_{1} \underbrace{-$

1 Body type

| U | For single unit |
|---|-----------------|
| Μ | For manifold |

② Solenoid valve combination (Refer to Table (1).)

| Symbol | Supply valve | Vacuum release valve |
|------------|--------------------------|------------------------|
| Symbol | Supply valve | vacuulli lelease valve |
| K1 | Normally closed | Normally closed |
| K2 Note 1) | Normally open | Normally closed |
| J1 | Normally closed | None |
| J2 Note 1) | Normally open | None |
| Q1 | Latching positive common | Normally closed |
| Q2 | Latching positive common | None |
| N1 | Latching negative common | Normally closed |
| N2 | Latching negative common | None |

The air in the adsorption section of this product is not released to the atmosphere at the vacuum suspension state. As for K1, K2, Q1 and N1, use the vacuum release valve when a workpice is detached.

Concerning J1, J2, Q2 and N2, devise the circuit for the vacuum release additionally when a workpiece is detached.

③ Pilot valve (Refer to Table (1).)

Nil Standard (DC: 1 W) Note 2)

- Y DC low wattage type (0.5 W) Note 2)
- Note 2) Avoid energizing the solenoid valve for long periods of time. (Refer to Specific Product Precautions 1; Caution on Design and Selection.)

(4) Solenoid valve rated voltage (Refer to Table (1).)

| | | CE-compliant |
|-----------|--------------------|--------------|
| 1 Note 3) | 100 VAC (50/60 Hz) | — |
| 2 Note 3) | 200 VAC (50/60 Hz) | - |
| 3 Note 3) | 110 VAC (50/60 Hz) | - |
| 4 Note 3) | 220 VAC (50/60 Hz) | - |
| 5 | 24 VDC | • |
| 6 | 12 VDC | • |

Note 3) CE-compliant products are not available for "1", "2", "3" and "4".

Solenoid valve Applicable power supply voltage (V) Combination Pilot valve combination no symbol symbol 100 AC 200 AC 110 AC 220 AC 24 DC 12 DC (1) **K1** Nil . • (2) **K1** γ _ (3) K2 Nil . • (4) Nil • .11 (5) γ . J1 (6) .12 . • Nil (7) Q1 Nil . • (8) Nil 02 (9) • N1 Nil . (10) N2 Nil . .

Table (1) Combination of Solenoid Valve, Pilot Valve and Rated Voltage

* Combinations ① to ⑩ in the above table are the only possible options.

Note 1) In cases when K2 or J2 (supply valve normally open) is selected for the solenoid valve combination, when vacuum is stopped for long periods of time (10 minutes or more), do not continue to energize the supply valve, and shut off the air supply.

Space Saving Vacuum Pump System **ZQ** Series

5 Electrical entry

| | L | L-type plug connector, with 0.3 m lead wire, with light/surge voltage suppressor | |
|---|----|---|--|
| L | .0 | L-type plug connector, without connector, with light/surge voltage suppressor | |
| | G | Grommet, with 0.3 m lead wire (Latching/AC type: Not applicable) | |

6 Manual override Note 4)

| ocking type (Q1/Q2/N1/N2: Not applicable) ching type supply valve: Available in "Nil" only. his case, the supply valve and release valve come |
|---|
| ching type supply valve: Available in "Nil" only. his case, the supply valve and release valve come |
| n a push-locking type. |
| |
| |

⑦ Vacuum pressure switch suction filter Note 5)

| EA | 0 to -101 kPa/NPN open collector 2 outputs, with suction filter |
|----|---|
| EB | 0 to -101 kPa/PNP open collector 2 outputs, with suction filter |
| EC | 0 to -101 kPa/NPN open collector 1 output + analog voltage, with suction filter |
| EE | 0 to -101 kPa/PNP open collector 1 output + analog voltage, with suction filter |
| FA | 100 to -100 kPa/NPN open collector 2 outputs, with suction filter |
| FB | 100 to -100 kPa/PNP open collector 2 outputs, with suction filter |
| FC | 100 to -100 kPa/NPN open collector 1 output + analog voltage, with suction filter |
| FE | 100 to -100 kPa/PNP open collector 1 output + analog voltage, with suction filter |
| F | Suction filter only |

Note 5) The filter included in this product is of an simple type, and will become clogged quickly in environments with high quantities of dust or particulates. Please make additional use of an air suction filter of the ZFA, ZFB or ZFC series.

∆Warning

The filter case of this suction filter is made of nylon. Contact with alcohol or similar chemicals may cause it to be damaged. Also, do not use the filter when these chemicals are present in the atmosphere.

10 Fitting (P port) Note 8)

| Symbol | Applicable tubing O.D. |
|--------|----------------------------|
| 0 | Without fitting (M5 x 0.8) |
| 1 | ø3.2 (Straight) |
| 2 | ø4 (Straight) |
| 3 | ø6 (Straight) |
| 4 | ø3.2 (Elbow) |
| 5 | ø4 (Elbow) |

12 Bracket A

| Nil | With bracket A | |
|-----|-------------------|--------|
| Ν | Without bracket A | Note 9 |

13 CE-compliant

| Nil | _ |
|-----|--------------|
| Q | CE-compliant |

Note) CE-compliant: For DC only.

1 Fitting (PS / PV port) Note 8)

| Symbol | Applicable tubing O.D. | Object spec. |
|--------|----------------------------|--------------|
| Nil | Without port | Manifold |
| 0 | Without fitting (M5 x 0.8) | |
| 2 | ø4 (Straight) | Single unit |
| 3 | ø6 (Straight) | Single unit |
| 5 | ø4 (Elbow) | 1 |

Note 8) For filter only (Without vacuum pressure switch) Single unit: When neither V port fitting nor PS/PV port fitting are needed, enter nothing or -00 in the dotted line "How to Order". Manifold specifications: When the V port fitting is not needed, enter nothing or -0 in the dotted line "How to Order".

Note 9) Only applicable to the body type U.

8 Vacuum pressure switch unit specifications

| | | - F |
|-----|--|-----|
| Nil | With unit switching function Note 6) | |
| М | Fixed SI unit Note 7) | l |
| Р | With unit switching function Note 6) (Initial value psi) | |
| | Under the New Measurement Law, sales of switches with the unit switching function are not allowed for use in Japan. Fixed unit: kPa | |
| | cuum pressure switch d wire specifications | [|
| Nil | Without connector | |
| G | Lead wire with connector (Lead wire length 2 m) | [|

With connector cover

| ZK2 |
|-------------|
| ZQ |
| ZR |
| ZB |
| ZA |
| ZX |
| ZM |
| ZL |
| ZH |
| ZH |
| ZH -X267 |
| ZHP |
| ZU |
| |

VQD-V

| How to Order | | | | | | | | | | |
|--|---|--|--|--|--|--|---|--|---|---------------|
| | Man | ifo | old | | ZZ | Q1 | 0 | 8 – | |] o |
| Number of stations • 01 1 station 02 2 stations 08 8 stations Vacuum pressure • supply port (PV port) Port location (Refer to Table (1).) L Left side R Right side | | | | | | | | | | |
| Table (| 1) Air Pr | ress | sure | a Sup | | L R | Le Rig | ft side ht side | | e Manifold |
| · · · · | 1) Air Pr | | SUR | e Sup | | L R | Le Rig | ft side ht side | | e Manifold |
| Table (| Port location | Mar | | e Sup | ply F | L R | Le Rig OCATI | ft side ht side on or | | |
| · · · · | Port location L (Left si | Mar ide) | hifold | PS — | ply F | L R Port L | Le Rig | ft side ht side on o i Right | n th | |
| PD port | Port location L (Left si R (Right | Mar ide) | hifold | | Ply F | L R Port L | Le Rig OCATI | ft side ht side on o i Right | n th | |
| PD port | Port location L (Left si R (Right L (Left si | Mar ide) side) ide) |) | PS — | Ply F | L R Port L | Le Rig OCATI | ft side ht side on o i Right | n th | |
| PD port B C | Port location L (Left si R (Right L (Left si R (Right | Mar ide) side) ide) side) |) | PS | PV PV O | Port L | Le Rig .ocati PS ● ^{Note)} — | ft side ht side On OI Right PV 0 | n the | |
| PD port B C Note) The p side Relea * PS: Pilot | Port location L (Left si R (Right L (Left si | Mar ide) ide) ide) ch po n port is cor | nifold)) rt is s | PS Note) Note) hown as hy suppli | ply F Left PV • right ar | Port L PD • • • • • • • • • • • • • • • • | Le Rig OCATIO PS Note) — des viewe port. ly port, P | ft side ht side ON OI Right PV O O C Rele | PD |) |
| PD port B C Note) The p side Relea * PS: Pilot | Port location L (Left si R (Right L (Left si R (Right cosition of eau of the vacuum ase pressure presure supp | Mar ide) ide) ide) ide) is cor is cor ily por | nifold) rt is s mmor t, PV: | PS Note) Note) Note) Note) Note) Note) Note) R | ply F Left PV I right ar ied from pressu | Port L PD | Le Rig OCATIO PS Note) | ht side ht side ON OI Right PV • • • • • • • • • • • • • • • • • • | PD PD PD PD PD PD PD PD PD PD PD PD PD P | ont (PD port) |
| PD port B C Note) The p side Relea * PS: Pilot | Port location L (Left si R (Right L (Left si R (Right cosition of eau of the vacuum ase pressure presure supp | Mar ide) ide) ide) ch po n port is cor | nifold) rt is s mmor t, PV: | PS Note) Note) Note) Note) Note) Note) R R ne (Rele | ply F Left PV I right ar ied from pressu | Port L PD | Le Rig OCATI PS Note) | It side ht side ON OI Right PV ed from D: Rele Supp lied from | PD PD PD PD PD PD PD PD PD PD PD PD PD P |) |


Specifications

Common

| Switching | method for vacuum/release valve | Piloted |
|-------------------|---|---|
| Cv factor | | 0.11 |
| | Vacuum pressure supply port (PV) | 0 to -101.3 kPa |
| Supply | Pilot/Pressure port (PS) | 0.3 to 0.5 MPa (Normally open: 0.3 to 0.45 MPa) |
| pressure range | Supply pressure port for vacuum release (PD) | 0.3 to 0.5 MPa (Normally open: 0.3 to 0.45 MPa), and also PD pressure PS pressure |
| Operating | temperature range | 5 to 50°C |
| Fluid | | Air |

Supply Valve / Vacuum Release Valve

Manifold Ordering Example

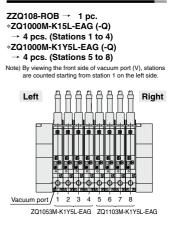

Weight

| _ | 0 | | | | |
|--------|---|-------|--|--|--|
| Single | With suction filter Note 1) | 95 g | | | |
| unit | With vacuum pressure switch and suction filter Note 2) | 109 g | | | |
| | End plate assembly for manifold | | | | |
| Note 1 |) Including a 0.3 m connector for supply valve and vacu | um | | | |

release valve. Note 2) Including a 0.3 m connector for supply valve and vacuum

release valve and a 2 m connector for vacuum pressure switch. © Calculation of weight for the manifold type

(Single unit weight) x (Number of stations) + (Weight of end plate assembly for manifold)

Example) Vacuum pressure switch + 8 stations with suction filter

109 g x 8 + 122 g = 994 g

| | Туре | Normall | y closed | Latching type | Normally open | |
|------------------|---|------------------------------------|---|---|--|--|
| Item | | Standard (1 W) | Low wattage type (0.5 W) | Latening type | | |
| | to "How to Order" for d valves on page 122.) | VQ110-□ | VQ110Y- | VQ110 [⊾] -□ | ZQ1-VQ120-□ | |
| Manual overr | ride | Non-locking push type / | Locking type (Tool type) | Push-locking type Non-locking push ty Locking type (Tool type) | | |
| Rated coil vo | ltage | 12, 24 VDC, 100, 110, 200, 220 VAC | 12, 24 VDC | 12, 24 VDC, 100, 110, 200, 220 VAC | 12, 24 VDC | |
| | DC | 1 W | 0.5 W | 1 W | | |
| Power | 100 VAC | 0.5 VA (5 mA) | — | 0.6 VA (6 mA) | — | |
| consumption | | 0.55 VA (5 mA) | — | 0.65 VA (5.9 mA) | — | |
| (current value | e) 200 VAC | 1.0 VA (5 mA) | — | 1.2 VA (6 mA) | — | |
| | 220 VAC | 1.1 VA (5 mA) | — | 1.3 VA (5.9 mA) | — | |
| Electrical entry | | | nmet onnector ght/surge voltage suppressor) | L plug connector (with light/surge voltage suppressor) | Grommet Light/Surge voltage suppressor (with light/surge voltage suppressor) | |



Specifications


Vacuum Pressure Switch

| | N | lodel | ZQ1-ZSE (ZSE10) | ZQ1-ZSF (ZSE10F) |
|------------------------------|---|---------------------------------------|--|---|
| Rated press | ure range | | 0 to -101 kPa -100 to 100 kPa | |
| Set pressure | Set pressure range/Display pressure range | | 10 to -105 kPa | -105 to 105 kPa |
| Withstand p | ressure | | 500 | kPa |
| Minimum se | tting unit | | 0.1 | kPa |
| Power supp | ly voltage | | 12 to 24 VDC ±10%, Ripple (p-p) 10% or l | ess (with power supply polarity protection) |
| Current con | sumption | | 40 mA | or less |
| Switch outp | ut | | NPN or PNP open collect | or: 2 outputs (selectable) |
| | Maximum | load current | 80 | mA |
| | Maximum | applied voltage | 28 V (with N | IPN output) |
| | Residual | voltage | 2 V or less (with loa | d current of 80 mA) |
| | Response | e time | 2.5 ms or less (Response time selections with anti-c | hattering function: 20, 100, 500, 1000 and 2000 ms) |
| | Short circ | uit protection | With short-cire | cuit protection |
| Repeatabilit | у | | ±0.2% F.S. ±1 digit | |
| Hysteresis | Hysteresis mode | | Variable (0 or above) Note 1) | |
| | window | comparator mode | 1 to 5 V +2.5% F.S. | |
| Analog | Voltage | Output voltage (rated pressure range) | ±1% F.S | |
| output | output | Output impedance | | |
| Diamles ave | | Output Impedance | Approx | |
| Display syst | | | 3 1/2-digit, 7 segment LE ±2% F.S. ±1 digit (at ambie | |
| Display accu Operation in | | | ±2% F.S. ±1 digit (at arrible Lights when ON, OUT | · · · · · · |
| Operation in | Enclosur | | Lights when ON, OOT | |
| Environ- | | e humidity range | Operating/Stored: 35 to 85% | |
| mental | Withstan | | 1000 VAC for 1 min, betwee | , , , , , , , , , , , , , , , , , , , |
| resistance | | n resistance | 50 MΩ or more (500 VDC measured via me | |
| Temperature | | | ±2% F.S. (at 25°C of ambient tempe | , |
| remperature | e unarduler | 01100 | ±2% F.S. (at 25°C of ambient tempe Oil-resistant | · / |
| Lead wires | | | Oil-resistant Cross section: 0.15 mm ² (AWG26) | |

Note 1) If the applied voltage fluctuates around the set-value, the hysteresis must be set to a value more than the fluctuating width, otherwise chattering will occur. Note 2) For others, refer to ejector specifications on page 120.

SMC

Construction

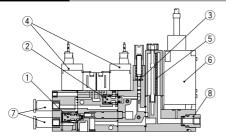

Component Parts

| No. | Description | Material |
|-----|--|----------|
| 1 | Poppet valve assembly for supply valve | - |


| 2 | Poppet valve assembly for vacuum release valve | — |
|---|--|---|
| | | |

3 Vacuum release flow adjusting needle Stainless steel

Replacement Parts

| No. | Description | Material | Part no. |
|-----|------------------------|------------|--------------------|
| 4 | Solenoid valve | — | Refer to page 122. |
| 5 | Filter element | PVA sponge | XT534-5-001-AS |
| 6 | Vacuum pressure switch | - | Refer to page 122. |
| 7 | Fitting | _ | _ |
| 8 | Fitting | - | _ |

ZU VQD-V

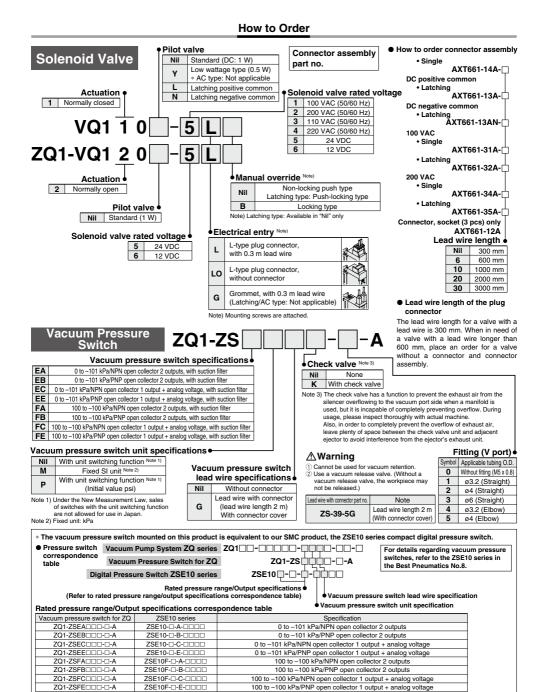



ZR

ZB

ZA

ZX

ΖM

ZL

ZH


-X267

ZHP


ZU

VQD-V

Dimensions

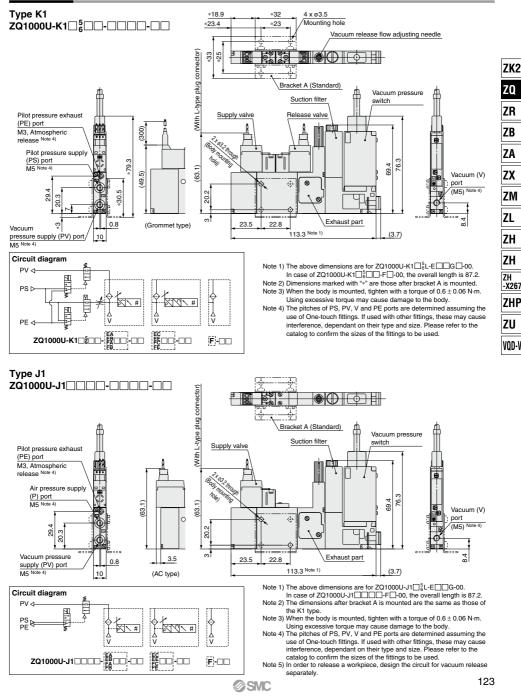

Dimensions

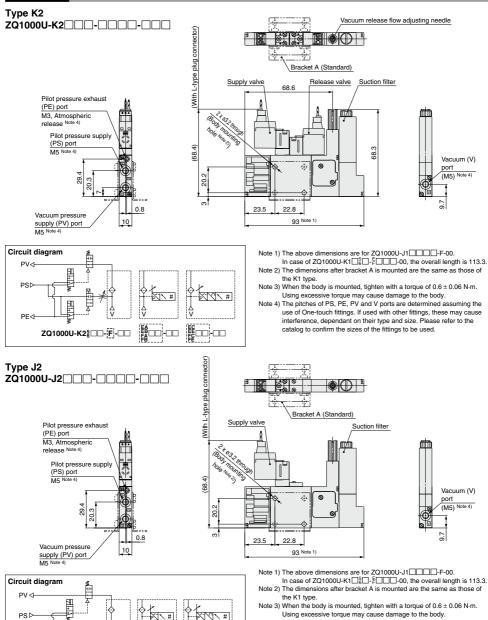

- Note 4) The pitches of PS, PE, PV and V ports are determined assuming the use of One-touch fittings. If used with other fittings, these may cause interference, dependant on their type and size. Please refer to the catalog to confirm the sizes of the fittings to be used.
- Note 5) In order to release a workpiece, design the circuit for vacuum release separately.

PE⊲


ZQ1000U-J2600-F-00



-00


Space Saving Vacuum Pump System **ZQ** Series


Dimensions

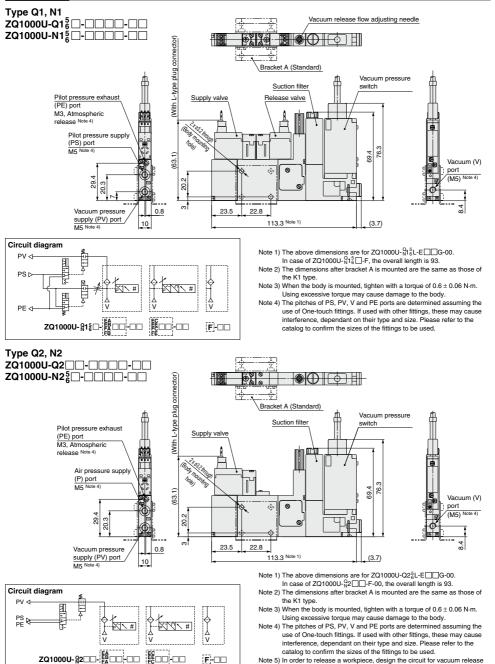

SMC


Note 5) In order to release a workpiece, design the circuit for vacuum release separately.

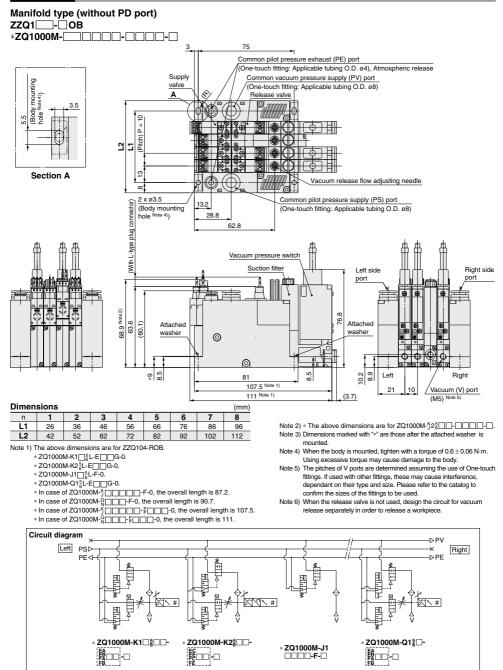

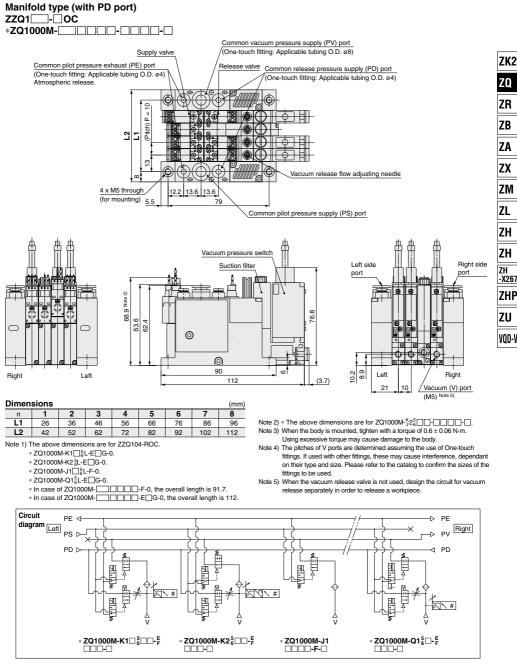

Fittings / Fitting type filter dimensions after installation

V port

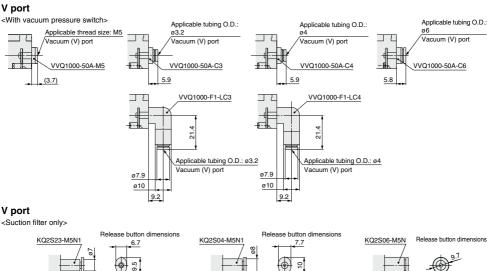

14.6

10

Release button dimensions

KQ2L04-M5N1

ø8.2 11.8 ŝ

11.3 36

14.5


Release button dimensions

5


PS/PV port

KQ2L23-M5N1 ø7.'



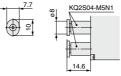

Release button dimensions

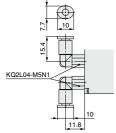


KQ2S06-M5N Release button dimensions 9¹ 14.6

14.6



Manifold Exploded View

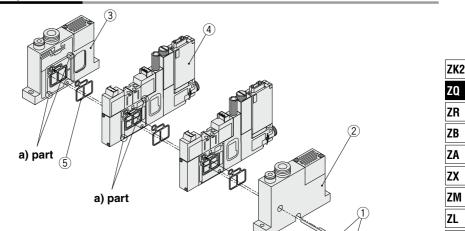

Component Parts

| No. | Description | Part no. |
|-----|----------------------------------|---|
| 1 | Hexagon socket head cap screw | Refer to "How to Order" below. |
| 2 | End block L | Refer to "Table (1)". |
| 3 | End block R | Refer to "Table (2)" (including 1 pc. of (5)). |
| 4 | Vacuum pump system assembly | ZQ1000M(-Q) ^{Note 1)} (including 1 pc. of (5)). |
| 5 | Ejector body gasket for manifold | ZQ-3-005-10AS Note 2) |

Note 1) Refer to pages 118 and 119 for detailed description of "How to Order". Note 2) 10 pcs. are included in one set.

| | | | 711 |
|---|-----------------|--------------|-------------|
| PD port specification PV port location when the V port is viewed in front | Without PD port | With PD port | ZH |
| Right side | ZQ1L-0-SOB | ZQ1L-0-SOC | ZH -X267 |
| Left side | ZQ1L-0-VOB | ZQ1L-0-VOC | -7201 |
| Table (2) | | | ZHP |
| PD port specification PV port location when the V port is viewed in front | Without PD port | With PD port | ZU |
| Right side | ZQ1R-0-V0B | ZQ1R-0-V0C | |
| Left side | ZQ1R-0-S0B | ZQ1R-0-S0C | VOD-V |
| | | | VUD-V |

Working Procedure


Disassembly

Loosen and remove the clamp rod 1.

Assembly

- 1. Install the ejector body gasket for manifold (5) into the gasket groove of each vacuum pump system assembly **(4)**.
- 2. Install the ejector body gasket for manifold (5) into the gasket groove of the end block R 2.
- 3. Align the ejector assemblies (4), end block (L) (2), and end block (R) (3) using positioning pins (at the two "a" positions) and fasten with clamp rods (1) (2 pcs.) (with a tightening torque of 0.6 N·m ± 0.06 N·m).

How to Order Hexagon Socket Head Cap Screw

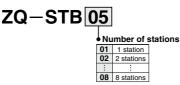

Note) 2 pcs. are included in one set.


Replacement of V Port Fittings (With vacuum pressure switch)

V port fittings are cassette style for easy replacement.

Table (1)

The fittings are blocked by a clip. Remove the clip with a flat blade screwdriver, etc. to replace the fittings.

When mounting the fittings, after inserting the fitting assembly until it stops, then put the clip into the prescribed position completely.

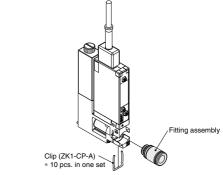

| Applicable tubing O.D. | Straight | Elbow |
|-----------------------------|----------------|----------------|
| Applicable tubing O.D. ø3.2 | VVQ1000-50A-C3 | VVQ1000-F1-LC3 |
| Applicable tubing O.D. ø4 | VVQ1000-50A-C4 | VVQ1000-F1-LC4 |
| Applicable tubing O.D. ø6 | VVQ1000-50A-C6 | — |
| M5 female thread | VVQ1000-50A-M5 | - |

ZH



ZQ Series Specific Product Precautions 1

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 49 to 51 for Vacuum Equipment Precautions.

Design and Selection

▲Warning

1. Avoid energizing the solenoid valve for long periods of time.

If a solenoid valve is energized for a long period of time, the coil will get hot and the performance may be reduced. Additionally, the peripheral equipment in close proximity may also be badly affected. Use a low wattage solenoid valve when the solenoid valve is energized continuously or when the duration of the energization is longer than the non-energized period each day. Periods of energization can be shortened by using a normally opened or latching type solenoid valve. But, do not energize the coil on both A and B sides simultaneously when using the latching type.

Continuous energization of the solenoid valve should be less than 10 minutes in duration and the energization period should be shorter than the non-energized period. Take measures for any heat radiation so that the temperature is within the range of solenoid valve specifications when the solenoid valve is mounted on the control panel. Please pay special attention to any temperature increases when a manifold type with 3 stations or more is energized continuously or when three individual units are placed in close proximity.

2. Use the vacuum equipment within the operating supply pressure range.

When the operating with a lower supply pressure, the vacuum performance will be reduced and the poppet valve will cause malfunction.

Never use the vacuum equipment more than the operating supply pressure range as this may cause damage to the product resulting in potentially dangerous operation.

3. Suspension of operation for long periods of time

Please use caution — as detailed below — when the vacuum equipment is turned off for periods in excess of 6 hours.

Be sure to turn off the pressure supply to the vacuum equipment.

Please observe this precautions as the supply pressure will be applied for a extra period of time due to the line pressure increase and may result in damage to the vacuum equipment.

• Be sure to turn off the power supply to the solenoid valve and the pressure switch.

Please observe this precautions as any heat generated due to the length of energization time may seriously affect the vacuum equipment and peripheral equipment resulting in potentially dangerous operation.

4. Check valve

The check valve has a function to prevent the exhaust air from the silencer overflowing to the vacuum port side when a manifold is used. However, depending on usage conditions, it does not always suppress air overflow to the desired extent. During usage, please inspect thoroughly with actual machine. Also, no guarantee is therefore provided when used for any other purposes. It is especially dangerous if used for the purpose of workpiece drop prevention in the case of operator blackout. Therefore, please take additional measures for providing drop prevention, such as providing a guide.

5. Exhaust port (EXH port) on the vacuum ejector

Please check the exhaust port (EXH port) on the vacuum ejector, so that any exhaust resistance will not be increased due to insulating materials or restrictions in the piping. The exhaust resistance may reduce the ejector's performance. Additionally, never use this product in an application where the exhaust port is blocked when detaching a workpiece. This misuse may result in possible damage to the product.

▲Warning

6. Vacuum release flow adjustment needle

Adjust the vacuum release flow adjustment needle from the fully closed to the open state by 1/8 to 1/4 turns to detach a workpiece completely during the ON time of a release valve. Do not supply compressed air while the vacuum release flow adjustment needle is adjusted. Securely lock it with a lock nut after adjustment.

7. How to use the latching type solenoid valve

Our Latching type solenoid are fitted with a self-detaining mechanism. Its construction features an armature inside the solenoid which is set or reset using spontaneous energization. (20 ms or greater) Therefore, continuous energization is not required.

How to Use the Latching Type Plug Connector

Wiring specifications


 Wiring should be connected as shown below. Connect with the power supply respectively.

DC positive common



DC negative common



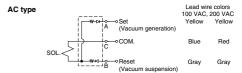

Special care must be taken for the latching type.

- Avoid using this product with a circuit which electrifies both the set and reset signals simultaneously.
- 2. The minimum energization time required for self-detaining is 20 ms.
- Please contact us when using this product in locations where there are vibration levels of 30 m/s² or above or highly magnetic fields. No problems arise in normal usage or locations.
- 4. This valve retains the reset position (Flow path: A → R) at the time of shipment. However, it may alter to the set position during transportation or due to vibration when mounting the valve. Therefore, confirm the home position either manually or with power supply prior to use.

Mounting

A Warning

1. Screw tightening torque for mounting the body should be performed with 0.6 ± 0.06 N·m. Excessive torque may damage the product.






∆Warning


ZQ Series **Specific Product Precautions 2**

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 49 to 51 for Vacuum Equipment Precautions.


Vacuum Switch

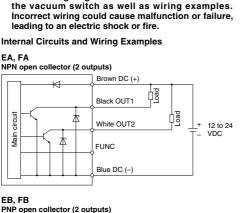

1. The following diagram shows the internal circuits of

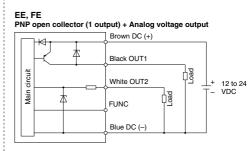


* The FUNC terminal is connected when using the copy function. (Refer to the operation manual of the ZSE10 series.)

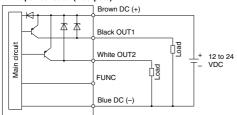

EC, FC



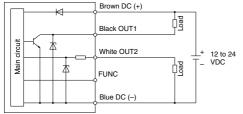

ZK2 ZQ ZR ZB ZA ZX ZM ZL ZH ZH ZH -X267 ZHP ZU VOD-V